


**Owner's Manual supplement
for EyeSight system**

FORESTER

e-BOXER

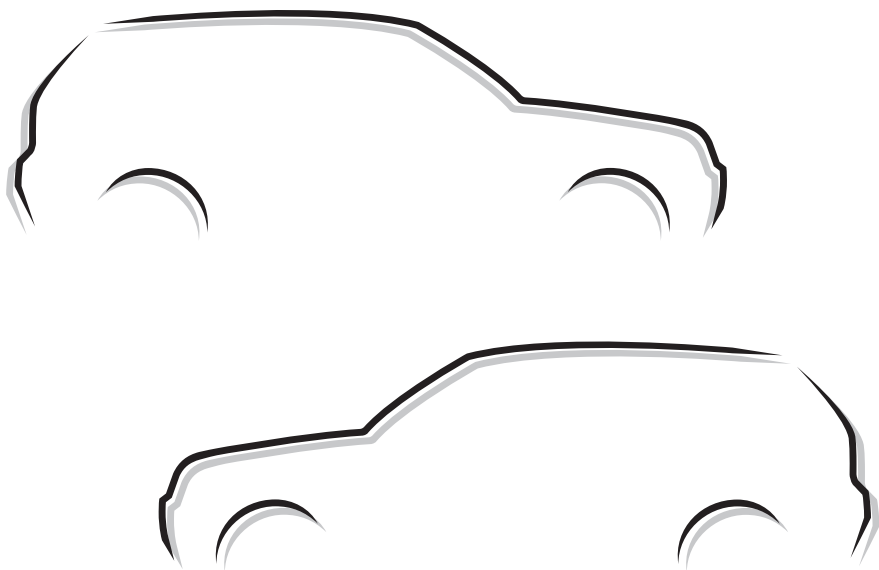

SUBARU

Foreword

Congratulations on choosing a SUBARU vehicle equipped with EyeSight™. EyeSight incorporates the latest driver assistance features available from SUBARU, including such features as Adaptive Cruise Control, a Lead Vehicle Start Alert and a Lane Departure and Lane Sway Warning, all of which are designed to assist the driver in making decisions and increase driver comfort and convenience. Initially, the operation and use of the various EyeSight features may be unfamiliar to you. That is why we urge you to read this manual carefully before using EyeSight. We also recommend that you first take the time to test EyeSight in order to experience its features for yourself so that you can become familiar with their operation.

Please keep in mind that it is the responsibility of drivers to operate their vehicles safely at all times. Drivers should always remain alert and should never become complacent while operating their vehicles because of the presence of EyeSight. EyeSight is never a substitute for active driver involvement and it may not operate optimally under all driving conditions.

This booklet is a supplement to the Owner's Manual for your SUBARU vehicle and contains a detailed description of EyeSight. It should be read in conjunction with your Owner's Manual so that you will gain a thorough understanding of the proper operation of your vehicle.

The information, specifications and illustrations found in this booklet are those in effect at the time of printing. SUBARU CORPORATION reserves the right to change specifications and designs at any time without prior notice and without incurring any obligation to make the same or similar changes on vehicles previously sold.

Please keep this booklet together with your Owner's Manual and leave it in the vehicle at the time of resale. The next owner will need the information it contains.

NOTE: "SUBARU" means SUBARU CORPORATION and its affiliates and subsidiaries.

NOTE: "SUBARU dealer" means an authorized SUBARU dealer and/or repairer.

SUBARU CORPORATION, TOKYO, JAPAN

"SUBARU" and the six-star cluster design are registered trademarks of SUBARU CORPORATION.

© Copyright 2021 SUBARU CORPORATION

EyeSight

- About EyeSight 4
- Pre-Collision Braking System..... 34
- Advanced Adaptive Cruise Control 66
- Manual Speed Limiter (if equipped) 111
- Lane Departure Prevention Function 120
- Emergency Lane Keep Assist (if equipped) 132
- Pre-Collision Throttle Management..... 145
- Lane Departure Warning 152
- Lane Sway Warning 158
- Lead Vehicle Start Alert 163
- EyeSight Assist Monitor (if equipped) 165
- Conventional Cruise Control 167
- List of alert/notification sounds..... 182
- EyeSight malfunction and temporary stop 184
- Open Source Software information 188
- Customizing functions 189
- Message screen list 194
- Troubleshooting 199

About EyeSight

EyeSight is a driving support system that uses a range of functions to assist the driver in making decisions in order to provide for more safe and comfortable driving and to reduce driver fatigue. Making use of images created by the stereo camera, EyeSight detects the vehicle in front, obstacles, traffic lanes and other items. For models with SRVD, EyeSight also uses radar sensors to detect vehicles close to the rear of your vehicle.



WARNING

Drivers are responsible for driving safely. Always comply with all traffic rules and regulations regardless of the fact that your vehicle is equipped with EyeSight. Always maintain a safe following distance between your vehicle and the vehicle in front of you, pay attention to your surroundings and driving conditions, and take necessary actions in order to maintain a safe following distance.

Never attempt to drive relying on EyeSight alone.

EyeSight is intended to assist the driver in making decisions in order to reduce the risk of accidents or damage and lessen the burden on the driver.

When an EyeSight warning is activated, pay attention to what is in front of you and to your surroundings, and take necessary actions.

This system is not designed to support driving in poor visibility or in extreme weather conditions, or to protect against careless driving when the driver is not paying complete attention to the road ahead. It also cannot prevent collisions from occurring in all driving conditions.

When an alert/notification, Pre-Collision Braking System, Autonomous Emergency Steering or other system activates, the driver should check the area around the vehicle and then take appropriate action.

There are limits to the EyeSight recognition performance and control performance. Be sure to read the instructions for each function before using the system, and always use it properly. Improper use may lead to failure of control performance, which could cause an accident.

Refer to the following pages for each function:

- For Pre-Collision Braking System, refer to page 34.
- For Adaptive Cruise Control, refer to page 66.
- For Lane Centering Function, refer to page 95.
- For Manual Speed Limiter, refer to page 111.
- For Lane Departure Prevention Function, refer to page 120.
- For Emergency Lane Keep Assist, refer to page 132.
- For Pre-Collision Throttle Management, refer to page 145.
- For Lane Departure Warning, refer to page 152.
- For Lane Sway Warning, refer to page 158.
- For Lead Vehicle Start Alert, refer to page 163.
- For Conventional Cruise Control, refer to page 167.

For left-hand drive:

In left-hand drive vehicles, EyeSight is configured for driving on the right-hand side of the road. However, it can be reconfigured by changing the Driving Lane Customize setting for driving on the left-hand side.*

⇒ **Page 193**

If the setting for the traffic lane (driving side of the road) does not match the traffic lane, full EyeSight performance may not be available.

***: Characteristics and settings that are affected by specific differences between right-hand drive and left-hand drive vehicles cannot be changed.**

For right-hand drive:

In right-hand drive vehicles, EyeSight is configured for driving on the left-hand side of the road. However, it can be reconfigured by changing the Driving Lane Customize setting for driving on the right-hand side.*

⇒ **Page 193**

If the setting for the traffic lane (driving side of the road) does not match the traffic lane, full EyeSight performance may not be available.

***: Characteristics and settings that are affected by specific differences between right-hand drive and left-hand drive vehicles cannot be changed.**

Continued on next page ⇒

⇒ Continued from previous page


- The system may not operate correctly under the conditions listed below. When these conditions occur, turn off Pre-Collision Braking System. Also, do not use Adaptive Cruise Control, Lane Centering Function, Manual Speed Limiter (if equipped), Lane Departure Prevention Function, Emergency Lane Keep Assist (if equipped) or Conventional Cruise Control.
 - The tire pressure is not correct.*¹
 - The temporary spare tire is installed.*¹
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹
 - Tires that are the wrong size are installed.*¹
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including a genuine SUBARU suspension that has been modified).
 - An object that obstructs the stereo camera's view is installed on the vehicle.
 - Tire chains are installed.
 - The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
 - The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
 - The lights including headlights and fog lights have been modified.
 - Vehicle operation has become unstable due to an accident or malfunction.
 - The brake system warning light (red) is illuminated.*²
 - The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
 - The maximum number of occupants is exceeded.
 - The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.*³
- The system will not operate correctly in the following conditions. Do not use Adaptive Cruise Control, Lane Centering Function, Manual Speed Limiter (if equipped), Lane Departure Prevention Function, Emergency Lane Keep Assist (if equipped) or Conventional Cruise Control.
 - The wheels are out of balance (e.g., the balance weight is removed or misaligned).*¹
 - The wheels are out of alignment.*¹
 - A trailer or another vehicle, etc. is being towed.

- The system may not operate properly under the following conditions. Do not use Lane Centering Function, Lane Departure Prevention Function or Emergency Lane Keep Assist (if equipped).
 - There is an abnormal vibration in the steering wheel or the steering wheel is heavier than usual.
 - The steering wheel has been replaced with parts other than genuine SUBARU parts.
- *1: The wheels and tires have functions that are critically important. Be sure to use the correct ones. For details, refer to the Owner's Manual for your vehicle.
- *2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.
- *3: For details about the combination meter, refer to the Owner's Manual for your vehicle.



- The characteristics of the stereo camera are similar to those of human eyes. For this reason, conditions that make it difficult for the driver to see in the forward direction have the same effect on the stereo camera. They also make it difficult for the system to detect vehicles, obstacles, and traffic lanes.
- Detection by the EyeSight system is limited to objects that are within the range of the stereo camera's field of view. Also, after an object enters the range of the camera's field of view, it may take some time for the system to detect it as a target obstacle and to warn the driver.

Example of the range of the stereo camera's field of view

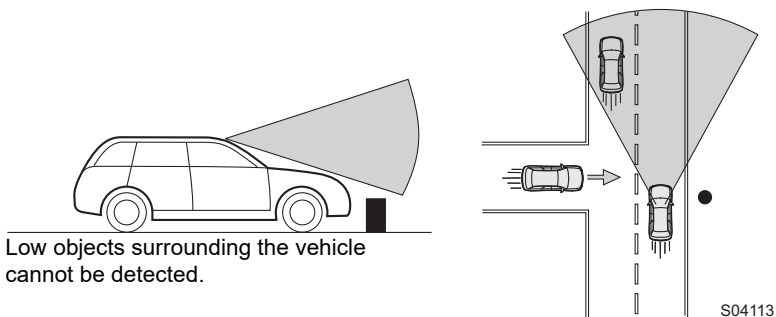

Continued on next page ⇒

⇒ Continued from previous page

- Under the conditions listed below, it will become more difficult for the system to detect the vehicle in front, motorcycles, cyclists, pedestrians and obstacles on the road, and lane markers. Also, EyeSight may temporarily stop operating. However, the temporary stop will be canceled once these conditions have improved and the vehicle is driven for a short period of time.
 - Bad weather (for example heavy rain, a blizzard or thick fog). In particular, the system is more likely to temporarily stop operating when there is an oil film adhering to the windshield, a glass coating has been applied, or poorly performing wipers are used.
 - Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
 - The windshield washer is in use.
 - Raindrops, water drops, or dirt on the windshield are not wiped off sufficiently.
 - The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
 - The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
 - Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
 - The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).
 - Through the entrance or exit of a tunnel
 - The rear aspect of the vehicle in front is low, small or irregular (for example a low bed trailer, etc.).
 - The obstacle is a fence, a wall or a shutter, etc. with a uniform pattern (a striped pattern, brick, etc.) or with no pattern in front.
 - The obstacle is a wall or door made of glass or a mirror in front.
 - Driving at night or in a tunnel when there is a vehicle in front that does not have its taillights on
 - Driving through a banner or flag, low branches on a tree or thick/tall vegetation

- On steep uphill or downhill grades
- It is completely dark and no objects are detected.
- The area around the vehicle has a uniform color (such as when completely covered in snow, etc.).
- Accurate detection is not possible due to reflections in the windshield.
- Under the conditions listed below, EyeSight may temporarily stop operating. If this occurs, EyeSight will resume operating when the conditions improve.
 - The temperature inside the vehicle is high, such as after the vehicle was left in bright sunshine, or the temperature inside the vehicle is low, such as after the vehicle was left in an extremely cold environment.
 - Immediately after the e-BOXER system starts
- Under the conditions listed below, it is difficult to recognize vehicles in front, motorcycles, cyclists, pedestrians, obstacles on the road, traffic lanes, etc. Also, the EyeSight system may temporarily stop operating. If the EyeSight system repeatedly stops operating several times, contact a SUBARU dealer and have the system inspected.
 - There is dirt or dust around the stereo camera lenses.
 - The stereo camera has become misaligned due to a strong impact.
 - The vehicle has not been driven for a long time (1 year or more, for example).
- When there is a malfunction in the EyeSight system, turn off Pre-Collision Braking System (⇒ page 64), Emergency Lane Keep Assist (if equipped) (⇒ page 143) and Lane Departure Warning (⇒ page 156), and stop using Adaptive Cruise Control, Lane Centering Function, Manual Speed Limiter (if equipped), Lane Departure Prevention Function and Conventional Cruise Control. Contact a SUBARU dealer and have the system inspected.
- When the Vehicle Dynamics Control warning light is illuminated, Pre-Collision Braking System may not operate properly. If the warning light is illuminated, turn off Pre-Collision Braking System. Also, do not use Adaptive Cruise Control, Manual Speed Limiter (if equipped) or Conventional Cruise Control.




NOTE

EyeSight records and stores the following data when Pre-Collision Braking System activates, when the “Obstacle Detected” warning activates, and when SRS airbags have been deployed. It does not record conversations or other audio data.

- Stereo camera image data
 - Distance from the vehicle in front
 - Vehicle speed
 - Steering wheel turning angle
 - Lateral movement with regards to the direction of travel
 - Accelerator pedal operation status
 - Brake pedal operation status
 - Select lever position
 - Odometer reading
 - Data related to ABS, Vehicle Dynamics Control and Traction Control Function
- SUBARU and third parties contracted by SUBARU may acquire and use the recorded data for the purpose of vehicle research and development. SUBARU and third parties contracted by SUBARU will not disclose or provide the acquired data to any other third party except under the following conditions.
- The vehicle owner has given his/her consent.
 - The disclosure/provision is based on a court order or other legally enforceable request.
 - Data that has been modified so that the user and vehicle cannot be identified is provided to a research institution for statistical processing or similar purposes.

Handling of the Stereo Camera

The stereo camera is located on the windshield.

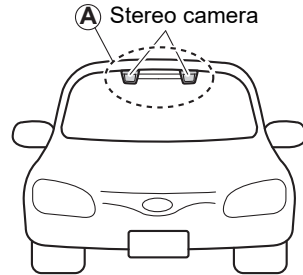

S01107




CAUTION

- The stereo camera monitors and detects smears or blurs on the front of the camera. However, detection is not 100% accurate. Under certain conditions, the function may fail to detect smears or blurs on the front of the stereo camera accurately. In addition, this function may not detect that there is snow or ice on the windshield close to the stereo camera. In such conditions, be sure to keep the windshield clean at all times (indicated by (A)). Otherwise the system may not operate correctly. When this function detects that the front of the stereo camera is smeared or blurred, no EyeSight functions can be activated except for Manual Speed Limiter (if equipped) or Conventional Cruise Control.
- If the area around the camera lenses is dirty, do not try to clean the windshield yourself. Contact a SUBARU dealer to have the vehicle inspected.

Continued on next page ⇒


⇒ Continued from previous page

- The stereo camera lenses are precision components. Always observe the following precautions especially when handling the area around the camera lenses.
 - Never touch the lenses of the stereo camera. Also, do not try to clean the lenses. If you do accidentally touch the lenses, be sure to contact a SUBARU dealer.
 - When you are cleaning the inside of the windshield around the camera cover, do not spray cleaner directly onto the windshield. Instead, spray cleaner onto a cloth and then wipe the windshield.
 - When having the inside of windshield cleaned at a service station, etc., be sure to request that the attendant covers the camera covers before washing the vehicle.
 - Do not subject the stereo camera to a strong impact.
 - Do not remove or disassemble the stereo camera.
 - Do not change the positions where the stereo camera is installed or modify any of the surrounding structures.
- If the camera system becomes hot, the cooling fans may start operating. Do not block the ventilation holes in the camera cover. Also, do not insert anything into the ventilation holes. Doing so could damage the camera system.
- Do not touch the camera cover, because it may be hot due to heat generated by the camera system.
- If the camera cover is hit, pressed strongly or otherwise subjected to impacts, EyeSight functions may not operate correctly.

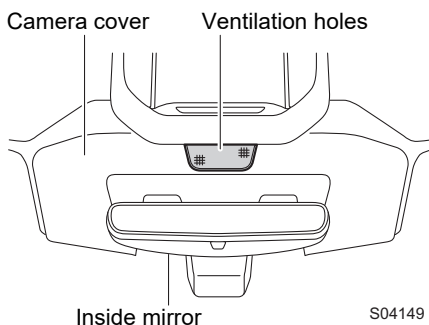


- Do not install any accessories other than the ones designated by SUBARU on the prohibited areas (1) and (2), shown in gray in the illustrations below, including the windshield (inside and outside), inside mirror, camera cover and top of the instrument panel.
 - Even if some accessories are installed on the outside of the prohibited areas, abnormal operation of EyeSight may occur due to the reflection of the light or any objects. In this situation, move the accessories. For details, contact a SUBARU dealer.
 - Do not place any stickers or accessories on the windshield (outside or inside). If you have to do so (for example, legally required or electronic toll tag), avoid the prohibited area (1) gray zone shown in the illustrations. Otherwise, it may adversely affect the field of view of the stereo camera and can cause improper operation of the system. For details, contact a SUBARU dealer.
 - Do not place any objects in the prohibited area (2) gray zone. The stereo camera may not be able to detect objects accurately and the EyeSight system may not function properly due to reflections in the windshield. For details, contact a SUBARU dealer.
 - Do not polish the top of the instrument panel with chemicals or other substances. The stereo camera may not be able to detect objects accurately and the EyeSight system may not function properly due to reflections in the windshield.

Left-hand drive

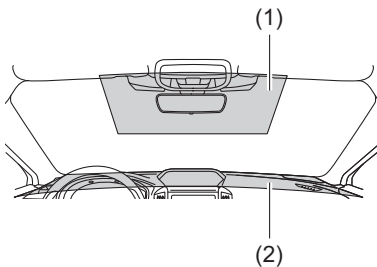

Right-hand drive

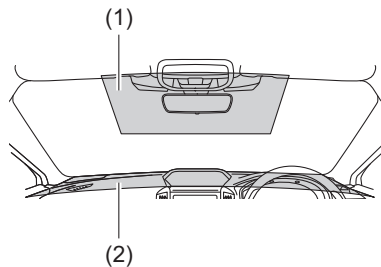

H00293


Continued on next page ⇒

⇒ Continued from previous page

- This SUBARU vehicle comes equipped with EyeSight functionality. This functionality has been specifically developed by SUBARU to work with genuine SUBARU wiper blades. In case of replacement or repair, to continue to use such functionality, do not install a wiper blade other than a genuine SUBARU wiper blade or a third party wiper blade that matches the quality of genuine SUBARU wiper blades.

Inferior parts can prevent the stereo camera from being able to detect objects accurately, and the EyeSight system may not operate properly. SUBARU and SUBARU dealer(s) are not liable for any damage that may be caused by the use of parts other than genuine SUBARU parts.

- Replace damaged wiper blades or worn wiper blade rubbers as soon as possible. Using damaged wiper blades or worn wiper blade rubbers may cause streaking on the windshield. The stereo camera may not be able to detect objects accurately and the EyeSight system may not function properly due to streaks or droplets remaining on the windshield.
- Do not install any accessories on the front side such as on the hood or the grille. It may affect the camera view and the system may not operate correctly.
- Make sure that the cargo loaded on the roof does not interfere in the stereo camera's field of view. Obstructing the stereo camera's view may impair the system operation. For details, contact a SUBARU dealer.

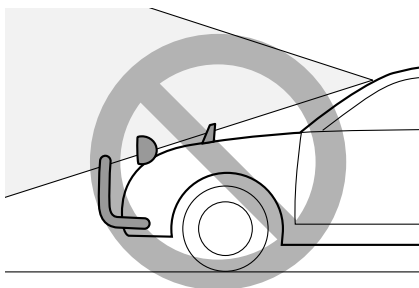

S01098

- Keep the windshield (outside and inside) clean at all times. When the windshield has become fogged, or it has a dirt or an oil film on it, the stereo camera may not detect objects accurately and the EyeSight system may not operate correctly. Never mount any device or accessories to the center air vent, as any airflow change may impact EyeSight performance.
- Do not use any glass coating agents or similar substances on the windshield. Doing so may interfere with the proper operation of the system.
- Do not install any film or an additional layer of glass on the windshield. The system may not operate correctly.
- If there are scratches or cracks on the windshield, contact a SUBARU dealer.
- To have the windshield replaced or repaired, it is recommended contacting a SUBARU dealer.

This SUBARU vehicle comes equipped with EyeSight functionality. This functionality has been specifically developed by SUBARU to work with genuine SUBARU windshields. In case of replacement or repair, to continue to use such functionality, do not install a windshield other than a genuine SUBARU windshield or a third party windshield that matches the quality of genuine SUBARU windshields.

Inferior parts can prevent the stereo camera from being able to detect objects accurately, and the EyeSight system may not operate properly. SUBARU and SUBARU dealer(s) are not liable for any damage that may be caused by the use of parts other than genuine SUBARU parts.

In order to continue to use EyeSight functionality, stereo camera adjustment is necessary when a windshield is reinstalled or replaced. For further details concerning stereo camera adjustment, it is recommended contacting a SUBARU dealer or a repairer capable of EyeSight service.

Handling of Radar Sensors (if equipped)

Refer to the vehicle Owner's Manual for details.

EyeSight Functions

EyeSight includes the following functions.

■ Pre-Collision Braking System

This function uses a following distance warning feature to warn the driver to take evasive action when there is the possibility of a collision with an obstacle in front (a vehicle, pedestrian, cyclist, etc.). If the driver does not take evasive action, the brakes are applied automatically to help reduce vehicle collision damage or, if possible, help prevent a collision.

⇒ Page 34

Autonomous Emergency Steering (if equipped)

This function warns the driver if there is a possibility of a collision with a vehicle, pedestrian or cyclist in front of the vehicle. If the driver does not take evasive action, the system will operate the steering wheel to try to avoid a collision.

⇒ Page 52

■ Advanced Adaptive Cruise Control

Adaptive Cruise Control

This function maintains the set vehicle speed and when there is a vehicle in front in the same traffic lane, it follows the speed of the vehicle in front up to the maximum of the set vehicle speed.

⇒ Page 66

Lane Centering Function

This function helps suppress lane drifting by detecting lane markings (e.g., white lines) and the lead vehicle on expressways, freeways and motorways, and by assisting steering operation. Lane Centering Function will work only when Adaptive Cruise Control is activated.

⇒ Page 95

■ Manual Speed Limiter (if equipped)

This function controls the vehicle speed so that the vehicle speed does not exceed the set vehicle speed.

⇒ Page 111

■ Lane Departure Prevention Function

When driving on expressways, freeways, or motorways, the system recognizes the lane markings (and road boundaries (for Europe models)). If the vehicle appears likely to depart from the lane, the system assists with steering operation in the direction that prevents the lane departure, preventing the vehicle from leaving the lane.

⇒ Page 120

■ Emergency Lane Keep Assist (if equipped)

If the vehicle appears likely to depart the lane when there is a following vehicle or oncoming vehicle approaching in the neighboring lane, the system assists the driver to turn the steering wheel in the direction which will prevent lane departure, keeping the vehicle in the lane.

⇒ Page 132

■ Pre-Collision Throttle Management

This function reduces accidental forward movement caused by the select lever being placed in the wrong position or the accelerator pedal being accidentally depressed, or depressed too strongly.

⇒ Page 145

■ Lane Departure Warning

This function warns the driver when the vehicle is about to drift off the road.

⇒ Page 152

■ Lane Sway Warning

This function warns the driver when it detects vehicle drifting caused by driver fatigue, failure to concentrate on the road, inattention, strong crosswinds or other factors.

⇒ Page 158

■ Lead Vehicle Start Alert

This function notifies the driver when the vehicle stopped in front starts moving but the driver's vehicle remains stationary.

⇒ Page 163

■ Conventional Cruise Control

In this mode, the system maintains a constant vehicle speed. It does not follow the vehicle in front. This function can be used even when the stereo camera has temporarily stopped operating (⇒ page 186). This function is used by switching from Adaptive Cruise Control to Conventional Cruise Control.


⇒ Page 167



NOTE

EyeSight does not operate when the e-BOXER system is not running (e-BOXER system READY indicator light turns off).

Instrument panel display layout

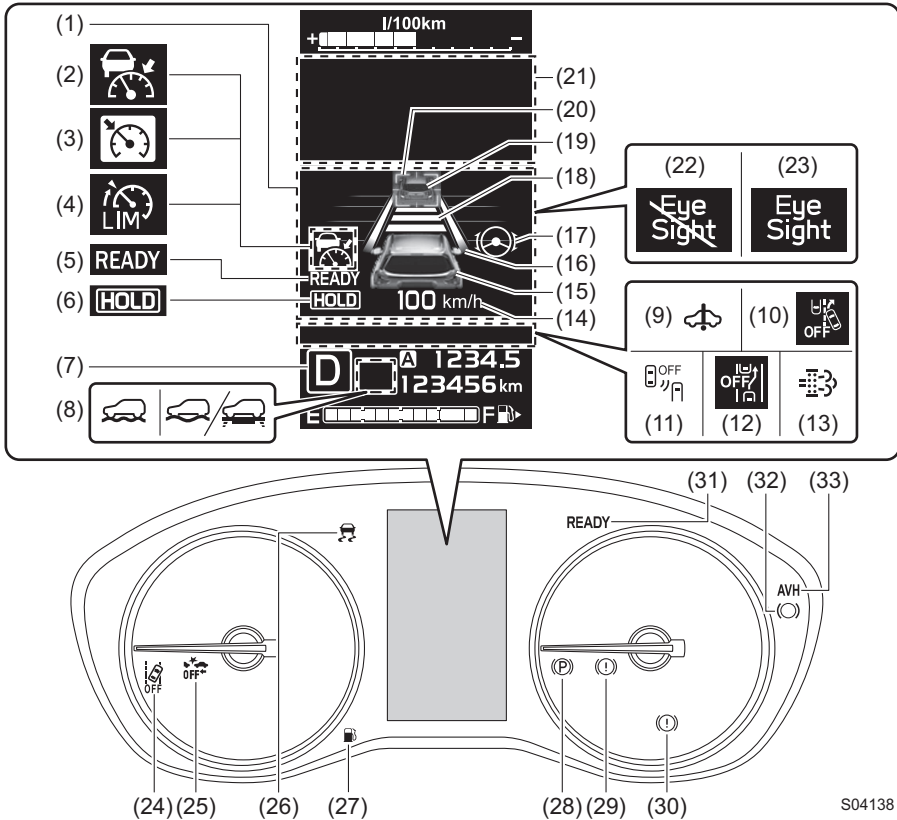


S04138

Display units can be changed in the Screen Settings. For details, refer to the Owner's Manual for your vehicle.

- | | |
|--|---|
| (1) EyeSight display area | (16) Lane indicator |
| (2) Adaptive Cruise Control indicator | (17) Lane Keep Assist indicator |
| (3) Conventional Cruise Control indicator | (18) Following distance setting indicator |
| (4) Speed Limiter indicator (if equipped) | (19) Lead vehicle indicator |
| (5) READY indicator | (20) Lane Centering lead vehicle indicator |
| (6) HOLD indicator | (21) Warning screen area |
| (7) Select lever/gear position indicator | (22) EyeSight temporary stop indicator (white) |
| (8) X-MODE indicator | (23) EyeSight warning indicator (yellow) |
| (9) e-BOXER system fail lamp | (24) Lane Departure Warning OFF indicator light |
| (10) Emergency Lane Keep Assist OFF indicator (if equipped) | (25) Pre-Collision Braking System OFF indicator light |
| (11) SRVD OFF indicator (if equipped) | (26) Vehicle Dynamics Control warning light |
| (12) Autonomous Emergency Steering OFF indicator (if equipped) | (27) Low fuel warning light |
| (13) Gasoline particulate filter warning light (if equipped) | (28) Electronic parking brake indicator light |
| (14) Set vehicle speed | (29) Brake system warning light (red) |
| (15) Your vehicle indicator | (30) Electronic parking brake warning light (yellow) |
| | (31) e-BOXER system READY indicator light |
| | (32) Auto Vehicle Hold operation indicator light |
| | (33) Auto Vehicle Hold ON indicator light |

	Adaptive Cruise Control indicator • This indicator illuminates when the  (CRUISE) switch is pressed. ⇒ Page 75 • When Adaptive Cruise Control is activated, this indicator changes from white to green. When the driver accelerates the vehicle by depressing the accelerator pedal while Adaptive Cruise Control is operating, the indicator changes from green to white. ⇒ Page 76
	Conventional Cruise Control indicator • This indicator illuminates when the  /  (Following distance setting) switch is pressed and held after pressing the  (CRUISE) switch. ⇒ Page 169 • This indicator changes from white to green when Conventional Cruise Control is activated. ⇒ Page 172
	Speed Limiter indicator (if equipped) • This indicator illuminates when Manual Speed Limiter is on. • When Manual Speed Limiter is activated, the indicator changes from white to green. • This indicator illuminates white when Manual Speed Limiter is temporarily canceled due to a strong depression of the accelerator pedal, or when the select lever is in the “R” position.
	READY indicator  illuminates when cruise control* or Manual Speed Limiter (if equipped) can be activated. ⇒ Pages 75 and 171 *: Adaptive Cruise Control and Conventional Cruise Control
	HOLD indicator  illuminates when the stay-stopped function is operated while Adaptive Cruise Control is on. ⇒ Page 84

	Lead vehicle indicator When Adaptive Cruise Control is activated or when the stay-stopped function is engaged, this indicator illuminates when a vehicle in front has been detected. ⇒ Page 77
	Following distance setting indicator Indicates the following distance setting that was set with the  /  (Following distance setting) switch. ⇒ Page 83
	Set vehicle speed Displays the set vehicle speed. ⇒ Pages 75 and 169
	Select lever/gear position indicator This indicator illuminates and shows which position the select lever or the gear is in.
	EyeSight warning indicator (yellow) • This indicator illuminates or flashes when a malfunction occurs in the EyeSight system. • When it is illuminated or flashing, none of the EyeSight functions can be used (including Adaptive Cruise Control and Pre-Collision Braking System, etc.). ⇒ Page 184
	EyeSight temporary stop indicator (white) • This indicator illuminates when the EyeSight system is temporarily stopped. • When the ignition switch is placed in the ON position, this indicator will illuminate if the  (CRUISE) switch or the  (Lane Keep Assist) switch is set to ON within approximately 10 seconds of the e-BOXER system starting. It turns off when approximately 10 seconds have elapsed since the e-BOXER system started. • When it is illuminated, none of the EyeSight functions can be used except for Manual Speed Limiter (if equipped) or Conventional Cruise Control. ⇒ Page 186

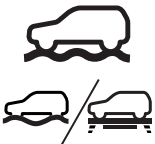	X-MODE indicator This indicator illuminates when the X-MODE is on. ⇒ Refer to the vehicle Owner's Manual for details.
	Lane Departure Warning OFF indicator light • This indicator light illuminates when Lane Departure Warning and Lane Sway Warning are off. • It also illuminates when the ignition switch is turned to the ON position. Approximately 10 seconds after the e-BOXER system starts, the Lane Departure Warning OFF indicator light will turn off or remain illuminated depending on the current status (ON or OFF). ⇒ Page 157
	Pre-Collision Braking System OFF indicator light • This indicator light illuminates when Pre-Collision Braking System and Pre-Collision Throttle Management are off. • It also illuminates when the ignition switch is turned to the ON position, and then turns off approximately 10 seconds after the e-BOXER system starts. ⇒ Page 65
	Lane indicator • This indicator illuminates in gray when the e-BOXER system is started. (For Europe models) • This indicator illuminates in gray when the  (Lane Keep Assist) switch is pressed. • Both right and left lines or only one line illuminates in blue when Lane Centering Function is operating by detecting the lane markings. • Both right and left lines or only one line illuminates in white when Lane Departure Prevention Function is standby or active. • If your vehicle is about to drift out of the lane while Lane Centering Function is active, the line the vehicle is about to cross will blink in yellow. ⇒ Pages 105, 109 and 127
	Lane Centering lead vehicle indicator Lane Centering Function is operating by detecting the lead vehicle.


	Brake system warning light (red) If the brake system warning light (red) illuminates when the electronic parking brake is released while driving, turn Pre-Collision Braking System off. At this time, do not use Adaptive Cruise Control, Manual Speed Limiter (if equipped) or Conventional Cruise Control. If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place. Contact a SUBARU dealer to have the system inspected. ⇒ Refer to the vehicle Owner's Manual for details. Electronic parking brake warning light (yellow) This warning light illuminates when the electronic parking brake system has a malfunction. ⇒ Refer to the vehicle Owner's Manual for details.
	Electronic parking brake indicator light This indicator light illuminates when the electronic parking brake is applied. ⇒ Refer to the vehicle Owner's Manual for details.
	Your vehicle indicator When the brake pedal is depressed or the brake control function is activated, the brake lights on the vehicle indicator illuminate in red.
	Lane Keep Assist indicator • This indicator illuminates when Lane Centering Function or Lane Departure Prevention Function is turned on. • When Lane Centering Function or Lane Departure Prevention Function is active, the indicator changes from white to green. ⇒ Pages 105 and 127
	Emergency Lane Keep Assist OFF indicator (if equipped) • This indicator illuminates when the ignition switch is turned to the ON position, and then turns off approximately 10 seconds after the e-BOXER system starts. • It illuminates if Emergency Lane Keep Assist is turned off. • It illuminates if SRVD or Emergency Lane Keep Assist cannot be used due to a malfunction or if SRVD is turned off. ⇒ Page 144

	SRVD OFF indicator (if equipped) This indicator illuminates when SRVD is deactivated. ⇒ Refer to the vehicle Owner's Manual for details.
	Vehicle Dynamics Control warning light This warning light illuminates when the ignition switch is turned to the ON position, and turns off approximately 2 seconds after the e-BOXER system is started. It will illuminate if there is a malfunction in the Vehicle Dynamics Control electrical control system. ⇒ Refer to the vehicle Owner's Manual for details.
AVH	Auto Vehicle Hold ON indicator light This indicator light illuminates when the Auto Vehicle Hold is activated. ⇒ Refer to the vehicle Owner's Manual for details.
	Auto Vehicle Hold operation indicator light This indicator light illuminates while the vehicle is stopped by the Auto Vehicle Hold function. ⇒ Refer to the vehicle Owner's Manual for details.
	Autonomous Emergency Steering OFF indicator (if equipped) • This indicator illuminates when the ignition switch is turned to the ON position, and then turns off approximately 10 seconds after the e-BOXER system starts. • It illuminates if SRVD or Pre-Collision Braking System cannot be used due to a malfunction. • It illuminates if SRVD or Pre-Collision Braking System is turned off. ⇒ Page 63
	e-BOXER system fail lamp The e-BOXER system fail lamp illuminates when a malfunction occurs in the e-BOXER system. ⇒ Refer to the vehicle Owner's Manual for details.
READY	e-BOXER system READY indicator light This indicator light illuminates when the e-BOXER system has started. It turns off when the e-BOXER system has been turned off. ⇒ Refer to the vehicle Owner's Manual for details.

	Gasoline particulate filter warning light (if equipped) • This warning light illuminates when the accumulated particulate matter exceeds the specified limit. • Cruise control* and Manual Speed Limiter (if equipped) cannot be used when the gasoline particulate filter warning light is flashing. *: Adaptive Cruise Control and Conventional Cruise Control ⇒ Refer to the vehicle Owner's Manual for details.
	Low fuel warning light • This warning light illuminates when the tank is nearly empty. • For models with the gasoline particulate filter, cruise control* and Manual Speed Limiter (if equipped) may not be used when the low fuel warning light is illuminated. *: Adaptive Cruise Control and Conventional Cruise Control ⇒ Refer to the vehicle Owner's Manual for details.

Switch layout

■ Models with Manual Speed Limiter

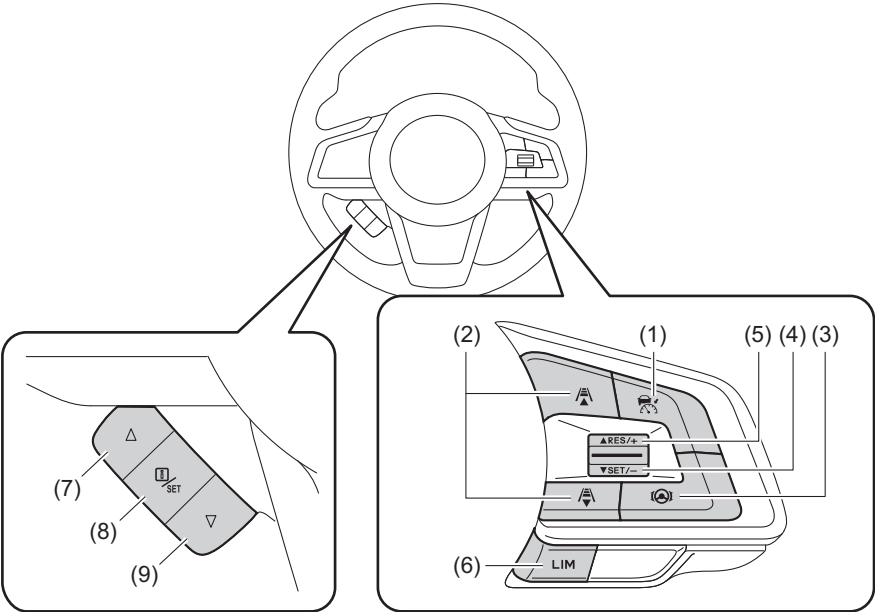


S04139

- (1)  (CRUISE) switch
- (2)  /  (Following distance setting) switches
- (3)  (Lane Keep Assist) switch
- (4) SET/- switch
- (5) RES/+ switch

- (6) LIM (Manual Speed Limiter) switch (if equipped)
- (7)  switch
- (8)  (Info)/SET switch
- (9)  switch

■ Models without Manual Speed Limiter

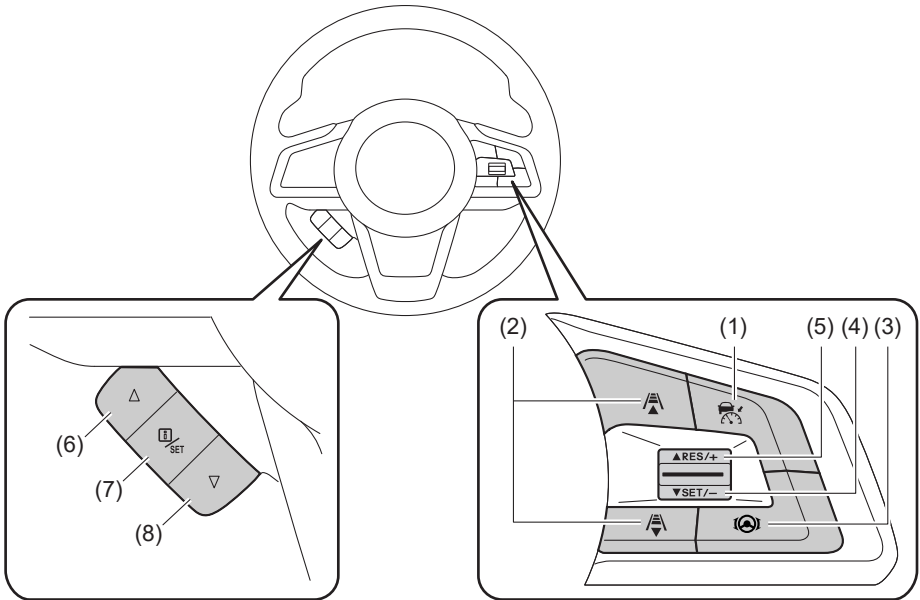

S03392

- (1) (CRUISE) switch
- (2) (Following distance setting) switches
- (3) (Lane Keep Assist) switch
- (4) SET/- switch

- (5) RES/+ switch
- (6) switch
- (7) (Info)/SET switch
- (8) switch

■ (CRUISE) switch

- Press this switch to turn cruise control* on/off.
- When the  (CRUISE) switch is pressed,  (Adaptive Cruise Control indicator) appears on the EyeSight display area of the combination meter display, and then  (Conventional Cruise Control indicator) appears by pressing and holding the  /  (Following distance setting) switch for approximately 2 seconds. When  (Adaptive Cruise Control indicator) or  (Conventional Cruise Control indicator) is shown on the EyeSight display area, this indicates that the main cruise control is on.

⇒ Pages 75 and 169

- Press this switch to cancel the cruise control.

⇒ Pages 88 and 177

*: Adaptive Cruise Control and Conventional Cruise Control

■ LIM (Manual Speed Limiter) switch (if equipped)

- Press this switch to turn Manual Speed Limiter on/off.
- When the LIM (Manual Speed Limiter) switch is pressed,  (Speed Limiter indicator) appears on the EyeSight display area of the combination meter display.
- Press this switch to cancel Manual Speed Limiter.

⇒ Page 111

■ RES/SET switch

● SET/-

- Press this switch to set cruise control* or Manual Speed Limiter (if equipped).
- Press this switch to reduce the set vehicle speed (when cruise control* or Manual Speed Limiter is currently set).

⇒ Pages 76 and 81 (for Adaptive Cruise Control)

⇒ Page 111 (for Manual Speed Limiter - if equipped)

⇒ Pages 172 and 175 (for Conventional Cruise Control)

*: Adaptive Cruise Control and Conventional Cruise Control

● RES/+

- Press this switch to set cruise control* or Manual Speed Limiter (if equipped).
- After cruise control* or Manual Speed Limiter is canceled, press this switch to resume the cruise control or Manual Speed Limiter function at the vehicle speed that was previously set.
- Press this switch to increase set vehicle speed (when cruise control* or Manual Speed Limiter is currently set).

⇒ Pages 76, 80 and 91 (for Adaptive Cruise Control)

⇒ Page 111 (for Manual Speed Limiter - if equipped)

⇒ Pages 172, 174 and 180 (for Conventional Cruise Control)

*: Adaptive Cruise Control and Conventional Cruise Control

■ / (Following distance setting) switches

- Press either of these switches to select the set following distance in 4 stages (only when Adaptive Cruise Control is on).
⇒ Page 83
- When the main cruise control is on, switching between Adaptive Cruise Control and Conventional Cruise Control is possible by pressing the  /  (Following distance setting) switch*.

*: To switch to Conventional Cruise Control, press and hold the switch for approximately 2 seconds or longer.

■ (Lane Keep Assist) switch

Press this switch to turn Lane Centering Function or Lane Departure Prevention Function on/off.

⇒ Pages 105 and 127

■ switch / switch

Pull either of these switches in the following situations.

- When switching the screen displayed on the combination meter display.
- When changing the Warning Volume settings, etc.

⇒ Page 189

■ (Info)/SET switch

Pull this switch in the following situations.

- When displaying the message that appeared in the warning screen area again.
⇒ Page 194
- When changing the Warning Volume settings, etc.
⇒ Page 189


■ (Pre-Collision Braking System OFF) switch

Press and hold this switch for approximately 2 seconds or longer to turn off Pre-Collision Braking System and Pre-Collision Throttle Management.

When these functions are off, the Pre-Collision Braking System OFF indicator light on the instrument panel illuminates.

Press and hold the switch again to turn on Pre-Collision Braking System and Pre-Collision Throttle Management. This turns off the Pre-Collision Braking System OFF indicator light.

⇒ Pages 64 and 150

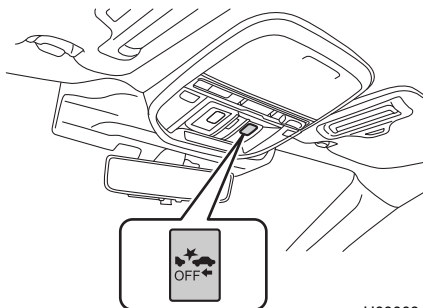

H00003


■ (Lane Departure Warning OFF) switch

Press and hold this switch for approximately 2 seconds or longer to turn off the Lane Departure Warning and Lane Sway Warning functions.

When these functions are off, the Lane Departure Warning OFF indicator light on the instrument panel illuminates.

Press and hold the switch again to turn on the Lane Departure Warning and Lane Sway Warning functions. This turns off the Lane Departure Warning OFF indicator light.

⇒ Pages 156 and 161

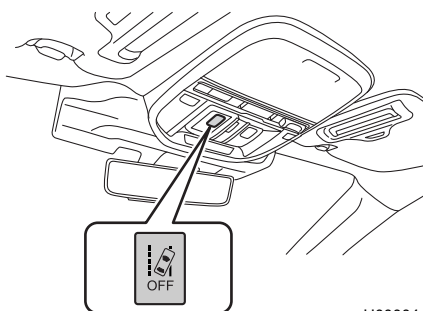


H00004

■ SRVD OFF switch (if equipped)

Press this switch to turn Emergency Lane Keep Assist (if equipped) and SRVD on/off.

⇒ Page 132 (for Emergency Lane Keep Assist)

⇒ Refer to the vehicle Owner's Manual (for SRVD).

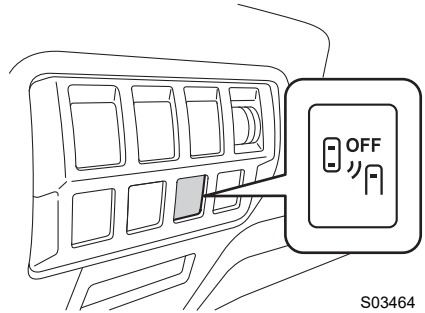

S03464

■ X-MODE switch


Use this switch to turn the X-MODE on/off.

When the X-MODE is activated, the X-MODE indicator illuminates.

When the X-MODE is deactivated, the X-MODE indicator will turn off.


⇒ Refer to the vehicle Owner's Manual for details.

Type A

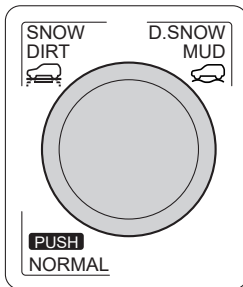

S03602

Type B

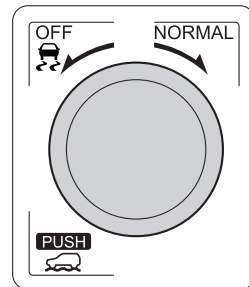

S03253

● To activate

Type A

Turn the X-MODE switch to the right or left to select SNOW/DIRT or D.SNOW/MUD.


Type B

Press the X-MODE switch.

● To deactivate

Press the X-MODE switch.

■ Multi-function display

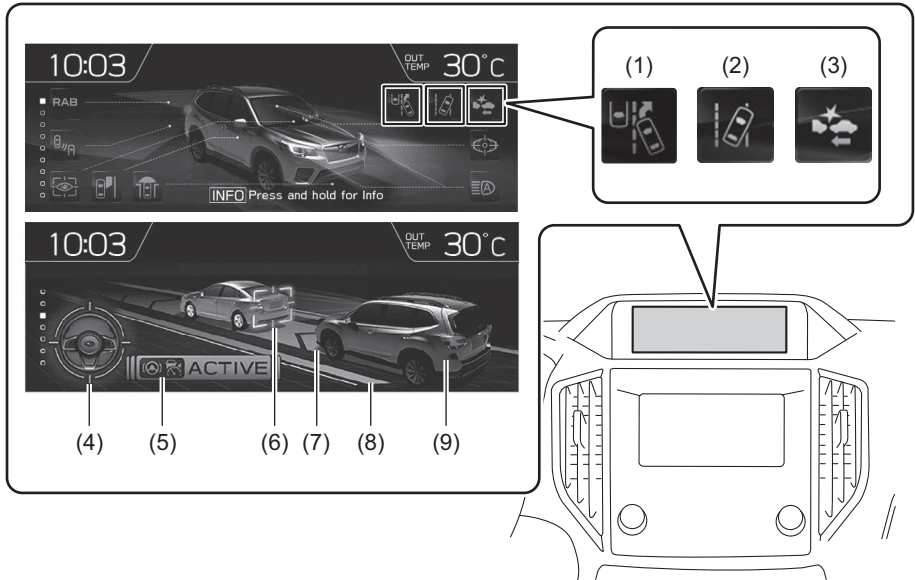

S04140

- | | |
|--|--------------------------------|
| (1) Emergency Lane Keep Assist indicator (if equipped) | (5) Lane Centering indicator |
| (2) Lane Departure Warning indicator | (6) Lead vehicle indicator |
| (3) Pre-Collision Braking System indicator | (7) Lane indicator |
| (4) Steering wheel indicator | (8) Road line indicator |
| | (9) Your own vehicle indicator |

● Emergency Lane Keep Assist indicator (if equipped)

This indicator illuminates when Emergency Lane Keep Assist is on.

● Lane Departure Warning indicator

This indicator illuminates when Lane Departure Warning and Lane Sway Warning are on.

●Pre-Collision Braking System indicator

This indicator illuminates when Pre-Collision Braking System and Pre-Collision Throttle Management are on.

●Steering wheel indicator

This indicator shows the steering wheel operation status and illuminates in blue when Lane Centering Function is activated. It also rotates in synchronization with the actual steering wheel angle.

●Lane Centering indicator

This indicator illuminates when Lane Centering Function is activated.

●Lead vehicle indicator

When Adaptive Cruise Control is activated or when the stay-stopped function is engaged, this indicator is displayed when a vehicle in front has been detected. The lead vehicle indicator displays an image of the distance between your vehicle and the vehicle in front of you.

●Lane indicator

This indicator is displayed when Lane Centering Function, Lane Departure Prevention Function or Emergency Lane Keep Assist (if equipped) is active.

●Road line indicator

This indicator shows the status of the following functions.

- Lane Centering Function:
System activated status
- Lane Departure Prevention Function:
System standby status/activated status

●Your own vehicle indicator

When the brake pedal is depressed or the brake control function is activated, the brake lights on the vehicle indicator illuminate in red.

Pre-Collision Braking System

When there is a risk of a collision with an obstacle in front (a vehicle, pedestrian, cyclist, etc.), the EyeSight system helps to prevent or minimize a collision by warning the driver. If the driver still does not take evasive action to avoid a collision, the brakes can be automatically applied just before the collision in order to reduce impact damage, or if possible, prevent the collision. If the driver takes evasive action to avoid a collision, Pre-Collision Braking Assist will operate in order to help the driver to prevent or minimize the collision.

This system can be effective not only with direct rear-end collisions, but also with offset rear-end collisions. In addition to rear-end collisions, this system can be effective for avoiding collisions with crossing pedestrians and cyclists and with oncoming vehicles and pedestrians when turning. This function can be activated when the select lever is in the “D”, “M” or “N” position.



WARNING

Pre-Collision Braking System operation

- Never use Pre-Collision Braking System and Pre-Collision Braking Assist to stop your car or avoid a collision under ordinary conditions. These functions cannot prevent collisions under all conditions. If the driver relies only on Pre-Collision Braking System for Brake operation, collisions may occur.
- When a warning is activated, pay attention to the front of the vehicle and its surroundings, and operate the brake pedal and/or take other actions if necessary.
- The EyeSight Pre-Collision Braking System is primarily designed to prevent rear-end collisions with other vehicles when possible or to minimize damage and injuries in the event of a collision. In addition to other vehicles, things such as motorbikes, cyclists and pedestrians can also be treated as obstacles. However, there may be cases when detection is not possible depending on a variety of conditions^{*2}. For example, when a vehicle is viewed from the side, oncoming vehicle, vehicles approaching in reverse, small animals or children, or walls or doors are not likely to be detected.
- Pre-Collision Braking System will operate at the point when it determines that a collision cannot be avoided and is designed to apply strong braking force just before a collision. The result of this varies depending on a variety of conditions^{*2}. Because of this, performance of this function will not always be the same.
- When Pre-Collision Braking System is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be canceled if the accelerator pedal is suddenly or fully depressed.

- If the driver depresses the brake pedal or turns the steering wheel, the system may determine that this constitutes evasive action by the driver, and the automatic braking control may not activate in order to allow the driver full control.
- If the speed difference with the obstacle is greater than approximately 60 km/h (37 mph) (50 km/h (31 mph) in the case of a crossing cyclist), collisions cannot be avoided due to performance limitations of EyeSight. However, even if the speed difference is approximately 60 km/h (37 mph) or less (50 km/h (31 mph) or less in the case of a crossing cyclist), if an obstacle cuts in front of you or moves outside the camera's field of view, the vehicle might not be able to stop or the system might not activate when the visibility, road slipperiness, etc. do not meet the following conditions.*


*: Conditions in which Pre-Collision Braking System cannot detect obstacles:

- Distance to obstacle in front of you, speed difference, proximity conditions, lateral displacement (the amount of offset)
- Vehicle conditions (amount of load, number of occupants, etc.)
- Road conditions (grade, slipperiness, shape, bumps, etc.)
- Visibility ahead is poor (rain, snow, fog or smoke, etc.).
- The detected object is something other than a vehicle, motorcycle, cyclist or pedestrian.
 - A domestic animal or other animal (a dog or deer, etc.)
 - A guardrail, telephone pole, tree, fence or wall, etc.
- Even if the obstacle is a motorcycle, cyclist or pedestrian, depending on the brightness of the surroundings as well as the relative movement, and aspect or angle of the object, there may be cases when the system cannot detect it.
- The system determines that operation by the driver (based on accelerator pedal operation, braking, steering wheel angle, etc.) is intended as evasive action.
- Vehicle maintenance status (brake systems, tire wear, tire pressure, whether a temporary spare tire is being used, etc.)
- A trailer or another vehicle, etc. is being towed.
- The brakes are cold due to the outside temperature being low or just after starting the e-BOXER system.
- The brakes are overheated on downhill grades (braking performance is reduced).
- In rain or after washing the vehicle (the brakes are wet and braking performance is reduced.)
- Recognition conditions of the stereo camera
In particular, the function may be unable to stop the vehicle or may not activate in the following cases.

Continued on next page ⇒


⇒ Continued from previous page

- The object moves outside the camera's field of view.
- Bad weather (for example heavy rain, a blizzard or thick fog)
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- At night or in a tunnel without the headlights on
- At night or in a tunnel when there is a vehicle in front that does not have its taillights on
- Approaching a motorcycle, cyclist or pedestrian at night
- A vehicle, motorcycle, cyclist or pedestrian is outside the area illuminated by the headlights.
- Strong light is coming from the front (for example, sunlight at dawn, sunset or headlight beams, etc.).
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Fluid has not been fully wiped off the windshield during or after washer use.
- The target cannot be correctly recognized because the stereo camera's view is obstructed by water droplets from rain or the window washer, or by the wiper blades.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).
- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- It is pitch black and there are no objects in the surrounding area.
- The surrounding area is mostly the same color (for example in a snowy location).
- The rear aspect of the vehicle in front is low, small or irregular (the system may recognize another part of the vehicle as its rear and will determine operation from that).
 - There is an empty truck or trailer with no rear and/or side panels on the cargo bed.
 - Vehicles that have cargo protruding from their back ends
 - Non-standard shaped vehicles (vehicle transporters or vehicles with a sidecar fitted, etc.)
 - The height of the vehicle is low, etc.



S02133

- There is a wall, etc. in front of a stopped vehicle.
- There is another object near the vehicle.
- A vehicle, etc. has its side facing you.
- With vehicles that are backing up or with oncoming vehicles, etc.
- The size and height of an obstacle is smaller than the limitations of the stereo camera's recognition capability.
 - With small animals or children, etc.
 - With pedestrians who are sitting or lying down
- The detected object is a fence or wall, etc. with a uniform pattern (a striped pattern or brick pattern, etc.).
- There is a wall or door made of glass or a mirror in front.
- The vehicle in front suddenly swerves, accelerates, or decelerates.
- A vehicle, motorcycle, cyclist or pedestrian suddenly cuts in from the side or suddenly runs in front of you.
- Your vehicle is immediately behind an obstacle after changing lanes.
- There is a vehicle, motorcycle, cyclist or pedestrian in a location close to your vehicle's bumper.
- The speed difference between your vehicle and an obstacle is 5 km/h (4 mph) or less (As braking is performed once the obstacle is in close proximity to your vehicle, depending on the shape and size of the obstacle, there may be some cases when the obstacle is outside the range of the camera's field of view.).
- On sharp curves, steep uphill grades or steep downhill grades
- On a bumpy or unpaved road
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.

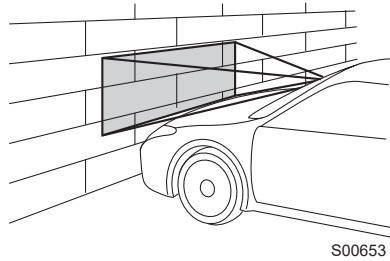

S00653

Continued on next page ⇒

⇒ Continued from previous page

- Do not test Pre-Collision Braking System on its own. It may operate improperly and cause an accident.
- The system may not operate correctly under the conditions listed below. When these conditions occur, turn off Pre-Collision Braking System.

⇒ Page 64

- The tire pressure is not correct.*¹
- The temporary spare tire is installed.*¹
- Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹
- Tires that are the wrong size are installed.*¹
- A flat tire has been fixed temporarily with a tire repair kit.
- The suspension has been modified (including a genuine SUBARU suspension that has been modified).
- An object that obstructs the stereo camera's view is installed on the vehicle.
- Tire chains are installed.
- The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
- The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
- The lights including headlights and fog lights have been modified.
- Vehicle operation has become unstable due to an accident or malfunction.
- The brake system warning light (red) is illuminated.*²
- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- The maximum number of occupants is exceeded.
- The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.*³


*1: The wheels and tires have functions that are critically important. Be sure to use the correct ones. For details, refer to the Owner's Manual for your vehicle.

*2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.

*3: For details about the combination meter, refer to the Owner's Manual for your vehicle.

Activation of Pre-Collision Braking System when turning

- Operation of the EyeSight Pre-Collision Braking System when making a turn is intended to avoid collisions or reduce the severity of collisions with oncoming vehicles in the neighboring oncoming lane, particularly when you are crossing the oncoming lane to make a turn at an intersection, etc. In addition to oncoming vehicles, pedestrians can also be detected, but your vehicle may not stop or the system may not activate under certain conditions*.

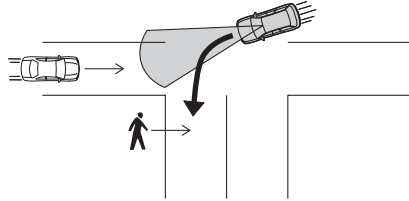

S04093

- If your vehicle is moving faster than approximately 25 km/h (16 mph) when you turn, the system will not activate. Also, even if your vehicle is moving approximately 25 km/h (16 mph) or slower, if the obstacle suddenly cuts in front of you or is outside the stereo camera's field of view, your vehicle may not stop or the system may not activate depending on differing conditions* such as visibility or the slipperiness of the road.


*: Conditions

- Speed difference with the oncoming vehicle, distance to the oncoming vehicle, the angle of approach, changes in the actions of the oncoming vehicle and the position of the other vehicle relative to the side of your vehicle.
- Vehicle conditions (amount of load, number of occupants, etc.)
- Road conditions (grade, slipperiness, shape, bumps, etc.)
- Visibility ahead is poor (rain, snow, fog or smoke, etc.).
- The obstacle is something other than an oncoming vehicle or pedestrian.
 - A parked vehicle or a vehicle that is traveling in the same direction as your vehicle
 - An animal, etc.
 - A guardrail, telephone pole, tree, fence or wall, etc.
- Even if an oncoming vehicle has been detected, you are not signaling to move in the direction that your vehicle is actually traveling.
- Even if the obstacle is an oncoming vehicle, it is traveling close to objects on the side of the road.
- Even if the obstacle is an oncoming vehicle, it is stopped or traveling in your lane.

Continued on next page ⇒

⇒ Continued from previous page

- Even if the obstacle is an oncoming vehicle, the system cannot recognize it as a target obstacle because, for example, the front of the vehicle cannot be seen or the vehicle is difficult to see because it is driving without its headlights on at night.
- Even if the obstacle is an oncoming vehicle, your vehicle moved into the oncoming vehicle's path before the system could recognize it as a target obstacle.
- Even if the obstacle is an oncoming vehicle, your vehicle is in the oncoming lane.

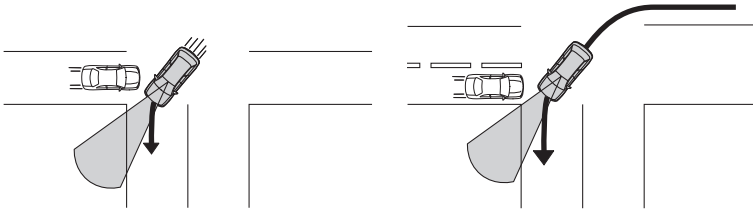

S04094


- Even if the obstacle is a pedestrian, depending on the brightness of the surroundings as well as the relative movement, and aspect or angle of the object, there may be cases when the system cannot detect it.
- In particular, there is a high possibility that your vehicle cannot stop or that the system will not activate in the following cases:
 - Visibility is poor due to water, snow, dust, etc. kicked up by another vehicle, or due to water vapor, sand, smoke, etc. in the air.
 - Approaching a pedestrian at night.
 - The oncoming vehicle or pedestrian is outside the area illuminated by the headlights.
 - The front aspect of the oncoming vehicle is small, low or irregular.
 - The vehicle, etc. has its side facing you.
 - The vehicle, etc. is backing up.
 - The oncoming vehicle suddenly swerves, accelerates or decelerates.
 - The oncoming vehicle or pedestrian suddenly cuts in from the side or suddenly runs in front of you.
 - The oncoming vehicle or pedestrian is close to your vehicle's bumper.
 - You turn the steering wheel suddenly away or back to your direction of travel.

CAUTION

- In the following situations, turn off Pre-Collision Braking System. Otherwise Pre-Collision Braking System may activate unexpectedly.

⇒ Page 64



- The vehicle is being towed.
- The vehicle is being loaded onto a carrier.
- A chassis dynamometer, free-rollers or similar equipment is being used.
- A mechanic lifts up the vehicle, starts the e-BOXER system and spins the wheels freely.
- Passing hanging banners, flags or branches
- Thick/tall vegetation is touching the vehicle.
- Driving on a race track
- In a drive-through car wash

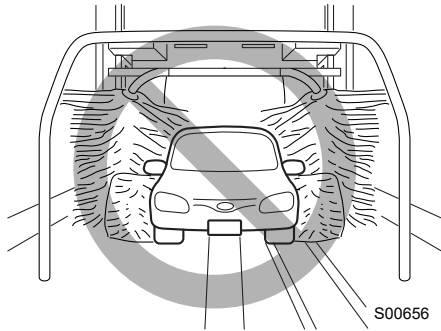

S00656

- Pre-Collision Braking System may activate in the following situations. Therefore concentrate on safe driving.

- Passing through an automatic gate (opening and shutting)
- Driving close to the vehicle in front, pedestrian or cyclist
- Driving in a location where the grade of the road changes rapidly

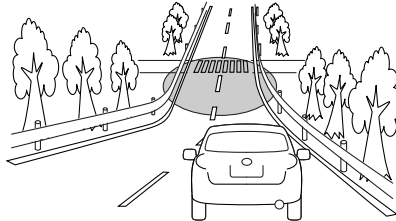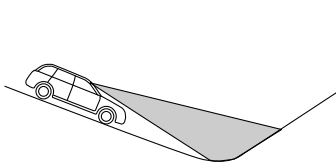


S01264

Continued on next page ⇒


⇒ Continued from previous page

- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- Passing through clouds of steam or smoke, etc.
- In adverse weather, such as heavy snow or snowstorms
- The exhaust gas emitted by the vehicle in front is clearly visible in cold weather, etc.

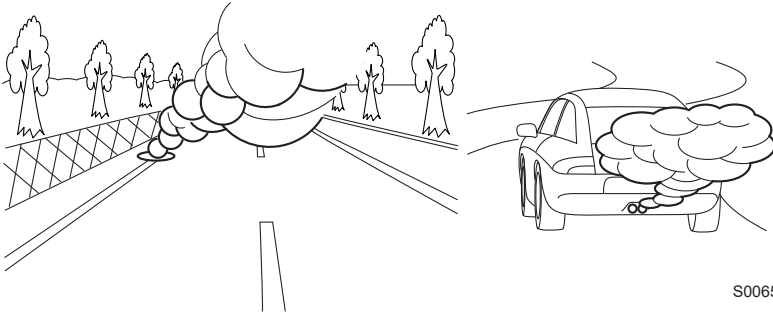


S00652

- There is an obstacle on a curve or intersection.
- You are passing close to the side of a vehicle, an obstacle or vegetation.
- Stopping very close to a wall or a vehicle in front

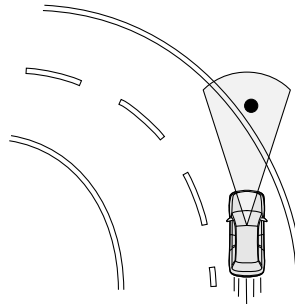


S02669

- Passing through water spray from road sprinklers or snow clearing sprinklers on the road

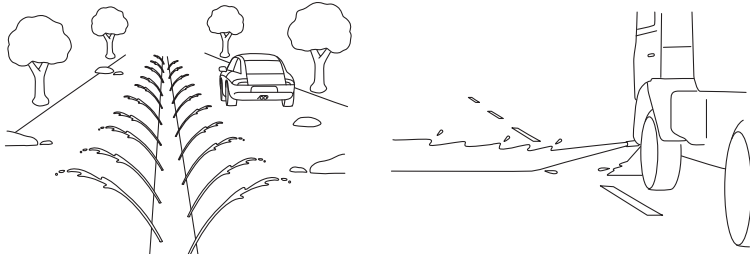

S02636

- If there is cargo or installed accessories, etc. that are protruding beyond the edge of the front bumper, the vehicle's length will increase and the system may not be able to prevent a collision.
- If you operate the brake pedal during automatic braking, the pedal may feel stiff. However, this is normal. By depressing the brake pedal further, you can apply more braking force. Apply more braking force as necessary.
- Pre-Collision Braking System may activate in the following situations even when there is no oncoming vehicle or pedestrian approaching.
 - An oncoming vehicle decelerates or stops before an intersection just before you make a turn and enter the oncoming lane.

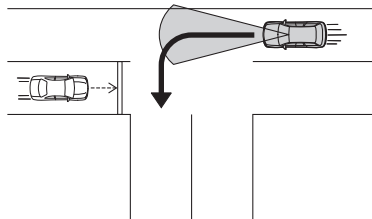


H00295

Continued on next page ⇒


⇒ Continued from previous page

- An oncoming vehicle passes by just before you make a turn and enter the oncoming lane.

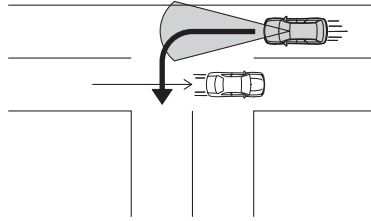


H00296

- Just before you make a turn and enter the oncoming lane, you pass by an oncoming vehicle also making a turn.

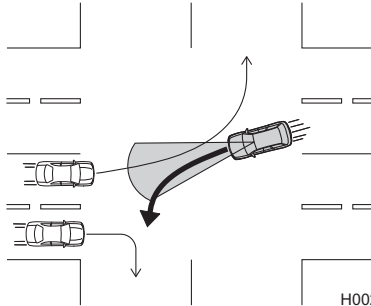

H00297

- You suddenly approach close to an oncoming vehicle while trying to change lanes or avoid an obstacle.
- When you are turning, a pedestrian crosses in front of your vehicle or just before crossing slows down or stops.



H00298




NOTE

Some unusual noises may be audible during automatic braking. This is caused by the braking control and is normal.

■ Detection of pedestrians

The EyeSight system can also detect pedestrians. The EyeSight system detects pedestrians from their size, shape and movement. The system detects a pedestrian when the contour of the head and shoulders are clear.

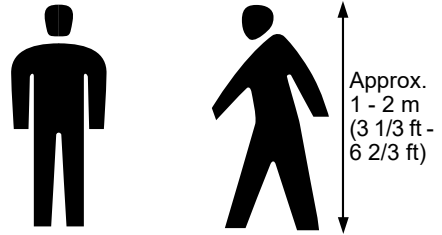

S02796




WARNING

The EyeSight system's Pre-Collision Braking function also identifies pedestrians as obstacles. However, depending on the conditions, there may be cases when the system cannot detect a pedestrian. In the following conditions, the possibility that the system may not be able to detect a pedestrian as an object is particularly high.

- Pedestrians are walking in a group.
- A pedestrian is next to a wall or other obstacle.
- A pedestrian is using an umbrella.
- A pedestrian is wearing clothes that are a similar color to the surrounding environment.
- A pedestrian is carrying bulky luggage or tall object, or is pushing an object such as a cart.
- A pedestrian is bending over, crouching down, lying down or making a sudden movement such as standing up.
- A pedestrian is in a dark location.
- A pedestrian suddenly crosses in front of you from the side or suddenly runs in front of you.

■ Detection of cyclists

The EyeSight system can also detect cyclists. The EyeSight system detects cyclists from their size, shape and movement. The system can recognize a cyclist when the outline of a rider and bicycle is clear and it detects human-like movement.

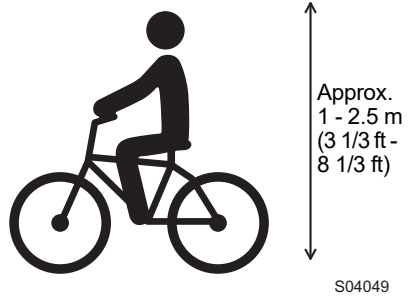

WARNING

The EyeSight system's Pre-Collision Braking System may not recognize objects as potential obstacles under certain conditions. In the following conditions, the possibility that the system may not be able to detect a cyclist as an object is particularly high.

- A cyclist is moving in a group with other pedestrians or cyclists.
- A cyclist is next to a wall or other obstacle.
- A cyclist's clothing and/or bicycle are similar in color to the surrounding environment.
- A large item is being carried on the bicycle.
- A cyclist is standing while pedaling or leaning over the handlebars.
- A cyclist is in a dark location.
- A cyclist suddenly cuts in from the side or suddenly appears in front of you.
- A cyclist crosses in front of you at a high speed.

Pre-Collision Braking System operation

When there is an obstacle in front of you during driving, the system activates in the following sequence in order to warn the driver and to activate braking control and the brake lights.

Following Distance Warning:

When the system determines that there is a risk of collision, an alert sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver.

When the driver depresses the brake pedal to decelerate and achieves a suitable following distance, the warning is canceled.

The Following Distance Warning operates when Adaptive Cruise Control is not activated.


First Braking and Warning:

When the system determines that there is a high risk of collision with an obstacle in front, an alert sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver. Braking control may be activated and in some situations, e-BOXER system output may also be controlled. If the system determines that the amount of evasive action (braking, steering, etc.) taken by the driver has reduced the risk of collision, braking activation is canceled.

Secondary Braking and Warning:

If the system then determines that the risk of collision is extremely high, the alert changes to a continuous beeping sound and stronger braking control is activated. Despite any evasive action taken by the driver, if the system subsequently determines that a collision is unavoidable, braking and e-BOXER system output are controlled by the system.

When the vehicle is stopped by secondary braking, the driver should depress the brake pedal in order to ensure that the vehicle stays stopped.

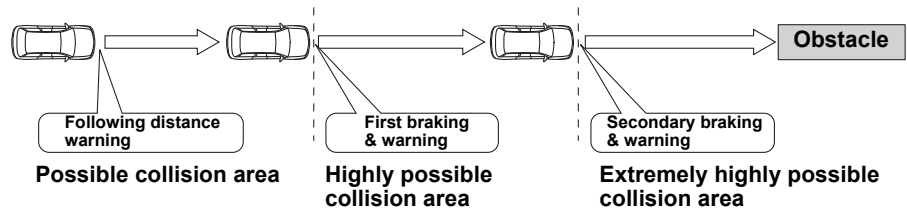

S03875

Operating system	Strength of Automatic Braking	Indication on the combination meter display	Alert type
Following distance warning	Weak		Repeated short beeps
First braking	Moderate		Repeated short beeps
Secondary braking	Strong		Continuous beep

S03207



NOTE

- In the following cases, the brake control after the vehicle has come to a stop through Pre-Collision Braking System will be released.
 - Depress the brake pedal.
 - Depress the accelerator pedal (except when the select lever is in the “N” position).
 - Shift the select lever into the “P” position.
 - The vehicle has been stopped for 2 minutes.
 - The electronic parking brake was engaged.

- After stopping with secondary braking, in the following cases, the electronic parking brake will be applied.
(For details about how to release the electronic parking brake, refer to the Owner's Manual for your vehicle.)
 - Approximately 2 minutes have elapsed since stopping and the brake pedal is not depressed.
 - Any door (except the rear gate) is opened.
 - The EyeSight system has a malfunction.
 - The EyeSight system has stopped temporarily.
- Neither first braking nor secondary braking will operate in the following cases.
 - The vehicle speed is approximately 1 km/h (1 mph) or less (When the select lever is in the "N" position and your vehicle speed is approximately 4 km/h (2 mph) or less) or 200 km/h (125 mph) or more.
 - The vehicle speed is 100 km/h (60 mph) or more, and the obstacle is a pedestrian or a cyclist.
 - Vehicle Dynamics Control is active.
- If the system detects the brake lights of the vehicle in front, your vehicle will start decelerating earlier than if it does not.
- There are some cases where the first braking is applied for a longer period of time. One of the reasons for this is due to a large speed difference with an obstacle in front. In those cases, stronger or weaker braking control may be activated.

■ Pre-Collision Braking System operation indicator

After the Pre-Collision Braking System operation, a message appears and stays in the warning screen area of the combination meter display for a certain period of time.

The screen displays the message “Apply Brake To Hold Position” to urge the driver to depress the brake pedal. At this time the alert (beep) sounds. This screen will be displayed for approximately 2 minutes until the driver depresses the brake pedal.



S02962

A message appears and stays in the warning screen area of the combination meter display to indicate that Pre-Collision Braking System has activated.



S03130

Pre-Collision Braking Assist operation

When Pre-Collision Braking System is activated (when the system determines that there is a high risk of collision with an obstacle in front), if the driver depresses the brake pedal, the system determines that this is emergency braking and activates braking assist automatically.



CAUTION

If the driver depresses the brake pedal while following distance warning is activated, the Pre-Collision Braking Assist will not work. The vehicle decelerates with the normal braking force operated by the driver.




NOTE

- Pre-Collision Braking Assist function does not operate when the vehicle speed is approximately 10 km/h (7 mph) or less or 200 km/h (125 mph) or more.
- For information about the brake assist function, refer to the Owner's Manual for your vehicle.

Autonomous Emergency Steering operation (if equipped)

If there is an obstacle ahead while driving, Pre-Collision Braking System (first braking and secondary braking) activates to avoid a collision. After secondary braking activates, the system determines whether the road you are driving on has lane markings and also determines whether there is sufficient space for avoiding a collision in your lane. At the same time, the system checks whether there is a vehicle approaching from the rear, using the radar sensors. If there is an extremely high possibility of a collision with the obstacle using only secondary braking, using this information, Autonomous Emergency Steering is activated, and the system controls the steering wheel to avoid the collision while staying in the lane. After a collision with the object is avoided, the system continues to control the steering wheel so that your vehicle does not leave its lane.

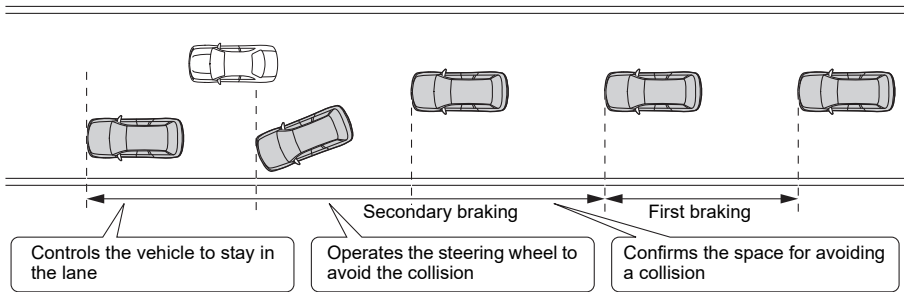

S04095



WARNING

- EyeSight Autonomous Emergency Steering is intended to avoid collisions or reduce the severity of collisions with vehicles, cyclists and pedestrians. However, under some conditions the obstacle cannot be detected and the system may not activate.
- When Autonomous Emergency Steering or other system activates, the driver should check the area around the vehicle and then take appropriate action, such as operating the steering wheel or depressing the brakes.

- Autonomous Emergency Steering is set to activate when the system determines a collision cannot be avoided with Pre-Collision Braking System only and other conditions such as driving conditions and object recognition are met; its effectiveness changes based on a variety of conditions. Therefore, this function will not always exhibit the same performance.
- Autonomous Emergency Steering does not activate when Pre-Collision Braking System is turned off. The function also does not activate when the deceleration from Pre-Collision Braking System is not sufficient.
- If the driver is operating the steering wheel, and the system determines that the operation is evasive action, then operation of the steering wheel by the system may not activate.
- Autonomous Emergency Steering will not activate if the system determines that the driver is not gripping the steering wheel.
- This function will not activate if your vehicle's speed is more than approximately 80 km/h (50 mph). Also, even if your vehicle's speed is approximately 80 km/h (50 mph) or slower, if another vehicle suddenly cuts in front of you, a collision may not be avoidable or the function may not activate depending on differing conditions* such as visibility or the slipperiness of the road.

*: Conditions

- Vehicle conditions (amount of load, number of occupants, etc.)
- Road conditions (grade, slipperiness, shape, bumps, etc.)
- Visibility ahead is poor (rain, snow, fog or smoke, etc.).
- Even if the obstacle is a cyclist or pedestrian, depending on the brightness of the surroundings as well as the relative movement, and aspect or angle of the object, there may be cases when the system cannot detect it.
- Even if the object is recognized as a vehicle (including cyclists) or pedestrian, the object is determined to be moving across your path such as crossing the street or cutting in front of you.
- In a collision with a vehicle, cyclist or pedestrian that is near the center of the path in front of your vehicle.

Continued on next page ⇒

⇒ Continued from previous page

- The system determines that operation by the driver (based on accelerator pedal operation, braking, steering wheel angle, etc.) is intended as evasive action.
 - Vehicle maintenance status (brake systems, tire wear, tire pressure, whether a temporary spare tire is being used, etc.)
 - A trailer or another vehicle, etc. is being towed.
 - The brakes are cold due to the outside temperature being low or just after starting the e-BOXER system.
 - The brakes are overheated on downhill grades (braking performance is reduced).
 - In rain or after washing the vehicle (the brakes are wet and braking performance is reduced)
 - The obstacle is not recognized as a vehicle, cyclist or pedestrian.
 - Lane markings cannot be detected.
 - Steering wheel operation by the driver cannot be detected.
 - You are driving on a road that is not straight.
 - You are driving on a road with a steep grade.
- Recognition conditions of the stereo camera
- In particular, the function may be unable to stop the vehicle or may not activate in the following cases.
- Roads with lane restrictions or tentative lanes due to construction work, etc.
 - Roads with curves
 - Old lane markings remain.
 - Snow, puddles or snow melting agents remain on the road surface.
 - Cracks or constructed traces remain on the road surface.
 - Frozen roads, snow-covered roads or other slippery road surfaces
The tires may spin, causing loss of control of the vehicle.
 - Entering a sharp curve into an interchange or junction, or a service area, parking area, toll booth or other facilities
 - A vehicle, cyclist or pedestrian is approaching the area near to the object.
 - An oncoming vehicle or a vehicle that will overtake you is approaching.
 - The target vehicle, cyclist or pedestrian is moving across your path.

- The boundaries of your lane are difficult to determine with the stereo camera. (For example, there are no lane markings (white lines, etc.), or the lane markings are difficult to see because they are faint, thin or similar in color to the road.)
- A vehicle is approaching from the front in the neighboring lane.
- There is not enough space to avoid a collision within your lane.
- The area around your rear bumper is dirty, or it has frost, mud, etc. on it.
- Your rear bumper is scratched, dented, misaligned, etc.
- You are driving on a snowy road, or the road has puddles or is wet, and your vehicle or nearby vehicles are kicking up water, snow, etc. from the road.
- Never attempt to test the operation of Autonomous Emergency Steering.
 - Your vehicle may not stop, or the system may not activate, which can lead to an unintended collision.
- The system may not operate correctly under the conditions listed below. When these conditions occur, turn off Autonomous Emergency Steering.
 - ⇒ Page 64
 - The tire pressure is not correct.*¹
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹
 - Tires that are the wrong size are installed.*¹
 - The wheels are out of balance (e.g., the balance weight is removed or misaligned).*¹
 - The wheels are out of alignment.*¹
 - There is an abnormal vibration in the steering wheel or the steering wheel is heavier than usual.
 - The steering wheel has been replaced with parts other than genuine SUBARU parts.
 - A trailer or another vehicle, etc. is being towed.
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including a genuine SUBARU suspension that has been modified).

Continued on next page ⇒

⇒ Continued from previous page


- An object that obstructs the stereo camera's view is installed on the vehicle.
- Tire chains are installed.
- The temporary spare tire is installed.
- The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
- The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
- The lights including headlights and fog lights have been modified.
- Vehicle operation has become unstable due to an accident or malfunction.
- The brake system warning light (red) is illuminated.*²
- The power steering warning light is illuminated.
- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- The maximum number of occupants is exceeded.
- The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.*³

*1: The wheels and tires have functions that are critically important. Be sure to use the correct ones. For details, refer to the Owner's Manual for your vehicle.

*2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.

*3: For details about the combination meter, refer to the Owner's Manual for your vehicle.

- The stereo camera may have difficulty detecting the lane markings under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings in your lane (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.
 - The shape of a curve in the road suddenly changes.
 - Shadows of guardrails or similar objects are overlapped on the lane markings.
 - Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
 - The width of a lane is either too narrow or too wide.
 - The width of a lane has changed.
 - The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.

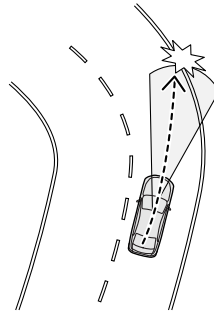


S03022

Continued on next page ⇒


⇒ Continued from previous page

- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).

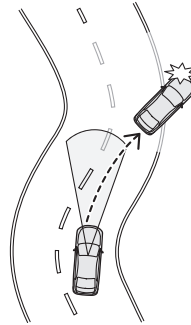

S02855

- Going into lanes that lead to interchanges, junctions, service areas or parking areas
- There is a curb or a side wall on the road shoulder.
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

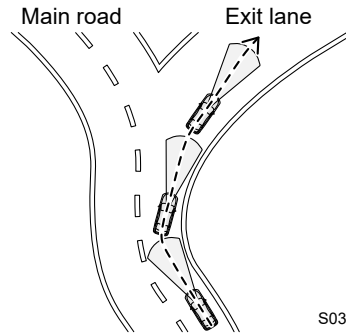


S03482

CAUTION

- Autonomous Emergency Steering may activate unexpectedly in the following situations. Therefore be sure to turn off Autonomous Emergency Steering.

⇒ Page 64

- The vehicle is being towed.
- The vehicle is being loaded onto a carrier.
- A chassis dynamometer, free-rollers or similar equipment is being used.
- A mechanic lifts up the vehicle, starts the e-BOXER system and spins the wheels freely.
- Passing hanging banners, flags or branches
- Thick/tall vegetation is touching the vehicle.
- Driving on a race track
- In a drive-through car wash

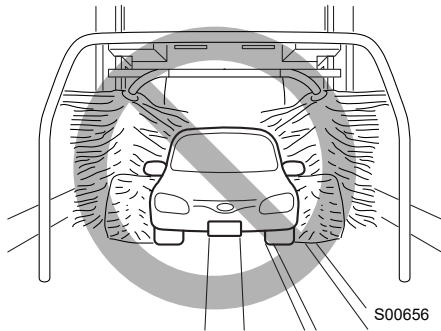


- Autonomous Emergency Steering may activate in the following situations. Therefore concentrate on safe driving.

- You are approaching a vehicle, pedestrian or cyclist in front of you.
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stirred up generated by the vehicle in front or oncoming traffic.
- Passing through clouds of steam or smoke, etc.
- In adverse weather, such as heavy snow or snowstorms


Continued on next page ⇒

⇒ Continued from previous page


- The exhaust gas emitted by the vehicle in front is clearly visible in cold weather, etc.

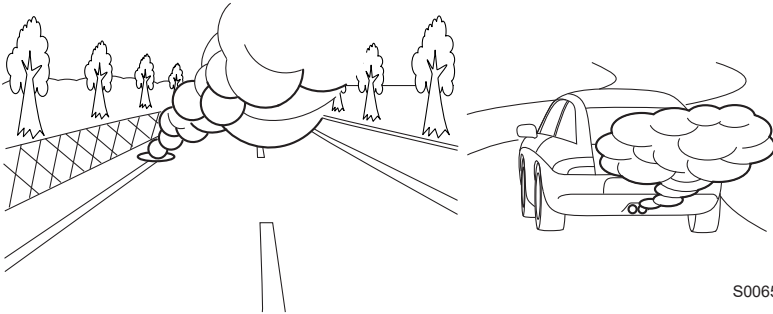

- There is an obstacle on a curve or intersection.
- You are passing close to the side of a vehicle, pedestrian, cyclist, obstacle or vegetation.
- The system cannot recognize an object that suddenly appears or suddenly cuts in front of your vehicle from the side.
- The obstacle begins to move suddenly.
- There are no lane markings for your lane, but a difference in color between your lane and the neighboring lane, shoulder, etc. could be mistaken for lane markings.

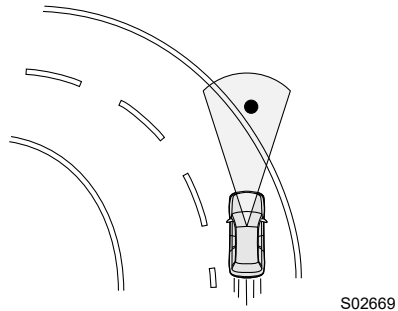

- There is dirt, cracks, curbs, etc. that could be mistaken for lane markings in your lane.
- The road is narrow and markings in the oncoming lane could be mistaken for lane markings for your lane.
- Passing through water spray from road sprinklers or snow clearing sprinklers on the road

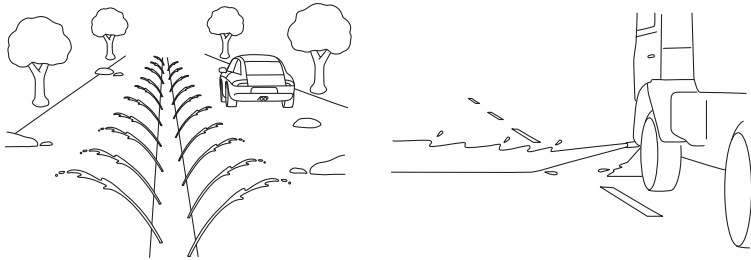

S02636

- To cancel Autonomous Emergency Steering, turn the steering wheel or depress the accelerator pedal.
- If there is cargo or installed accessories, etc. that are protruding beyond the edge of the front bumper, the vehicle's length will increase and the system may not be able to prevent a collision.



NOTE

Autonomous Emergency Steering will not activate in the following situations.

- Pre-Collision Braking System is off.
- SRVD is off.
- The obstacle is an oncoming vehicle.
- A cyclist, pedestrian or vehicle is crossing in front of your vehicle.
- There is not enough space to avoid a collision, or another object has been detected in the area around the space for avoiding a collision.
- Objects are approaching from the front or rear of your vehicle.
- The lane or lane markings cannot be detected.
- Pre-Collision Braking System is active due to guardrails or other structures.
- The system determines steering control cannot avoid a collision.
- The EyeSight system has a malfunction.
- The EyeSight system has stopped temporarily.

When Autonomous Emergency Steering activates, an interruption screen appears on the combination meter display for a certain period of time to notify you of the activation.

⇒ Page 50

Autonomous Emergency Steering malfunction and temporary stop (if equipped)

If Autonomous Emergency Steering temporarily stops, the Autonomous Emergency Steering OFF indicator illuminates. When the cause has been resolved, operation returns to normal.

This indicator will also appear in extremely hot or cold environments, and if there is an abnormality in the battery voltage.

If the Autonomous Emergency Steering OFF indicator stays illuminated for a long time, the EyeSight system may have a malfunction. Contact a SUBARU dealer to have the system inspected as soon as possible.



NOTE


You cannot use Autonomous Emergency Steering when SRVD is turned off. In this case, the Autonomous Emergency Steering OFF indicator illuminates.

■ Autonomous Emergency Steering OFF indicator

This indicator illuminates when the ignition switch is turned to the ON position, and it turns off approximately 10 seconds after the e-BOXER system is started.

This indicator illuminates when Autonomous Emergency Steering is turned off.

⇒ Page 64

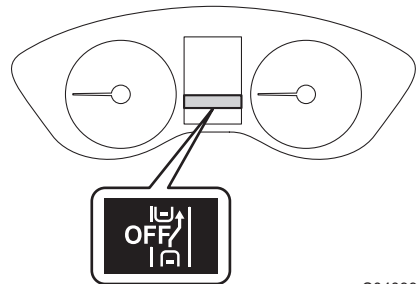


S04099

Turning off Pre-Collision Braking System

Press and hold the Pre-Collision Braking System OFF switch for approximately 2 seconds or longer to turn off Pre-Collision Braking System (including Pre-Collision Braking Assist and Autonomous Emergency Steering (if equipped)). When 1 short beep sound emits, this control is turned off and the Pre-Collision Braking System OFF indicator light on the instrument panel illuminates.

To turn the control back on, press and hold the Pre-Collision Braking System OFF switch for approximately 2 seconds or longer again. When this control is turned on, the Pre-Collision Braking System OFF indicator light turns off.

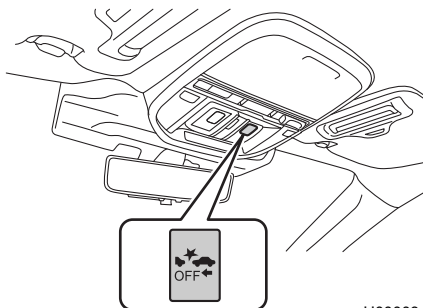

H00003



NOTE


- When Pre-Collision Braking System is turned off, the Autonomous Emergency Steering (if equipped) and Pre-Collision Throttle Management Control function are also turned off.
- Even when Pre-Collision Braking System is turned off, if the e-BOXER system is turned off and then restarted, Pre-Collision Braking System will be turned on. The system default setting when the vehicle is restarted is on.

■ Pre-Collision Braking System OFF indicator light

This indicator light illuminates when the ignition switch is turned to the ON position, and remains illuminated for approximately 10 seconds after the e-BOXER system starts. It turns on when Pre-Collision Braking System, Autonomous Emergency Steering (if equipped) and Pre-Collision Throttle Management are turned off.

It also illuminates under the following conditions.

- The EyeSight system has a malfunction.
⇒ Page 184
- The EyeSight system has stopped temporarily.
⇒ Page 186

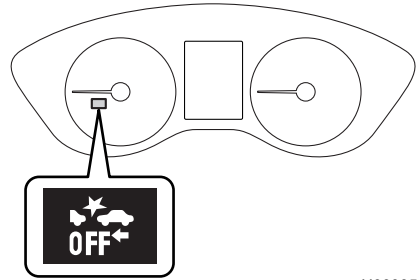

H00005



NOTE

- If the Pre-Collision Braking System OFF indicator light illuminates, the Autonomous Emergency Steering OFF indicator (if equipped) also illuminates.
⇒ Page 63
- When the Pre-Collision Braking System OFF indicator light is turned on, Pre-Collision Braking System (including the Pre-Collision Braking Assist function), Autonomous Emergency Steering (if equipped) and Pre-Collision Throttle Management do not operate.
- For models with Autonomous Emergency Steering, you cannot use Autonomous Emergency Steering when SRVD is turned off. In this case, the Autonomous Emergency Steering OFF indicator illuminates.

Advanced Adaptive Cruise Control

Advanced Adaptive Cruise Control is a driving support system that is intended to assist drivers when driving on an expressway (including during congestion and when driving at high speed). Adaptive Cruise Control (⇒ page 66) and Lane Centering Function (⇒ page 95), which operates linked with Adaptive Cruise Control, are used to assist with driving by automatically controlling the accelerator, brake, and steering.

Adaptive Cruise Control

Adaptive Cruise Control is a driving support system intended to allow more comfortable driving on expressways, freeways and motorways. The stereo camera detects vehicles in front that are driving in the same traffic lane, and your vehicle follows the vehicle in front (up to the maximum speed of the set vehicle speed). While following, your vehicle will automatically maintain a following distance that corresponds to the speed of the vehicle in front. When the vehicle in front comes to a complete stop, your vehicle will be also stopped and the electronic parking brake will be automatically applied. The vehicle is capable of being controlled at a speed between 0 km/h (0 mph) and approximately 180 km/h (110 mph). Please remember that you should not exceed posted speed limits.



WARNING

- This system does not provide the driver with an automatic driving function that handles all traffic conditions.
- Do not rely excessively on Adaptive Cruise Control. This system is not intended to assist in driving when the driver is not paying full attention to what is ahead of him/her due to distractions or a lack of concentration while driving, or under conditions of poor visibility. It is not intended to prevent rear-end collisions.

Strive for safe driving at all times. Always maintain a safe following distance behind the vehicle in front of you, pay attention to your surroundings and the driving conditions, and operate the brake pedal and take other actions as necessary.

- When using Adaptive Cruise Control, always set the speed according to the speed limit, traffic flow, road conditions, and other conditions.
- Before using the system, perform a daily inspection and verify that there are no malfunctions of the tires or brakes.

- The system may not operate correctly under the conditions listed below. When these conditions occur, do not use Adaptive Cruise Control.
 - The tire pressure is not correct.*¹
 - The temporary spare tire is installed.*¹
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹
 - Tires that are the wrong size are installed.*¹
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including a genuine SUBARU suspension that has been modified).
 - An object that obstructs the stereo camera's view is installed on the vehicle.
 - Tire chains are installed.
 - The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
 - The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
 - The lights including headlights and fog lights have been modified.
 - Vehicle operation has become unstable due to an accident or malfunction.
 - The brake system warning light (red) is illuminated.*²
 - The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
 - The maximum number of occupants is exceeded.
 - A trailer or another vehicle, etc. is being towed.
 - The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.*³
- *1: The wheels and tires have functions that are critically important. Be sure to use the correct ones. For details, refer to the Owner's Manual for your vehicle.
- *2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.
- *3: For details about the combination meter, refer to the Owner's Manual for your vehicle.


Continued on next page ⇒

⇒ Continued from previous page


- Adaptive Cruise Control is designed for use on expressways, freeways, toll roads, motorways and similar limited access roads. It is not intended to be used in city traffic. In the following conditions, do not use Adaptive Cruise Control. Doing so may result in an accident.
 - Ordinary roads (roads other than those mentioned above)
Depending on the driving environment (complexity of roads and other factors), the system may not be able to perform as the traffic conditions require, and that may result in an accident.
 - Sharp curves or winding roads
 - Frozen roads, snow-covered roads or other slippery road surfaces
The tires may spin, causing loss of control of the vehicle.
 - Traffic conditions when frequent acceleration and deceleration make it difficult to maintain the following distance
It may not be possible for the system to perform as the traffic conditions require.
 - Steep downhill grades
The set vehicle speed may be exceeded.
 - On a steep continuous downhill grade
The brakes may overheat.
 - Roads and overpasses with repeated steep uphill and downhill grades
Detection of the vehicle in front may be lost, or the road surface may be detected instead of the vehicle in front, making correct control impossible.
 - Entering a sharp curve/turn into an interchange or junction, or a service area, parking area, toll booth or other facilities
Detection of the vehicle in front may not be possible.
 - The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.

- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt, water spray from road sprinklers or snow clearing sprinklers on the road, or dust stir up generated by the vehicle in front or oncoming traffic.

Detection of the vehicle in front may be lost, or water or other substances may be incorrectly detected instead, making correct control impossible.

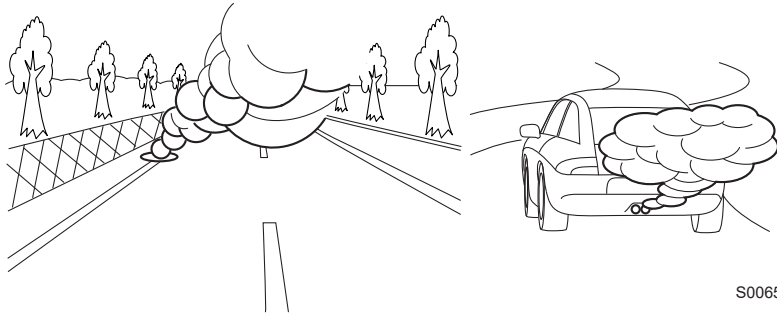

S00652

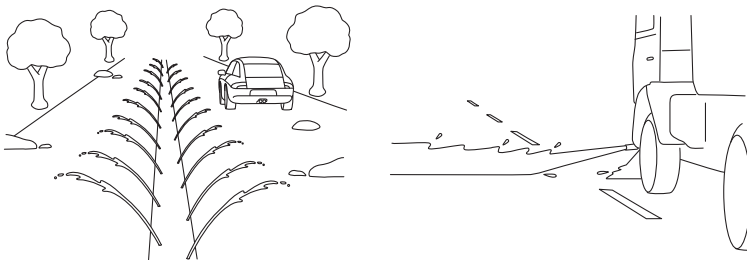

S02636

- In adverse weather, such as heavy snow or snowstorms
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Water droplets from rain or the window washer, or dirt has not been fully wiped off the windshield.


It may not be possible to detect the vehicle in front, making correct control impossible.

- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).

Continued on next page ⇒

⇒ Continued from previous page


- The stereo camera may have difficulty detecting the following objects or conditions. Operate the brake pedal and take other actions as necessary.
 - Vehicles at significantly different speeds (vehicles driving slowly, stopped or oncoming vehicles, etc.)
 - Vehicles cutting into your lane
 - Motorcycles, cyclists, pedestrians and animals, etc.
 - Light is poor in the evening or early morning.
 - At night or in a tunnel without the headlights on
 - At night or in a tunnel when there is a vehicle in front that does not have its taillights on
 - Strong light is coming from the front (sunlight or headlight high beams, etc.).
 - Vehicles in front that have a rear aspect that is low, small or irregular (the system may recognize another part of the vehicle and will determine operation from that)
 - An empty truck or trailer that has no tailgate or longbed
 - Vehicles that have cargo protruding from their back ends
 - Non-standard shaped vehicles (vehicle transporters or vehicles with a sidecar fitted, etc.)
 - Vehicles that are low
 - Objects that are located close to the bumper of your vehicle
- When you do not want to use Adaptive Cruise Control, be sure to turn the  (CRUISE) switch off. If the switch is left on, cruise control may be accidentally engaged, possibly resulting in an accident. Also, when parking, be sure to apply the electronic parking brake and shift the select lever to the "P" position.
- Before using Adaptive Cruise Control, be sure to fully verify the safety of the vehicle occupants and the area around the vehicle. Never operate the cruise control from outside the vehicle.



S02133


Detection of the vehicle in front by the EyeSight stereo camera*

- Under the following road conditions or conditions of your vehicle, detection of the vehicle in front may not be possible. Vehicles in neighboring traffic lanes or roadside objects may also be incorrectly detected. Under conditions such as these, do not use Adaptive Cruise Control. If cruise control is currently in use, operate the brake pedal and take other actions as necessary.
 - Following begins from a short following distance, such as when the vehicle in front is a vehicle that cut into your lane.

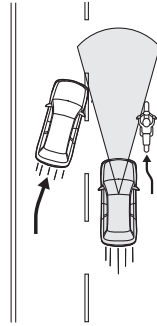

S01975

- On curved roads, at the start and end of a curve and on roads with continuous curves (These conditions make it difficult for the system to detect vehicles because they are outside the detectable area.)
- On an on-ramp or off-ramp to a freeway, highway, or other restricted access road (EyeSight Adaptive Cruise Control is not designed for use in this kind of driving environment.)

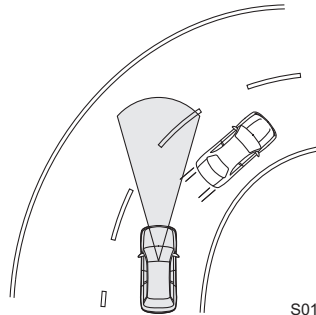


S01976

- In an urban or suburban environment (Adaptive Cruise Control is not appropriate for use in these driving areas. Use Adaptive Cruise Control only on limited-access highways.)

Continued on next page ⇒


⇒ Continued from previous page

- The vehicle in front is not directly ahead of your vehicle and is shifted to one side.

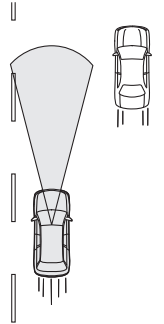

S01977

- There is an obstacle on the side of the road.
- The relative speed difference compared to the vehicle in front is large.
- A vehicle cuts into your lane in front of you.
- The distance between vehicles is extremely short.
- Your vehicle is drifting within the lane.
- On a bumpy or unpaved road surface

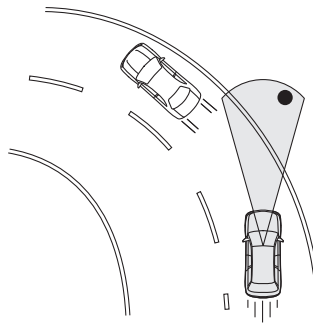

S01978

- On a road with extremely narrow lanes, such as when traffic restrictions are in effect or in areas where construction work is taking place
- Normal driving has become unstable due to an accident or malfunction.
- Extremely heavy cargo is loaded in the cargo area or rear seat of your vehicle.
- There are limits to the situation judgment capabilities of the Adaptive Cruise Control system. Deceleration may not take place in time in the following situations. Apply the brake pedal to decelerate the vehicle if necessary.
 - The speed difference with the vehicle in front is too large or the vehicle in front decelerates unexpectedly.
 - The decelerating vehicle in front unexpectedly slows down or suddenly brakes.

- If the alert/notification sounds frequently, do not use Adaptive Cruise Control.
 - Even when the following distance is short, the “Obstacle Detected” warning may not activate in the following situations.
 - The difference in speed with the vehicle in front is small. The two vehicles are traveling at almost the same speed.
 - The vehicle in front is traveling faster than your vehicle. The following distance is gradually increasing.
 - Another vehicle cuts into your lane very close to your vehicle.
 - The vehicle in front decelerates suddenly.
 - There are repeated uphill and downhill grades.
- *: The recognition status of the lead vehicle using the stereo camera can be confirmed by the illumination status of the lead vehicle indicator.
- ⇒ Page 77

**CAUTION**

- After Adaptive Cruise Control has started, it maintains control continuously according to the movement of the vehicle in front. When your vehicle comes to a stop if the vehicle in front has stopped, the stay-stopped function is engaged. However, if the EyeSight stereo camera has lost detection of the vehicle in front, the system may not stop your vehicle. Operate the brake pedal and maintain the correct following distance as necessary. Be aware that the EyeSight system has difficulty detecting objects or vehicles that have a relative speed in comparison to your vehicle. Therefore, if the EyeSight system loses detection just as you are approaching a line of stopped cars, for example, you will have to brake manually.
- There is no possibility that the vehicle will automatically begin moving from a stay-stopped condition without operation from the driver.
- If the conditions for automatically canceling cruise control (⇒ page 89) are met while the vehicle is stay-stopped, Adaptive Cruise Control is canceled. For safety reasons, the electronic parking brake is automatically applied.
- Braking may not be sufficient depending on the following conditions. Depress the brake pedal and decelerate as necessary.
 - Vehicle conditions (amount of load, number of occupants, etc.)
 - Road conditions (grade, slipperiness, shape, bumps, etc.)
 - Vehicle maintenance condition (brake systems, tire wear, air pressure, temporary spare tire is being used, etc.)
 - The brakes are cold. (For example, just after the e-BOXER system is started or the outside temperature is low.)
 - For a short period of time when driving after the e-BOXER system is started until the engine has warmed-up
 - The brakes are overheated on downhill grades (braking performance may be reduced).
 - In rain or after washing the vehicle (the brakes may become wet and braking performance may be reduced.)


■ How to use Adaptive Cruise Control

● Setting Adaptive Cruise Control

(1) Setting Adaptive Cruise Control to standby status

Press the  (CRUISE) switch. At this time,  (Adaptive Cruise Control indicator) (white), your vehicle indicator and the following distance setting indicator are displayed on the EyeSight display area of the combination meter display.


The set vehicle speed display will read “- - - km/h (- - MPH)”.

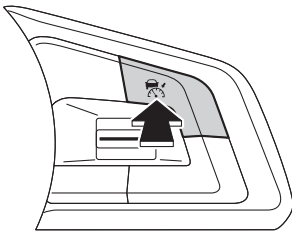

S03393

Following
distance
setting
indicator

Adaptive
Cruise
Control
indicator
(white)

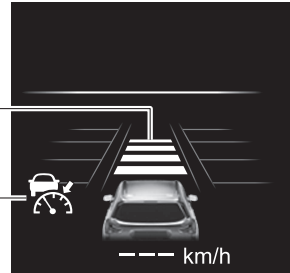

S03729

To set the ready status:

Adaptive Cruise Control can be activated when all of the following conditions are met and **READY** (READY indicator) is displayed on the EyeSight display area.

- All doors (except the rear gate) are closed.
- The driver's seatbelt is fastened.
- The electronic parking brake is not engaged. The electronic parking brake indicator light is turned off.
- The select lever is in the “D” or “M” position.
- The brake pedal is not depressed while driving or the brake pedal is strongly depressed while stopping.
- EyeSight operation is not temporarily stopped.  (EyeSight temporary stop indicator: White) is turned off.

READY
indicator



S03730

⇒ Page 186

- The road is not a steep slope.
- The steering wheel has not been turned significantly in either direction.
- The X-MODE is not turned on (the X-MODE indicator goes off).
- The vehicle speed is between 0 km/h (0 mph) and approximately 180 km/h (110 mph).
- The gasoline particulate filter warning light is not flashing. (if equipped)
- The engine is not running at a high rpm.
- Vehicle Dynamics Control or the Traction Control Function is not active.



NOTE


For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Adaptive Cruise Control may not be used.

(2) Setting Adaptive Cruise Control

Press the RES/SET switch to the "SET/-" side or the "RES/+" side.


Adaptive Cruise Control is activated and control starts, using the vehicle speed at the time when the switch was pressed as the set vehicle speed.

If no vehicle in front has been detected, the vehicle drives at the constant set vehicle speed.

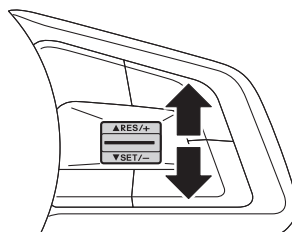

S03394

When Adaptive Cruise Control is activated, **READY** (READY indicator) turns off, the set vehicle speed is displayed, and  (Adaptive Cruise Control indicator) changes from white to green.

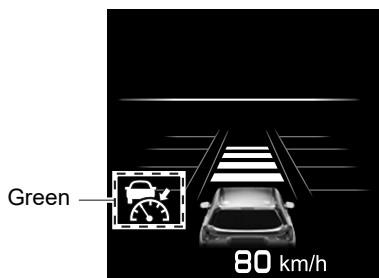

S03050



WARNING

When using Adaptive Cruise Control, always set the speed according to the speed limit, traffic flow, road conditions, and other conditions.


**NOTE**

- The set vehicle speed can be set between 30 km/h (20 mph) and 180 km/h (110 mph).
- If the vehicle speed is approximately 30 km/h (20 mph) or less when the vehicle speed is set, the set vehicle speed is set to 30 km/h (20 mph).
- When driving on a curve, the vehicle may not accelerate, or may decelerate, even if the set vehicle speed is higher than the current vehicle speed.
- If  (Adaptive Cruise Control indicator) does not illuminate even when the  (CRUISE) switch is pressed, Adaptive Cruise Control will not operate.
- If  (Adaptive Cruise Control indicator) does not illuminate even when the  (CRUISE) switch is pressed and this occurs frequently, there may be a malfunction in the system. Contact a SUBARU dealer and have the system inspected.

When a vehicle in front is detected, a notification sounds 1 short beep and the lead vehicle indicator will illuminate.

The vehicle follows the lead vehicle in front and maintains the selected following distance. At this time, the cruise speed is adjusted to and will not exceed the set vehicle speed. If the vehicle in front is no longer detected, a notification sounds 1 short beep and the lead vehicle indicator turns off. While the driver accelerates the vehicle by depressing the accelerator pedal,

Lead vehicle indicator

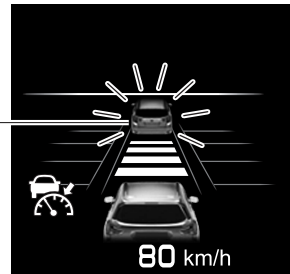

S03051

the vehicle by depressing the accelerator pedal,  (Adaptive Cruise Control indicator) will turn from green to white. When acceleration has stopped,  (Adaptive Cruise Control indicator) will turn from white to green.

**NOTE**


The notification sound (lead vehicle acquisition sound) that occurs when a vehicle in front is detected or no longer detected while Adaptive Cruise Control is activated can be turned off by customization.

⇒ Page 189

Operation of Adaptive Cruise Control

- When no vehicle in front is detected


The vehicle drives constantly and correspondingly to the set vehicle speed between 30 km/h (20 mph) and 180 km/h (110 mph).

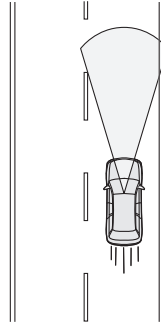

S01979

- When a vehicle in front is detected

The vehicle follows the lead vehicle in front, and will maintain the chosen following distance (there are four settings), up to the set vehicle speed between 30 km/h (20 mph) and 180 km/h (110 mph).

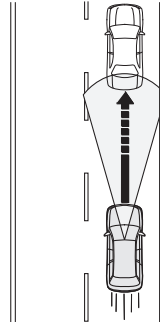


S01980

- If your vehicle no longer detects the vehicle in front

The vehicle gradually accelerates back to the set vehicle speed and will drive at that constant speed.

If a vehicle in front is detected while accelerating to the set vehicle speed, vehicle following will be started again.

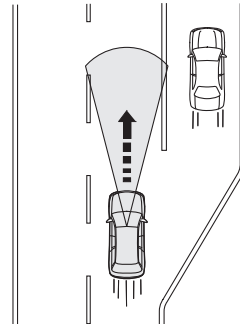

S01981



CAUTION

If you operate the brake pedal during automatic braking, the pedal may feel stiff. However, this is normal. By depressing the brake pedal further, you can apply more braking force. Apply more braking force as necessary.

**NOTE**

- When the brakes are applied by Adaptive Cruise Control, the vehicle's brake lights will illuminate.
- Even if there is no lead vehicle present, on a downhill grade, the Adaptive Cruise Control's automatic brake may operate in order to maintain the set vehicle speed.
- Some noises may be audible during automatic braking. This is caused by the braking control and does not indicate a malfunction.
- To temporarily accelerate quickly, use the accelerator pedal. After accelerating, the vehicle will gradually return to the set vehicle speed shown in the set vehicle speed display.
- If the vehicle in front is no longer detected while your vehicle is still controlled by the automatic braking operation, the brake will be automatically released gradually. Depress the accelerator pedal if necessary.
- If a far away object is recognized as a possible lead vehicle, acceleration will be reduced early.
- The lead-vehicle following function has the following characteristics:
 - If the system detects that the lead vehicle has changed lanes, acceleration to the set vehicle speed will start early.
 - If the lead vehicle's brake lights are detected, deceleration will start earlier than without detection.
 - If the vehicle moves to the fast lane while traveling more than approximately 60 km/h (37 mph), the system starts acceleration to the set vehicle speed more quickly because it is linked with the turn signal.
 - If you operate the turn signal lever at a speed of approximately 10 km/h (6 mph) or more, depending on the surrounding conditions, a vehicle in the lane on the side you indicated with the turn signal may be recognized as the lead vehicle, and your vehicle will maintain the following distance according to that vehicle's speed.
 - If the setting of Driving Lane Customize is different from the actual driving direction, the vehicle may start to accelerate faster than usual when the driver signals a lane change to move from the passing lane to the driving lane.


⇒ Page 193

● Increasing the set vehicle speed

▼ Using the RES/SET switch

- Push to the “RES/+” side briefly.
Every time the switch is pushed, the set vehicle speed will increase to the next 5 km/h (5 mph) increment.
- Push to the “RES/+” side continuously.
While the switch is being pushed, the set vehicle speed will increase in increments of 1 km/h (1 mph).


When operating the switch, the set vehicle speed changes on the combination meter display.

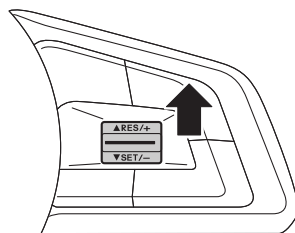

S03395

▼ Using the accelerator pedal

1. Depress the accelerator pedal to increase vehicle speed.
2. When the desired speed is reached, press the RES/SET switch to the “SET/-” side.
The speed at the time of pressing the switch will be set as the new set vehicle speed, and it appears on the EyeSight display area.

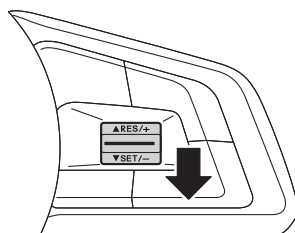

S03396

CAUTION


- When the vehicle is following the lead vehicle, the actual vehicle speed is controlled according to the lead vehicle. Therefore, if the RES/SET switch is pressed to the “RES/+” side and set to a speed higher than the speed of the lead vehicle, the vehicle will not accelerate; it will maintain a safe following distance as the first priority. However, because doing so changed the set vehicle speed, when the lead vehicle is no longer detected (for example, if you change to a freeway lane with no vehicles in front), the vehicle will accelerate to that new set vehicle speed. Change the set vehicle speed while briefly checking the value shown in the set vehicle speed display on the EyeSight display area.
- When the accelerator pedal is depressed with Adaptive Cruise Control on, automatic braking control and warnings by Adaptive Cruise Control will not occur. However, if there is a high risk of collision with an obstacle in front of the vehicle at this time, the warning and braking control of Pre-Collision Braking System may activate.

● Decreasing the set vehicle speed

▼ Using the RES/SET switch

- Push to the “SET/-” side briefly.
Every time the switch is pushed, the set vehicle speed will decrease to the next 5 km/h (5 mph) decrement.
- Push to the “SET/-” side continuously.
While the switch is being pushed, the set vehicle speed will decrease in decrements of 1 km/h (1 mph).

When operating the switch, the set vehicle speed changes on the combination meter display.

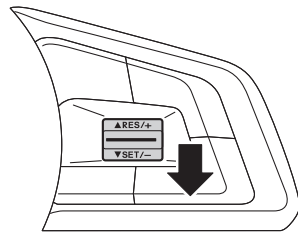

S03396

▼ Using the brake pedal

1. Depress the brake pedal to decrease the vehicle speed.
Adaptive Cruise Control will be canceled and  (Adaptive Cruise Control indicator) changes from green to white.
2. When the desired speed is reached, press the RES/SET switch to the “SET/-” side.
The speed at the time of pressing the switch will be set as the new set vehicle speed, and it appears on the EyeSight display area.

●Accelerating temporarily

Depress the accelerator pedal to accelerate temporarily.

When the accelerator pedal is released, the vehicle returns to the set vehicle speed.


When the driver accelerates the vehicle by depressing the accelerator pedal while Adaptive Cruise Control is operating,  (Adaptive Cruise Control indicator) turns white. When the acceleration is completed,  (Adaptive Cruise Control indicator) returns to green.

●Decelerating temporarily

Depress the brake pedal to decelerate temporarily. When the brake pedal is depressed, Adaptive Cruise Control will be canceled.

 (Adaptive Cruise Control indicator) changes from green to white while the set vehicle speed remains displayed on the EyeSight display area.

Release the brake pedal and press the RES/SET switch to the “RES/+” side to reset the set vehicle speed.

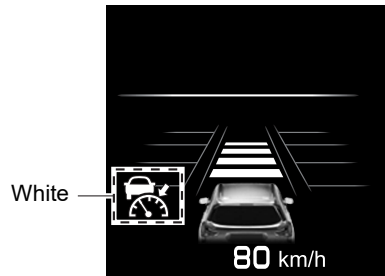

S03050


CAUTION

Ordinarily, while the vehicle is following the lead vehicle, acceleration and deceleration are performed automatically in accordance with the speed of the lead vehicle. However, when your vehicle approaches a lead vehicle, for example if it is necessary to accelerate for a lane change or other reason, and if the vehicle in front suddenly decelerates, or if another vehicle cuts into your path, operate the accelerator pedal or brake pedal to accelerate or decelerate as appropriate for the existing conditions.

● Changing the following distance from the vehicle in front

The following distance from the vehicle in front setting can be changed in 4 stages.

- ▲ : When the switch (▲ side) is pressed, the following distance will be longer.
▼ : When the switch (▼ side) is pressed, the following distance will be shorter.

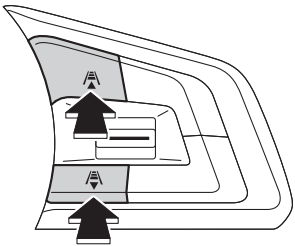

S03397



NOTE

- The following distance changes corresponding with the vehicle speed. The faster the vehicle travels, the greater the following distance.

Approximate guide to following distances


Following distance indicator	When your vehicle speed is 40 km/h (25 mph)	When your vehicle speed is 100 km/h (60 mph)
	Approx. 30 m (100 ft)	Approx. 60 m (200 ft)
	Approx. 25 m (80 ft)	Approx. 50 m (160 ft)
	Approx. 20 m (65 ft)	Approx. 40 m (130 ft)
	Approx. 15 m (50 ft)	Approx. 30 m (100 ft)

- The following distance previously set is restored when you turn back on Adaptive Cruise Control by pressing the  (CRUISE) switch.

●Stay-stopped function

If the vehicle in front comes to a stop while you are utilizing Adaptive Cruise Control, your vehicle will also come to a stop and will stay stopped.

Once your vehicle has come to a complete stop with the vehicle in front, Adaptive Cruise Control is paused and the stay-stopped function is engaged. When  (Adaptive Cruise Control indicator) changes from green to white, **HOLD** (HOLD indicator) and **READY** (READY indicator) will be displayed.

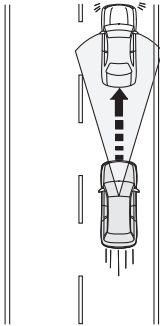


S01982

Adaptive
Cruise
Control
indicator
(white)

READY
indicator

HOLD
indicator

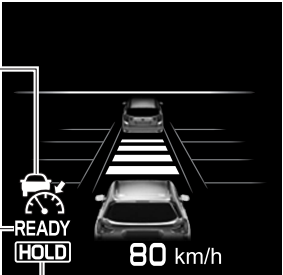

S03243

Regardless of whether or not there is a vehicle in front, if the brake pedal is strongly depressed while the vehicle is stopped, **READY** (READY indicator) illuminates. Operating the RES/+ switch or SET/- switch at this time activates the stay-stopped function.

When starting the stay-stopped function, **HOLD** (HOLD indicator) illuminates and **READY** (READY indicator) turns off. **READY** (READY indicator) will illuminate again by releasing the brake pedal.



CAUTION

Approximately 3 seconds are required from when the vehicle stops until the stay-stopped function activates. Because there is the possibility that the vehicle may start moving before the stay-stopped function activates, pay attention to the surroundings and depress the brake pedal as necessary.



NOTE

If you apply the brake pedal softly, the stay-stopped function may not start. In this case, **READY** (READY indicator) will not illuminate.

▼ Resuming Adaptive Cruise Control in stay-stopped status

Setting using the RES/SET switch

Even when the vehicle in front remains stopped, Adaptive Cruise Control can be activated by operating the RES/+ switch or SET/- switch. **HOLD** (HOLD indicator) and **READY** (READY indicator) turn off, and  (Adaptive Cruise Control indicator) changes from white to green.

- Press the SET/- switch. The speed is automatically set to 30 km/h (20 mph).
- Press the RES/+ switch. The vehicle speed that was set before the stay-stopped function activated is set again.

⇒ Page 91



NOTE

When Adaptive Cruise Control is resumed from stay-stopped status and the vehicle in front accelerates, your vehicle will also accelerate and continue to follow the vehicle in front at the previously set following distance. However, if the lead vehicle does not start moving or pauses, stay-stopped status will be automatically restored after approximately 3 seconds.

Setting with the accelerator pedal

Depressing the accelerator pedal while stay-stopped is engaged cancels stay-stopped status. At this time, Adaptive Cruise Control is resumed. The vehicle will attempt to travel at the previously set vehicle speed unless a lead vehicle is detected. If a lead vehicle is detected, Adaptive Cruise Control will maintain the previous following distance setting.



WARNING

When the stay-stopped function is canceled, the vehicle will start. Make sure the surroundings are safe before canceling the stay-stopped function.



NOTE

If the accelerator pedal is only slightly depressed, the stay-stopped function may not be canceled, and Adaptive Cruise Control may not be resumed.

▼Canceling the stay-stopped function

If any of the following operations are performed while the vehicle is in the stay-stopped function (⇒ page 84), the stay-stopped function will be canceled and Adaptive Cruise Control will be canceled at the same time.

- The brake pedal is depressed.
- The  (CRUISE) switch is pressed.
- The electronic parking brake switch is operated to manually apply the electronic parking brake.
- The LIM (Manual Speed Limiter) switch is pressed (if equipped).



WARNING

- When the stay-stopped function is canceled by pressing the  (CRUISE) switch, the vehicle will start to creep. Depress the brake pedal as necessary.
- For models with Manual Speed Limiter, when the LIM (Manual Speed Limiter) switch is pressed, Adaptive Cruise Control is canceled. At this time the electronic parking brake does not activate and the vehicle creeps forward. Depress the brake pedal as necessary in order to prevent an accident.
- Do not exit the vehicle while the stay-stopped function is engaged.
- The stay-stopped function is not a replacement for engaging the electronic parking brake. When parking, always apply brakes manually to come to a full stop, then set the electronic parking brake.
- When you exit the vehicle, apply the electronic parking brake, shift the select lever to the "P" position and turn the ignition switch to the OFF position.

**CAUTION**

The stay-stopped function of cruise control will be canceled under the following conditions:

- The vehicle is in stay-stopped mode for approximately 2 minutes or more. A notification will sound 5 intermittent beeps, 1 short beep and 1 long beep.
- Any condition in which automatic cancellation is met. A notification sounds 1 short beep and 1 long beep.

⇒ Page 88

After the stay-stopped function has been canceled, the electronic parking brake will be automatically applied and the electronic parking brake indicator light will illuminate. However, if any canceling condition for the electronic parking brake (i.e. the interlock system with the accelerator pedal, switch operation of the electronic parking brake, etc.) is fulfilled, the electronic parking brake will not work. For details, refer to the Owner's Manual for your vehicle.

If the accelerator pedal is only slightly depressed while the stay-stopped function is activated, the stay-stopped function of cruise control may be canceled, and the electronic parking brake may not work.

▼ **Setting Adaptive Cruise Control while the electronic parking brake is applied**

If the electronic parking brake is applied before setting Adaptive Cruise Control, release the electronic parking brake by depressing the accelerator pedal or by other specified means. For details of how to release the electronic parking brake, refer to the Owner's Manual for your vehicle.

●Canceling Adaptive Cruise Control


▼Canceling by driver operation

Any of the following operations will cancel Adaptive Cruise Control.

- Depress the brake pedal.

 (Adaptive Cruise Control indicator) changes from green to white while the set vehicle speed remains displayed on the EyeSight display area.


White

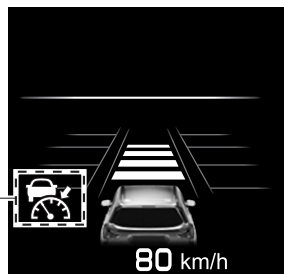

S03050

- Press the  (CRUISE) switch.

 (Adaptive Cruise Control indicator) changes from green to white while the set vehicle speed remains displayed on the EyeSight display area.

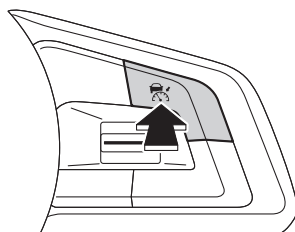

S03393


▼ Automatic cancellation by the system

In the following cases, a notification will sound 1 short beep and 1 long beep and Adaptive Cruise Control is automatically canceled.



(Adaptive Cruise Control indicator) changes from green to white. Also, the Adaptive Cruise Control cancellation message is displayed on the screen. If the stay-stopped function is engaged (⇒ page 84), the electronic parking brake will be automatically engaged.

White

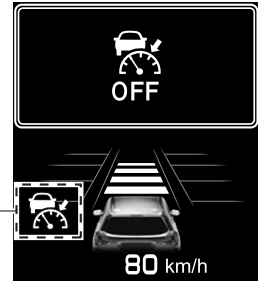

S03053

- The grade of the road is very steep.
- The Vehicle Dynamics Control or the Traction Control Function is activated.
- The vehicle speed has exceeded approximately 200 km/h (125 mph) while cruise control is activated.
- The steering wheel is turned significantly in either direction.
- The select lever is moved to a position other than "D" or "M".
 - Adaptive Cruise Control can be resumed after the select lever is returned to the "D" or "M" position.
- Any door (except the rear gate) is opened.
- The driver's seatbelt is unfastened.
- The electronic parking brake is engaged manually.
- The accelerator pedal was depressed continuously for a long time.
- The engine speed increased to a high rpm.
- The X-MODE is turned on (the X-MODE indicator illuminates).
 - Adaptive Cruise Control can be resumed after the X-MODE is turned off.
- The EyeSight system has a malfunction. (EyeSight warning indicator: Yellow)
 - ⇒ Page 184
- The EyeSight system has stopped temporarily. (EyeSight temporary stop indicator: White)
 - ⇒ Page 186
- The Pre-Collision secondary braking is activated.
- The gasoline particulate filter warning light is flashing. (if equipped)



WARNING

Do not use Adaptive Cruise Control on slippery roads. Doing so may result in an accident.



CAUTION

- When shifting the select lever to the “N” position, Adaptive Cruise Control will be automatically canceled. Do not shift the lever to the “N” position unless in an emergency. Otherwise the engine brake may not operate, which could cause an accident.
- If Adaptive Cruise Control is canceled automatically by the system right after the vehicle stops (in approximately 1 second), the electronic parking brake will not operate.
⇒ page 84




NOTE


- If EyeSight is malfunctioning,  (EyeSight warning indicator: Yellow) is displayed on the combination meter display. If this occurs, stop the vehicle in a safe location and then turn off the e-BOXER system and restart it. If the indicators remain illuminated after restarting the e-BOXER system, Adaptive Cruise Control cannot be used. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
⇒ Page 184
- If the EyeSight operation has temporarily stopped,  (EyeSight temporary stop indicator: White) is displayed on the combination meter display.
⇒ Page 186
- When the operation of Adaptive Cruise Control has been automatically canceled, perform the Adaptive Cruise Control setting operation again after the condition that caused the cancellation has been corrected. If the Adaptive Cruise Control function cannot be activated even after the condition has been corrected, EyeSight may be malfunctioning. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
- For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Adaptive Cruise Control may not be used.

● Restoring the previously set vehicle speed

The previously set vehicle speed is stored in memory. To restore that vehicle speed, press the RES/SET switch to the "RES/+" side.  (Adaptive Cruise Control indicator) changes from white to green.

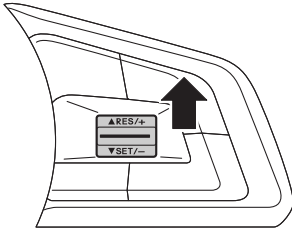

S03395

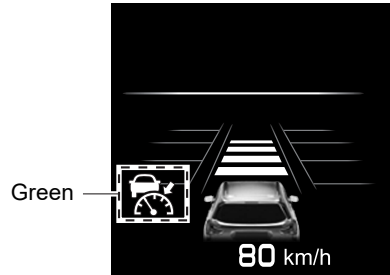

S03050



NOTE


- The vehicle speed stored in memory is erased in the following circumstances:
 - The cruise control is turned off by pressing the  (CRUISE) switch.
 - The LIM (Manual Speed Limiter) switch is pressed to change from Adaptive Cruise Control to Manual Speed Limiter (if equipped).
 - The cruise control mode was switched from Adaptive Cruise Control to Conventional Cruise Control.
 - If there is no vehicle speed stored in the memory (previous vehicle speed), the current vehicle speed is set when the RES/SET switch is pressed to the "RES/+" side.
- ⇒ Page 76

●Turning off Adaptive Cruise Control

Any of the following operations will turn off Adaptive Cruise Control.

- When Adaptive Cruise Control is not active, press the  (CRUISE) switch.

 (Adaptive Cruise Control indicator) turns off on the EyeSight display area.

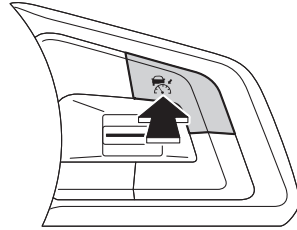


S03393

- Press the LIM (Manual Speed Limiter) switch (if equipped).


Adaptive Cruise Control is turned off and Manual Speed Limiter turns on.

 (Adaptive Cruise Control indicator) turns off on the EyeSight display area and  (Speed Limiter indicator) illuminates white.

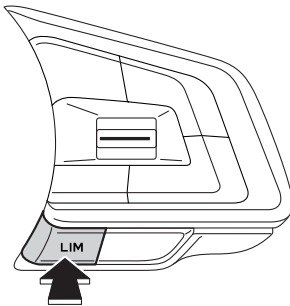

S03490

Speed
Limiter
indicator
(white)

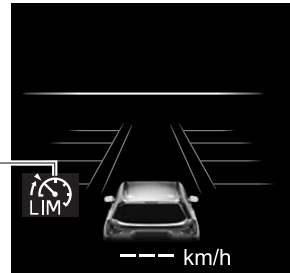

S03626

■ Other functions

● “Obstacle Detected” warning

The “Obstacle Detected” warning is activated while Adaptive Cruise Control is following a lead vehicle. This function warns the driver when it determines that the current level of deceleration by automatic braking control is insufficient.

- When the system determines that the vehicle speed needs to be reduced manually by the driver, an alert will sound repeated short beeps and an interruption screen will be displayed.
- When this function activates, depress the brake pedal to decelerate and maintain an optimal following distance.



S03207



WARNING

- If the alert/notification sounds frequently, do not use Adaptive Cruise Control.
- The “Obstacle Detected” warning will not activate in the following situations.
 - The accelerator pedal is depressed.
 - The brake pedal is depressed.
- Even when the following distance is short, the “Obstacle Detected” warning may not activate in the following situations.
 - The difference in speed with the vehicle in front is small. The two vehicles are traveling at almost the same speed.
 - The vehicle in front is traveling faster than your vehicle. The following distance is gradually increasing.
 - Another vehicle cuts into your lane very close to your vehicle.
 - The vehicle in front decelerates suddenly.
 - There are repeated uphill and downhill grades.
- The “Obstacle Detected” warning may not activate in time in the case of a vehicle that is stopped at the end of a line at a toll gate, at a stop light or intersection or in traffic congestion, or a vehicle that is moving much slower than your vehicle. EyeSight requires a speed differential in order to recognize a potential obstacle and react to it.




NOTE

Vehicles in front in the same traffic lane are detected by the stereo camera within a distance of approximately 130 m (426 ft) in the forward direction. However the detection distance may be reduced depending on the traffic environment, driving conditions, and conditions of the vehicle in front.

Lane Centering Function

The stereo camera detects lane markings (including Botts' dots) of the lane and the lead vehicle and the system assists the steering operation by working with the electric power steering to help keep your vehicle in its lane when driving on expressways, freeways and motorways.

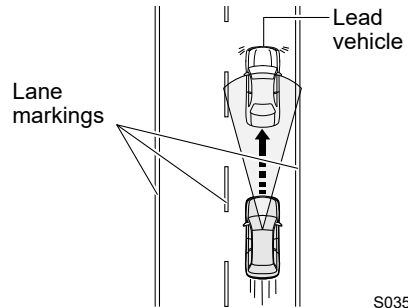


S03576

This function can be used when Adaptive Cruise Control is activated.

⇒ Page 75

When driving at speeds of 0 km/h (0 mph) to approximately 160 km/h (100 mph), the system detects the lane markings and/or the lead vehicle and assists the driver with steering control in order to help keep the vehicle close to the center of the lane and follow the lead vehicle.

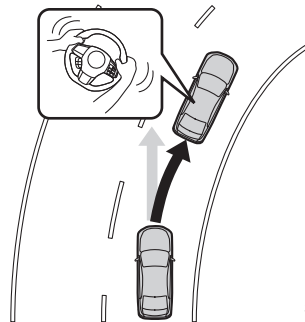

S03661



WARNING

Lane Centering Function is not an automatic driving system. Do not overestimate the capabilities of Lane Centering Function. It is not a system to assist inattentive driving or meant to permit driving without holding the steering wheel. Make sure to grip the steering wheel while driving. To drive safely, check the distance from the vehicle in front or from a vehicle driving in parallel with your vehicle, the surrounding conditions and the surrounding environment while driving.

Continued on next page ⇒

⇒ Continued from previous page

If you feel that the level of control and timing by the system are different from your own driving style, the system may not support safe driving. Do not use Lane Centering Function.

Lane Centering Function does not always operate under all situations. If you rely only on Lane Centering Function to stay in a lane, it may cause an accident such as a collision with an obstacle beside your lane or with a vehicle driving in an adjacent lane.

- Check that there are no problems with the tires and brakes during a daily inspection before using the system.
- The system may not operate properly under the following conditions. Do not use Lane Centering Function.
 - The air pressure of tires is not to specification.*1
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*1
 - Tires that are the wrong size are installed.*1
 - The wheels are out of balance (e.g., the balance weight is removed or misaligned).*1
 - The wheels are out of alignment.*1
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including genuine SUBARU parts).
 - An object that obstructs the stereo camera's view is installed on the vehicle.
 - Tire chains are installed.
 - There is an abnormal vibration in the steering wheel or the steering wheel is heavier than usual.
 - The steering wheel has been replaced with parts other than genuine SUBARU parts.

- The headlights are dirty or they have snow, ice or dirt on them. (Objects are not adequately illuminated and are difficult to detect.)
- The headlights are not aligned correctly. (Objects are not adequately illuminated and are difficult to detect.)
- The headlights, fog lights and other lights have been modified.
- Vehicle operation has become unstable due to an accident or malfunction.
- The brake system warning light (red) is illuminated.*²
- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- The maximum number of occupants is exceeded.
- A trailer or another vehicle, etc. is being towed.
- The combination meter is not operating properly. For example, an indicator light or a warning light on the combination meter does not properly turn on or off, a beep does not sound, or the indication on the combination meter display is different from when it is normal.*³

*1: The wheels and tires have functions that are critically important. Be sure to use the correct ones.

For details, refer to the Owner's Manual for your vehicle.


*2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.

*3: For details about the functions and operations of the combination meter, refer to the Owner's Manual for your vehicle.

Continued on next page ⇒

⇒ Continued from previous page


- Lane Centering Function is designed for use on expressways, freeways, toll roads, motorways and similar limited access roads. It is not intended to be used in city traffic. In the following conditions, do not use Lane Centering Function. Doing so may result in an accident.
 - Ordinary roads (roads other than those mentioned above)
Depending on the driving environment (complexity of roads and other factors), the system may not be able to perform as the traffic conditions require, and that may result in an accident.
 - Roads with sharp curves
 - Roads with lane restrictions or tentative lanes due to construction work, etc.
 - Old lane markings remain.
 - Avoiding parked vehicles
 - Snow, puddles or snow melting agents remain on the road surface.
 - Cracks or constructed traces remain on the road surface.
 - Frozen roads, snow-covered roads or other slippery road surfaces

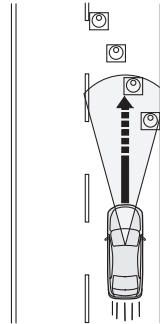

S01893

- The tires may spin, causing loss of control of the vehicle.
- Entering a sharp curve into an interchange or junction, or a service area, parking area, toll booth or other facilities
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Rain or dirt has not been fully wiped off of the windshield. There is a risk of that the stereo camera may not detect the lanes.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).

- The stereo camera may have difficulty detecting the lane markings under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings on the lane you are driving in (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.
 - The shape of a curve in the road suddenly changes.
 - Shadows of guardrails or similar objects are overlapped on the lane markings.
 - Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
 - The width of a lane is either too narrow or too wide.
 - The width of a lane has changed.
 - The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.

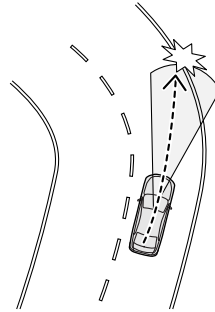


S03022

Continued on next page ⇒


⇒ Continued from previous page

- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).

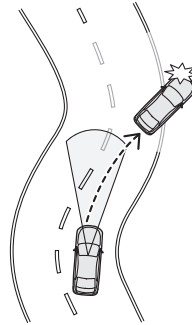

S02855


- Going into lanes that lead to interchanges, junctions, service areas or parking areas
- There is a curb or a side wall on the road shoulder.
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

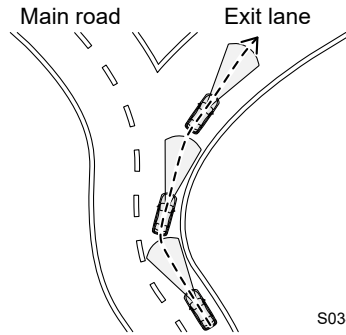

S03482


- Under the conditions below, the stereo cameras may have difficulty in detecting the vehicle in front, and Lane Centering Function may not operate as expected.
In addition, depending on the behavior of the vehicle in front and the surrounding traffic conditions, there is the risk of an unexpected accident (for example, a collision with a vehicle in the neighboring lane or a guardrail).

- The vehicle in front changes lanes, turns left or right, or takes similar action.
- The vehicle in front is drifting.

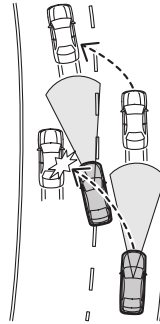



S03399

- The vehicle in front is not driving in the center of the lane and is driving with wheels on or over either side of the lane markings or at the edge of the lane.

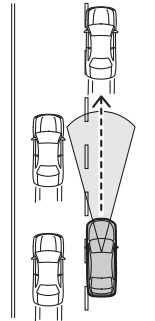

S03400

- The behavior of the vehicle in front changes suddenly (such as at the start or end of a curve or on a road with continuous curves and corners).

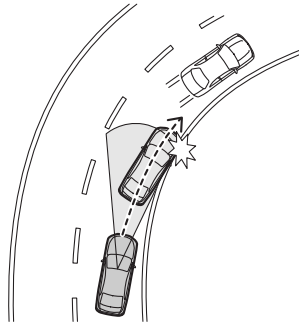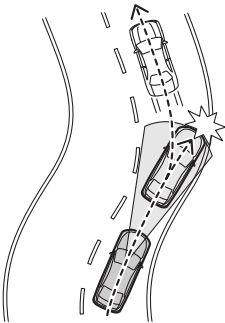

S03522

Continued on next page ⇒

⇒ Continued from previous page

- The vehicle in front moves to avoid a vehicle stopped on the shoulder on the road or an obstacle in the road.
- Your vehicle is passing a vehicle in your lane or that is close to the lane marking (motorcycle or other similar vehicle).
- There is a motorcycle or similar vehicle traveling next to or passing the vehicle in front.
- Another vehicle cuts between the vehicle in front and your vehicle.
- The vehicle in front is operating a turn signal, hazard warning flashers, or similar light.
- At night or in a tunnel without the headlights on
- Driving at night or in a tunnel when there is a vehicle in front that does not have its taillights on
- Lane Centering Function may be unable to continue operating when the vehicle in front has a unique shape or due to the surrounding environment.
 - The rear aspect of the vehicle in front is low, small or irregular (the system may recognize another part of the vehicle as its rear and will determine operation from that).
 - There is an empty truck or trailer with no rear and/or side panels on the cargo bed.
 - Vehicles that have cargo protruding from their back ends
 - Non-standard shaped vehicles (vehicle transporters or vehicles with a sidecar fitted, etc.)
 - The height of the vehicle is low, etc.
 - The vehicle in front is a compact car, motorcycle, or other narrow vehicle.
 - The relative speed difference compared to the vehicle in front is large. (The vehicle in front pulls away.)
 - Bad weather (for example heavy rain, a blizzard or thick fog)
 - There is sunlight, headlights, or other light reflecting from the rear of the vehicle in front.
 - Strong light is coming from the front (for example, sunlight at dawn, sunset or headlight beams, etc.).
 - The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
 - Fluid has not been fully wiped off the windshield during or after washer use.

**CAUTION**

- The performance of Lane Centering Function may not be optimal under the following conditions. In addition, Lane Centering Function may not operate or the operation may be canceled.
 - Immediately after the weight of your vehicle changes radically
 - Immediately after the replacement of a tire or the adjustment of tire pressure
 - Immediately after the adjustment, repair or replacement of the camera or related components
 - Immediately after the repair or replacement of the suspension or steering system
 - A winter tire or a tire other than a genuine SUBARU tire is used.
 - The vehicle is in a crosswind.
 - The road grade abruptly changes (uphill or downhill).
 - The grade of the crossing direction in a road is large or changes abruptly.
 - Unevenness, winding and joint of a road surface
 - The acceleration/deceleration is high.
 - Immediately after starting the e-BOXER system when the outside temperature is low.
 - The outside temperature is high.
- When you do not use Lane Centering Function, make sure to turn off the  (Lane Keep Assist) switch. If the switch is left on, the function may operate unexpectedly, causing an accident.
- If you turn on the  (Lane Keep Assist) switch, the operation power of electric power steering may change.

■ Activated status of Lane Centering Function

Activated status



Canceled status



S04141


When Lane Centering Function activates, the screen of the multi-function display changes to the EyeSight screen and shows Lane Centering Function activated status. When operation of Lane Centering Function is canceled by driver operation or automatically by the system, the EyeSight screen changes from Lane Centering Function activated status to canceled status. When 10 seconds have passed after Lane Centering Function was canceled, the screen changes back to the screen that was displayed before the interruption screen.

● Steering wheel operation


The steering wheel on the multi-function display turns to match the actual operation of the steering wheel.

■ How to use Lane Centering Function

If  (Lane Keep Assist indicator) is not turned on, press the  (Lane Keep Assist) switch.

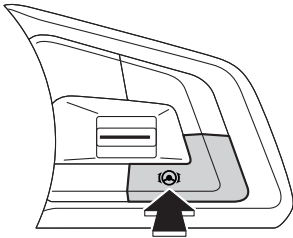

S03398

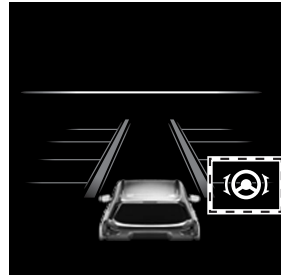

Lane
Keep
Assist
indicator
(white)

S03476

Activate Adaptive Cruise Control.

⇒ Page 75




Adaptive
Cruise
Control
indicator
(green)

H00294

Lane Centering Function starts operating when all of the following conditions are met.

- Lane Centering Function is turned on in the customizing functions.
- Adaptive Cruise Control is activated.
- The vehicle speed is between 0 km/h (0 mph) and approximately 160 km/h (100 mph).
- The system is detecting the lane markings or the lead vehicle.
- The driver is operating the steering wheel.
- On a straight road or gentle curve
- On a road that has a lane width that is between approximately 3 m (10 ft) and 4 m (13 ft)
- Driving near the center of a lane

While the function is operating,  (Lane Keep Assist indicator) on the combination meter display changes from white to green. At this time, if the function is operating by detecting the lane markings, then the lane indicator illuminates blue. If it is operating by detecting the lead vehicle, the Lane Centering lead vehicle indicator illuminates blue. The EyeSight screen on the multi-function display also indicates the activated status of Lane Centering Function.

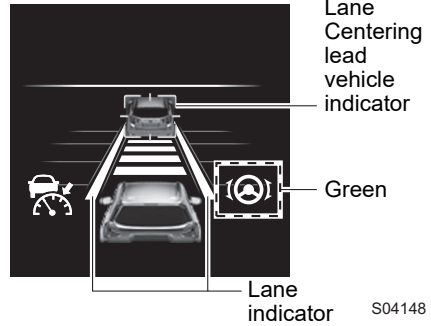

WARNING

When Lane Centering Function is operating and the lane markings are not detected, steering operation will occur automatically to track the vehicle in front when the vehicle in front changes lanes or performs similar movement. Always be aware of surrounding vehicles and obstacles, and operate the steering wheel as necessary. Relying on Lane Centering Function for steering operation could lead to an accident, resulting in serious injury or death.



CAUTION

If you grip the steering wheel firmly, the system may determine that you are operating the steering wheel and reduce the level of assistance.

**NOTE**

- The Lane Centering Function on/off setting can be changed.
⇒ Page 189
- Depending on the lane detection status, the lane indicator may illuminate (blue) on one side (left or right) only.

● Canceling Lane Centering Function

▼ Canceling by driver operation

Any of the following operations temporarily cancels Lane Centering Function.

While temporarily canceling this function,  (Lane Keep Assist indicator) on the EyeSight display area illuminates in white and the Lane Centering lead vehicle indicator turns off. The lane indicator turns to gray.

- Depressing the brake pedal
- Pressing the  (CRUISE) switch to cancel Adaptive Cruise Control
- Operating the turn signal lever


▼ Automatic cancellation by the system

Under the following conditions, a notification will sound 1 short beep and 1 long beep and Lane Centering Function is temporarily canceled.

While the function is temporarily canceled,

 (Lane Keep Assist indicator) on the EyeSight display area illuminates in white and the Lane Centering lead vehicle indicator turns off. The lane indicator turns to gray. Also, Lane Centering Function cancellation message is displayed on the combination meter display.

- The system does not detect the lane markings and the lead vehicle.
- Adaptive Cruise Control is automatically canceled.

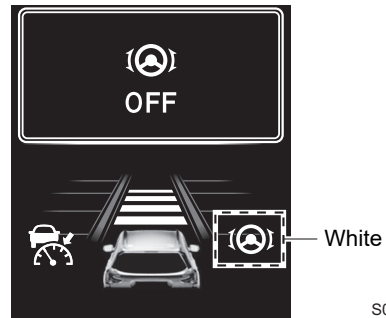

S04144

- The vehicle speed has exceeded approximately 165 km/h (103 mph).
- The system judges that the driver operated the steering wheel in order to leave the lane.
- The steering wheel is operated aggressively.
- Entering a sharp curve
- On a sharp curve
- Due to another system operating
- The system does not detect steering operation by the driver for a certain period of time.

- When the system detects no steering operation, the interruption screen appears on the combination meter display. If this condition continues, an alert sounds and warning screens appear in stages.

If the system still does not detect any steering operation, Lane Centering Function is temporarily canceled. The alert continues to sound and the warning screen continues to appear on the combination meter display until the system detects steering operation.



S04145

- The EyeSight system has a malfunction.  (EyeSight warning indicator: Yellow)
⇒ Page 184
- The EyeSight system has stopped temporarily.  (EyeSight temporary stop indicator: White)
⇒ Page 186



NOTE


In the following cases, Lane Centering Function may be temporarily canceled because the system cannot detect the steering wheel operation.

- The driver is driving with hands placed lightly on the steering wheel.
- Driver steering operation is insufficient.

● Turning off Lane Centering Function

Press the  (Lane Keep Assist) switch.

 (Lane Keep Assist indicator) and lane indicator are turned off on the EyeSight display area.

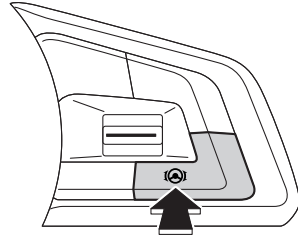


S03398

● When Lane Centering Function is active and the vehicle is likely to depart the lane

When Lane Centering Function is active and the vehicle is likely to depart the lane, an alert sounds and an interruption screen is displayed on the combination meter display. Also the lane indicator on which the vehicle is about to cross will blink in yellow.

When this warning activates, operate the steering wheel so that the vehicle does not depart from the lane.

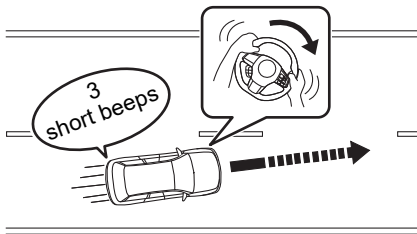

S03876



S03844

*: The lane indicator on the side where the vehicle is likely to depart flashes in yellow.

If Lane Centering Function is canceled while this warning is activated, the interruption screen will change.



S03845



WARNING

When Lane Centering Function is operating, and the lane markings are not detected, this warning and Lane Departure Warning (⇒ page 152) do not operate. Pay attention to your surroundings and operate the steering wheel as necessary. Relying only on this warning to judge lane departure will lead to an unexpected accident.



NOTE

This function operates even when Lane Departure Warning is turned off.
⇒ Page 156

Manual Speed Limiter (if equipped)

Manual Speed Limiter is a driving support system that prevents the set vehicle speed from being exceeded.

If the vehicle appears that it will exceed the set vehicle speed, acceleration is reduced or the brakes are used to decelerate.

Acceleration and deceleration follow user operation of the accelerator pedal and brake pedal within the range that does not exceed the set vehicle speed.



WARNING

- When Manual Speed Limiter is functioning, the system does not perform the following control to maintain a following distance, as when using Adaptive Cruise Control.
Strive for safe driving and depress the brake pedal to decelerate the vehicle as necessary in order to ensure a safe following distance from the vehicle in front.
- Under the following conditions, do not use Manual Speed Limiter. Doing so may result in an accident.
 - Frozen roads, snow-covered roads or slippery road surfaces
The tires may spin, causing your vehicle to lose control.
 - Steep downhill grades
The set vehicle speed may be exceeded.
 - On a steep continuous downhill grade
The brakes may overheat.
- When using Manual Speed Limiter, always set the vehicle speed according to the speed limit, traffic flow, road conditions, and other conditions.



CAUTION

In the following conditions or circumstances, brake effectiveness may be reduced and it may not be possible to reduce speed. Depress the brake pedal and decelerate as necessary.

- Vehicle conditions (amount of load, number of occupants, etc.)
- Road conditions (grade, slipperiness, shape, bumps, etc.)
- Vehicle maintenance condition (brake systems, tire wear, air pressure, temporary spare tire is being used, etc.)
- The brakes are cold. For example, just after the e-BOXER system is started or the outside temperature is low.
- For a short period of time when driving after the e-BOXER system is started until the engine has warmed-up
- The brakes are overheated on downhill grades (braking performance may be reduced).
- In rain or after washing the vehicle (the brakes may become wet and braking performance may be reduced.)
- A trailer or another vehicle, etc. is being towed.



NOTE


Manual Speed Limiter can be used even when EyeSight is temporarily stopped.

How to use Manual Speed Limiter


■ Setting Manual Speed Limiter

- (1) Setting Manual Speed Limiter to standby status.

Press the LIM (Manual Speed Limiter) switch. At this time,  (Speed Limiter indicator) (white) is displayed on the EyeSight display area of the combination meter display. The set vehicle speed display will read “- - - km/h (- - MPH)”.

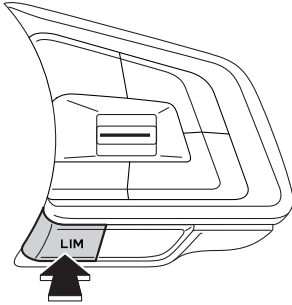

S03490

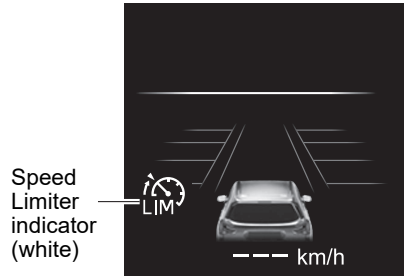

S03777


To set the ready status:

Manual Speed Limiter can be activated when all of the following conditions are met and **READY** (READY indicator) is displayed on the EyeSight display area.

- The X-MODE is turned off (the X-MODE indicator is turned off).
- The EyeSight system is not malfunctioning.  (EyeSight warning indicator: Yellow) is turned off.

⇒ Page 184

- The gasoline particulate filter warning light is not flashing. (if equipped)

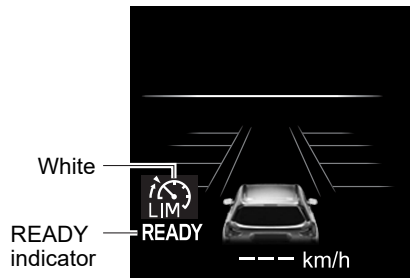

S03146



NOTE


For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Manual Speed Limiter may not be used.

- (2) Press the RES/SET switch to the “SET/-” side or the “RES/+” side.


The vehicle speed at the time when the switch is pressed will become the set vehicle speed, and Manual Speed Limiter will start to function.



(Speed Limiter indicator) turns from white to green.

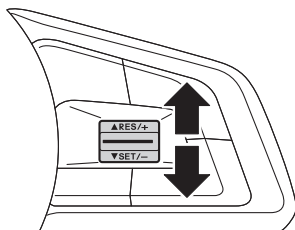

S03394

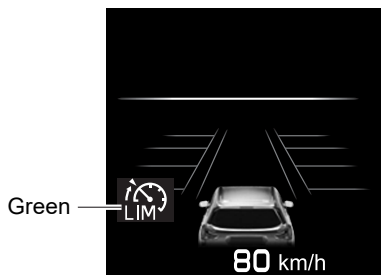

S03147



CAUTION

During Manual Speed Limiter use, accelerator and brake control to follow the vehicle in front is not performed. Operate the accelerator and brake pedals as necessary. However depressing the accelerator pedal deeply will temporarily cancel Manual Speed Limiter.




NOTE

- On a downhill grade, automatic braking may operate in order to maintain the set vehicle speed.
- When the brakes are applied by Manual Speed Limiter, the vehicle's brake lights will illuminate.

■ Increasing the set vehicle speed

- Push to the “RES/+” side briefly.
Every time the switch is pushed, the set vehicle speed will increase to the next 5 km/h (5 mph) increment.
- Push to the “RES/+” side continuously.
While the switch is being pushed, the set vehicle speed will increase in increments of 1 km/h (1 mph).

When operating the switch, the set vehicle speed changes on the combination meter display.

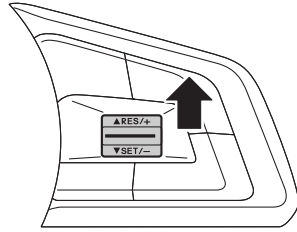


S03395

■ Decreasing the set vehicle speed

- Push to the “SET/-” side briefly.
Every time the switch is pushed, the set vehicle speed will decrease to the next 5 km/h (5 mph) decrement.
- Push to the “SET/-” side continuously.
While the switch is being pushed, the set vehicle speed will decrease in decrements of 1 km/h (1 mph).

When operating the switch, the set vehicle speed changes on the combination meter display.

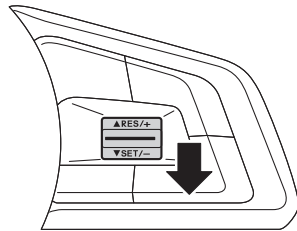

S03396

■ Accelerating temporarily

When the accelerator pedal is depressed deeply, Manual Speed Limiter is temporarily canceled. At this time,  (Speed Limiter indicator) turns from green to white.


Even when the accelerator pedal is released, Manual Speed Limiter does not activate while the vehicle speed remains above the set vehicle speed. When the vehicle speed drops below the set vehicle speed, Manual Speed Limiter is reactivated. Manual Speed Limiter can also be reactivated when the vehicle speed is above the set vehicle speed by pressing the “SET/-” switch. When Manual Speed Limiter is reactivated,  (Speed Limiter indicator) turns from white to green.

■ Canceling Manual Speed Limiter


● Canceling by driver operation

Press the LIM (Manual Speed Limiter) switch.

 (Speed Limiter indicator) turns from green to white while the set vehicle speed remains displayed on the EyeSight display area.

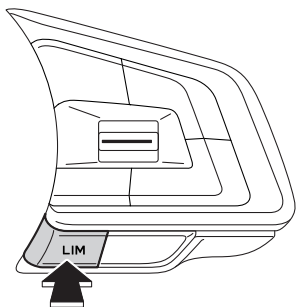

S03490

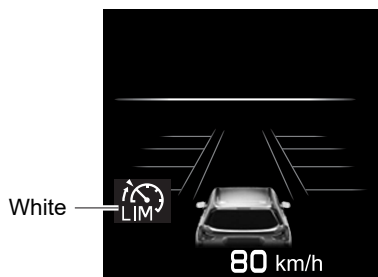


S03147

● Automatic cancellation by the system

In the following cases, a notification sounds 1 short beep and 1 long beep and Manual Speed Limiter is automatically canceled.  (Speed Limiter indicator) changes from green to white. Also, the Manual Speed Limiter cancellation message is displayed on the combination meter display.

After the conditions listed below have been resolved, perform the Manual Speed Limiter set operation again to reactivate Manual Speed Limiter.

- The X-MODE is turned on (the X-MODE indicator illuminates).
 - Manual Speed Limiter can be resumed after the X-MODE is turned off.
- The EyeSight system has a malfunction.  (EyeSight warning indicator: Yellow)
⇒ Page 184
- The gasoline particulate filter warning light is flashing. (if equipped)

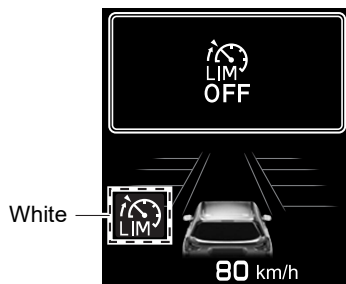

S03277

 CAUTION


Manual Speed Limiter does not activate when the select lever is in the "R" position. At this time,  (Speed Limiter indicator) changes to white.

 NOTE


- If EyeSight is malfunctioning,  (EyeSight warning indicator: Yellow) is displayed on the combination meter display. If this occurs, stop the vehicle in a safe location and then turn off the e-BOXER system and restart it. If the indicators remain illuminated after restarting the e-BOXER system, Manual Speed Limiter cannot be used. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
⇒ Page 184
- When operation of Manual Speed Limiter has been automatically canceled, perform the set operation again after the condition that caused the cancellation has been resolved. If Manual Speed Limiter cannot be activated even after the condition has been corrected, EyeSight may be malfunctioning. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
- For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Manual Speed Limiter may not be used.

■ Restoring the previously set vehicle speed

The previously set vehicle speed is stored in memory. To restore that vehicle speed, press the RES/SET switch to the "RES/+" side.  (Speed Limiter indicator) changes from white to green.

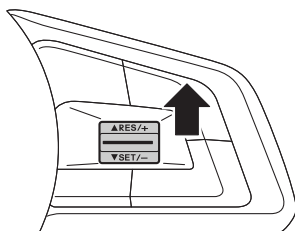

S03395

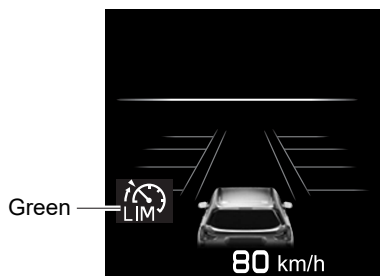

S03147



NOTE

- The vehicle speed stored in memory is erased in the following circumstances:
 - Manual Speed Limiter is turned off by pressing the LIM (Manual Speed Limiter) switch.
 - The  (CRUISE) switch was pressed to change from Manual Speed Limiter to Adaptive Cruise Control.
- The set vehicle speed can be set between 30 km/h (20 mph) and 200 km/h (125 mph).
- If the vehicle speed is approximately 30 km/h (20 mph) or less when the vehicle speed is set, the set vehicle speed is set to 30 km/h (20 mph).
- If there is no vehicle speed stored in the memory (previous vehicle speed), the current vehicle speed is set when the RES/SET switch is pressed to the "RES/+" side.


⇒ Page 114

■ Turning off Manual Speed Limiter

Any of the following operations will turn off Manual Speed Limiter.

- When Manual Speed Limiter is not active, press the LIM (Manual Speed Limiter) switch.

 (Speed Limiter indicator) turns off on the EyeSight display area.

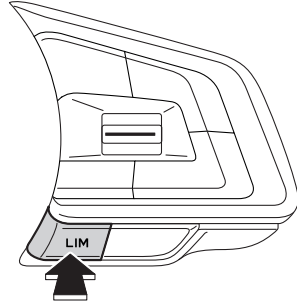


S03490


- Press the  (CRUISE) switch.

Manual Speed Limiter is turned off and Adaptive Cruise Control turns on.

 (Speed Limiter indicator) turns off on the EyeSight display area and  (Adaptive Cruise Control indicator) illuminates white.

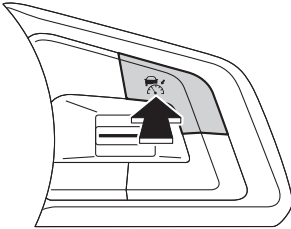


S03393

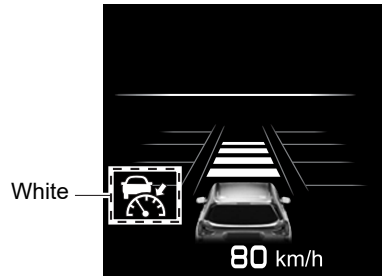

S03050

Lane Departure Prevention Function

The system detects lane markings (and road boundaries (for Europe models)) in order to help prevent departure from the lane. If you drive on expressways, freeways or motorways at speeds above approximately 60 km/h (37 mph) and the vehicle is about to depart from the lane, the system assists the steering operation by turning it to the direction that will help prevent the lane departure.

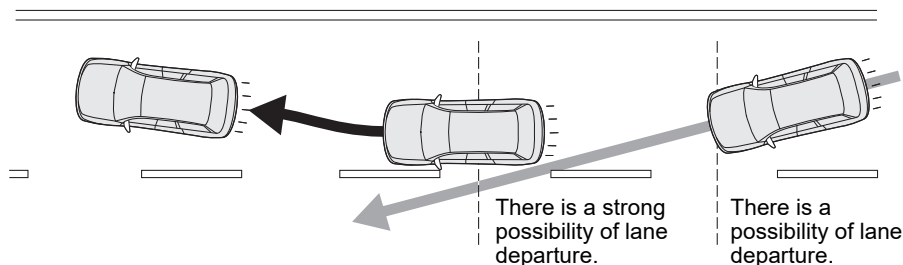

S04040



WARNING

Lane Departure Prevention Function is not an automatic driving system.

Do not overestimate the capabilities of Lane Departure Prevention Function. It is not a system to assist inattentive driving or meant to permit driving without holding the steering wheel. Make sure to grip the steering wheel while driving. To drive safely, check the distance from the vehicle in front or from a vehicle driving in parallel with your vehicle, the surrounding conditions and the surrounding environment while driving.

If you feel that the level of control and timing by the system are different from your own driving style, the system may not support safe driving. Do not use Lane Departure Prevention Function.

Lane Departure Prevention Function does not always operate under all situations. If you rely only on Lane Departure Prevention Function to stay in a lane, it may cause an accident such as a collision with an obstacle beside your lane or with a vehicle driving in an adjacent lane.

- Check that there are no problems with the tires and brakes during a daily inspection before using the system.

- The system may not operate properly under the following conditions. Do not use Lane Departure Prevention Function.
 - The air pressure of tires is not to specification.*¹
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹
 - Tires that are the wrong size are installed.*¹
 - The wheels are out of balance (e.g., the balance weight is removed or misaligned).*¹
 - The wheels are out of alignment.*¹
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including genuine SUBARU parts).
 - An object that obstructs the stereo camera's view is installed on the vehicle.
 - Tire chains are installed.
 - There is an abnormal vibration in the steering wheel or the steering wheel is heavier than usual.
 - The steering wheel has been replaced with parts other than genuine SUBARU parts.
 - The headlights are dirty or they have snow, ice or dirt on them. (Objects are not adequately illuminated and are difficult to detect.)
 - The headlights are not aligned correctly. (Objects are not adequately illuminated and are difficult to detect.)
 - The headlights, fog lights and other lights have been modified.
 - Vehicle operation has become unstable due to an accident or malfunction.
 - The brake system warning light (red) is illuminated.*²
 - The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
 - The maximum number of occupants is exceeded.
 - A trailer or another vehicle, etc. is being towed.
 - The combination meter is not operating properly. For example, an indicator light or a warning light on the combination meter does not properly turn on or off, a beep does not sound, or the indication on the combination meter display is different from when it is normal.*³

*1: The wheels and tires have functions that are critically important. Be sure to use the correct ones.

For details, refer to the Owner's Manual for your vehicle.

*2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.


*3: For details about the functions and operations of the combination meter, refer to the Owner's Manual for your vehicle.

Continued on next page ⇒

⇒ Continued from previous page

- Lane Departure Prevention Function is designed for use on expressways, freeways, toll roads, motorways and similar limited access roads. It is not intended to be used in city traffic. In the following conditions, do not use Lane Departure Prevention Function. Doing so may result in an accident.

- Ordinary roads (roads other than those mentioned above)
Depending on the driving environment (complexity of roads and other factors), the system may not be able to perform as the traffic conditions require, and that may result in an accident.
- Roads with sharp curves
- Roads with lane restrictions or tentative lanes due to construction work, etc.
- Old lane markings remain.
- Avoiding parked vehicles
- Snow, puddles or snow melting agents remain on the road surface.
- Cracks or constructed traces remain on the road surface.
- Frozen roads, snow-covered roads or other slippery road surfaces

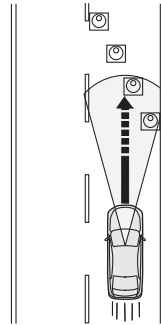


S01893

The tires may spin, causing loss of control of the vehicle.

- Entering a sharp curve into an interchange or junction, or a service area, parking area, toll booth or other facilities
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Rain or dirt has not been fully wiped off of the windshield. There is a risk of that the stereo camera may not detect the lanes.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).

- The stereo camera may have difficulty detecting the lane markings under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings on the lane you are driving in (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.
 - The shape of a curve in the road suddenly changes.
 - Shadows of guardrails or similar objects are overlapped on the lane markings.
 - Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
 - The width of a lane is either too narrow or too wide.
 - The width of a lane has changed.
 - The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.

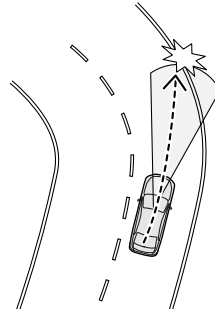


S03022

Continued on next page ⇒


⇒ Continued from previous page

- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).
- There is a curb or a side wall on the road shoulder.

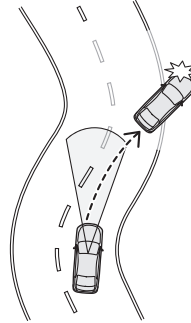

S02855

- Going into lanes that lead to interchanges, junctions, service areas or parking areas
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

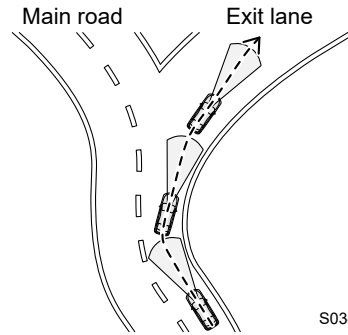

S03482

**CAUTION**

- The performance of Lane Departure Prevention Function may not be optimal under the following conditions. In addition, Lane Departure Prevention Function may not operate or the operation may be canceled.
 - Immediately after the weight of your vehicle changes radically
 - Immediately after the replacement of a tire or the adjustment of tire pressure
 - Immediately after the adjustment, repair or replacement of the camera or related components
 - Immediately after the repair or replacement of the suspension or steering system
 - A winter tire or a tire other than a genuine SUBARU tire is used.
 - The vehicle is in a crosswind.
 - The road grade abruptly changes (uphill or downhill).
 - The grade of the crossing direction in a road is large or changes abruptly.
 - Unevenness, winding and joint of a road surface
 - The acceleration/deceleration is high.
 - Immediately after starting the e-BOXER system when the outside temperature is low.
 - The outside temperature is high.
- When you do not use Lane Departure Prevention Function, make sure to turn off the  (Lane Keep Assist) switch. If the function is left on, the function may operate unexpectedly, causing an accident.
- If you turn on the  (Lane Keep Assist) switch, the operation power of electric power steering may change.



NOTE


- If Adaptive Cruise Control is activated after Lane Departure Prevention Function was turned on, Lane Departure Prevention Function switches to Lane Centering Function (only when Lane Centering Function is set to on in the customizing functions).
- When Lane Centering Function is turned off by the customizing functions (⇒ page 189), push the  (Lane Keep Assist) switch to activate Lane Departure Prevention Function. In this scenario, the Adaptive Cruise Control setting does not affect Lane Departure Prevention Function.
- If Lane Departure Prevention Function is operated continuously for a long period of time, an alert sounds and an interruption screen appears on the combination meter display. In addition, if Lane Departure Prevention Function is operated continuously, and there is not steering wheel operation from the driver, an alert sounds and an interruption screen appears on the combination meter display.
Depending on the number of times the function has operated, the alert may continue even after Lane Departure Prevention Function ends.
- If Lane Departure Prevention Function does not operate for a certain period of time or if Lane Departure Prevention Function is canceled, the alert will stop.

How to use Lane Departure Prevention Function


Lane Departure Prevention Function turns on in the following situations.

- The e-BOXER system is started. (For Europe models)
- The  (Lane Keep Assist) switch is pressed while Lane Departure Prevention Function is off.

When Lane Departure Prevention Function is turned on,  (Lane Keep Assist indicator) (white) and the lane indicator (gray) are displayed on the EyeSight display area of the combination meter display.

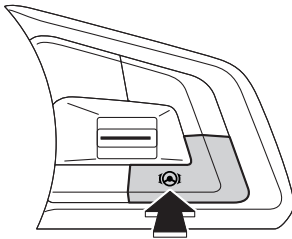

S03398

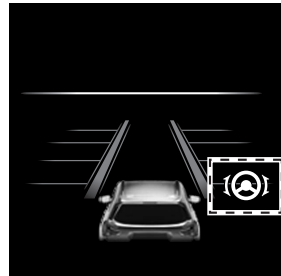


Lane
Keep
Assist
indicator
(white)

S03476

Lane Departure Prevention Function goes into the standby status, and the lane indicator illuminates when all of the following conditions are met.

- Your vehicle speed is within the following ranges.
 - Detecting the lane markings: Approximately 60 - 200 km/h (37 - 125 mph).
 - Detecting the road boundaries: Approximately 60 - 100 km/h (37 - 60 mph).
 (For Europe models)
- The driver is operating the steering wheel.
- Adaptive Cruise Control is not activated, or Lane Centering Function is set to off in the customizing functions.
- On a road that has a lane width that is between approximately 3 m (10 ft) and 4 m (13 ft)
- On a straight road or gentle curve
- Driving near the center of a lane

When the vehicle is about to depart from the lane, Lane Departure Prevention Function starts to operate and  (Lane Keep Assist indicator) turns from white to green while it is operating.

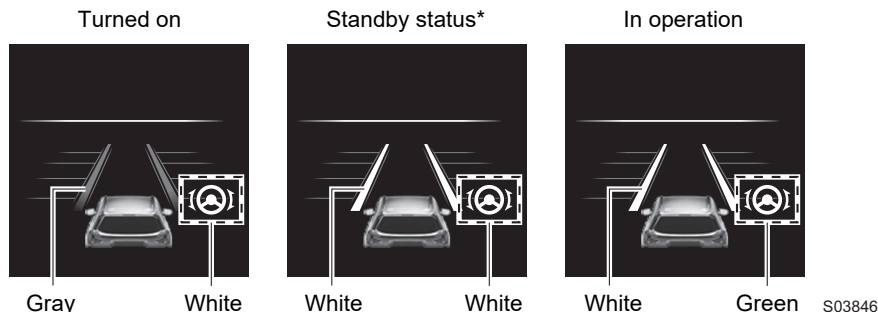

*: The lane indicator illuminates white when lane markings are detected.



NOTE

- If you just lightly put your hands on the steering wheel for a certain period of time or if you do not operate the steering wheel, the function will temporarily be canceled.  (Lane Keep Assist indicator) illuminates in white again. Also, the Lane Departure Prevention Function cancellation message is displayed on the screen.
- Lane Departure Prevention Function operates when the system determines that the vehicle will depart from the lane if you continue to drive in the same manner. Therefore, it operates at an earlier timing than Lane Departure Warning (⇒ page 152). It may depend on the surrounding environment and road condition.
- The lane indicator in the standby status and in operation may illuminate only on the left side or right side.

- For Europe models, even when Lane Departure Prevention Function is turned off, if the e-BOXER system is turned off and then restarted, Lane Departure Prevention Function will be turned on. The system default setting when the vehicle is restarted is on.
- Except for Europe models, the on/off status of Lane Departure Prevention Function is restored when you restart the e-BOXER system.
- When both Lane Departure Prevention Function and Emergency Lane Keep Assist are turned on:
 - After an activation of Emergency Lane Keep Assist and the oncoming vehicle or following vehicle is no longer detected, if there is still a possibility that your vehicle will depart the lane, control will switch to Lane Departure Prevention Function.
 - If a vehicle is detected nearby while Lane Departure Prevention Function is active, control will switch to Emergency Lane Keep Assist.

■ Canceling Lane Departure Prevention Function

● Canceling by driver operation

Any of the following operations temporarily cancels Lane Departure Prevention Function. While temporarily canceling this function,  (Lane Keep Assist indicator) on the EyeSight display area illuminates in white and the lane indicator turns to gray.

- Depressing the brake pedal strongly
- Adaptive Cruise Control is activated when Lane Centering Function is set to on in the customizing functions.
 - Control changes to Lane Centering Function.
- Operating the turn signal lever
- The system determines that the driver operates the steering wheel to make a lane change.
- Turning on the hazard warning flasher switch


● Automatic cancellation by the system

Under the following conditions, a notification sound 1 short beep and 1 long beep and Lane Departure Prevention Function is temporarily canceled.

While the function is temporarily canceled,

 (Lane Keep Assist indicator) on the EyeSight display area illuminates in white and the lane indicator turns to gray. Also, the Lane Departure Prevention Function cancellation message is displayed on the combination meter display.

- The system does not detect the lane markings.
- The vehicle speed is less than approximately 60 km/h (37 mph) or is more than approximately 205 km/h (128 mph).
- The Vehicle Dynamics Control or the Traction Control Function is activated.
- Either the driver's door, the front passenger's door or the rear door is open.
- The driver's seatbelt is unfastened.
- The electronic parking brake is applied.
- The select lever is moved to a position other than "D" or "M".
 - Lane Departure Prevention Function can be resumed after the select lever is returned to the "D" or "M" position.

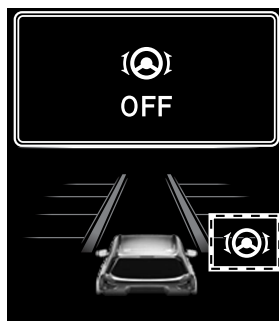

White

S03474

- The system does not detect steering operation by the driver for a certain period of time.
 - When the system detects no steering operation, the interruption screen appears on the combination meter display. The interruption screen continues to appear until the system detects the steering operation. If the system still does not detect the steering operation, Lane Departure Prevention Function is temporarily canceled.



S03475

- Entering a sharp curve
- On a sharp curve
- Due to the road conditions
- Due to another system operating
- The EyeSight system has a malfunction.  (EyeSight warning indicator: Yellow)
⇒ Page 184
- The EyeSight system has stopped temporarily.  (EyeSight temporary stop indicator: White)
⇒ Page 186


**NOTE**

If the function is automatically canceled during the standby status ( (Lane Keep Assist indicator) illuminates in white), no beep sounds.

■ Turning off Lane Departure Prevention Function

Press the  (Lane Keep Assist) switch.


 (Lane Keep Assist indicator) and lane indicator are turned off on the EyeSight display area.

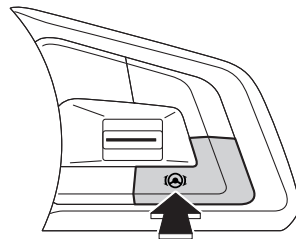


S03398

Emergency Lane Keep Assist (if equipped)

When the vehicle speed is approximately 60 km/h (37 mph) or more on an expressway, freeways or motorway and the vehicle appears likely to depart the lane when there is a following vehicle or oncoming vehicle approaching in the neighboring lane, this function assists the driver to turn the steering wheel in the direction which will prevent lane departure, keeping the vehicle in the lane. At this time, an alert will sound (3 short beeps) repeatedly, and an interruption screen will be displayed.

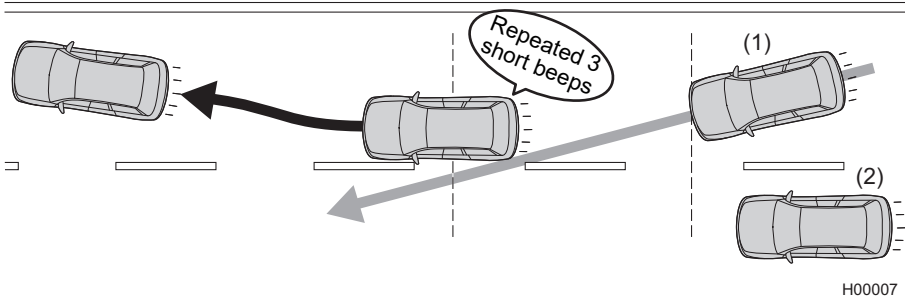

- (1) Your vehicle
- (2) Following vehicle in neighboring lane

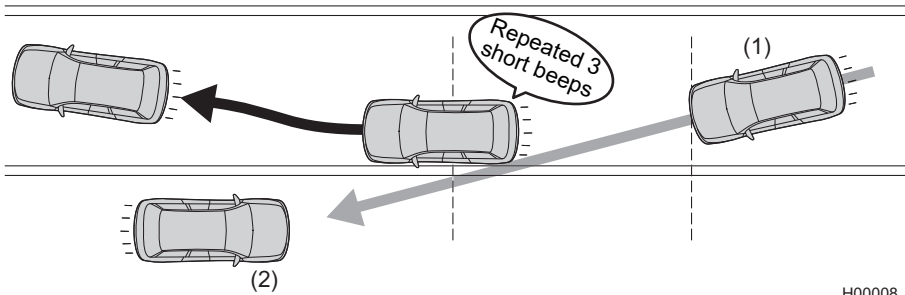

- (1) Your vehicle
- (2) Oncoming vehicle in neighboring lane

**WARNING**

Emergency Lane Keep Assist is not an automatic driving system. Do not overestimate the capabilities of Emergency Lane Keep Assist. It is not a system to assist inattentive driving or meant to permit driving without holding the steering wheel. Make sure to grip the steering wheel while driving. To drive safely, check the distance from the vehicle in front or from a vehicle driving in parallel with your vehicle, the surrounding conditions and the surrounding environment while driving.

If you feel that the level of control and timing by the system are different from your own driving style, the system may not support safe driving. Do not use Emergency Lane Keep Assist.

Emergency Lane Keep Assist activates only when your vehicle appears likely to depart the driving lane and there is a vehicle (following vehicle or oncoming vehicle) approaching in the neighboring lane. For this reasons, it will not operate correctly in response to the following.

- Light motor vehicles, motorcycles, vehicles with special shapes
- Bicycles
- Pedestrians
- A vehicle suddenly appears.
- A part of the vehicle is not shown.
- A vehicle speed on coming is very fast.
- An oncoming vehicle is very slow or stopped.
- The system judges that there are no possibility of collisions.

Emergency Lane Keep Assist does not always operate under all situations. If you rely only on Emergency Lane Keep Assist to stay in a lane, it may cause an accident such as a collision with an obstacle beside your lane or with a vehicle driving in an adjacent lane.

- Check that there are no problems with the tires and brakes during a daily inspection before using the system.
- The system may not operate properly under the following conditions. Do not use Emergency Lane Keep Assist.
 - The air pressure of tires is not to specification.*¹
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*¹

Continued on next page ⇒

⇒ Continued from previous page

- Tires that are the wrong size are installed.*¹
- The wheels are out of balance (e.g., the balance weight is removed or misaligned).^{*1}
- The wheels are out of alignment.^{*1}
- A flat tire has been fixed temporarily with a tire repair kit.
- The suspension has been modified (including genuine SUBARU parts).
- An object that obstructs the stereo camera's view is installed on the vehicle.
- Tire chains are installed.
- There is an abnormal vibration in the steering wheel or the steering wheel is heavier than usual.
- The steering wheel has been replaced with parts other than genuine SUBARU parts.
- The headlights are dirty or they have snow, ice or dirt on them. (Objects are not adequately illuminated and are difficult to detect.)
- The headlights are not aligned correctly. (Objects are not adequately illuminated and are difficult to detect.)
- The headlights, fog lights and other lights have been modified.
- Vehicle operation has become unstable due to an accident or malfunction.
- The brake system warning light (red) is illuminated.*²
- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- The maximum number of occupants is exceeded.
- A trailer or another vehicle, etc. is being towed.
- The combination meter is not operating properly. For example, an indicator light or a warning light on the combination meter does not properly turn on or off, a beep does not sound, or the indication on the combination meter display is different from when it is normal.*³

*1: The wheels and tires have functions that are critically important. Be sure to use the correct ones.

For details, refer to the Owner's Manual for your vehicle.

*2: If the brake system warning light (red) does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.


*3: For details about the functions and operations of the combination meter, refer to the Owner's Manual for your vehicle.

- Emergency Lane Keep Assist is designed for use on expressways, freeways, toll roads, motorways and similar limited access roads. It is not intended to be used in city traffic. In the following conditions, do not use Emergency Lane Keep Assist. Doing so may result in an accident.

- Ordinary roads (roads other than those mentioned above)

Depending on the driving environment (complexity of roads and other factors), the system may not be able to perform as the traffic conditions require, and that may result in an accident.

- Roads with sharp curves
- Roads with lane restrictions or tentative lanes due to construction work, etc.
- Old lane markings remain.
- Avoiding parked vehicles
- Snow, puddles or snow melting agents remain on the road surface.
- Cracks or constructed traces remain on the road surface.
- Frozen roads, snow-covered roads or other slippery road surfaces

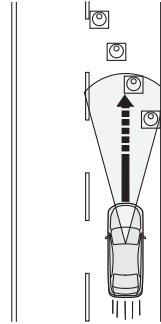

S01893


The tires may spin, causing loss of control of the vehicle.

- Entering a sharp curve into an interchange or junction, or a service area, parking area, toll booth or other facilities
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Rain or dirt has not been fully wiped off of the windshield. There is a risk of that the stereo camera may not detect the lanes or the oncoming vehicle.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).

Continued on next page ⇒


⇒ Continued from previous page

- The stereo camera may have difficulty detecting the lane markings or oncoming vehicles under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings on the lane you are driving in (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.
 - The shape of a curve in the road suddenly changes.
 - Shadows of guardrails or similar objects are overlapped on the lane markings.
 - Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
 - The width of a lane is either too narrow or too wide.
 - The width of a lane has changed.
 - The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.

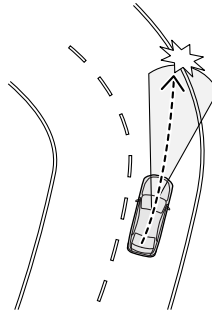


S03022

- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).
- There is a curb or a side wall on the road shoulder.

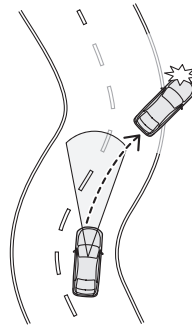

S02855

- Going into lanes that lead to interchanges, junctions, service areas or parking areas
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

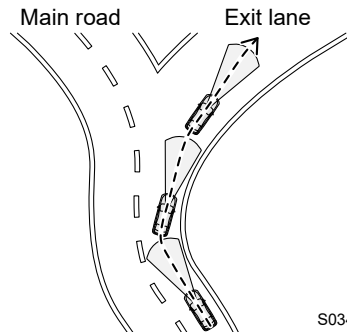

S03482



CAUTION

- The performance of Emergency Lane Keep Assist may not be optimal under the following conditions. In addition, Emergency Lane Keep Assist may not operate or the operation may be canceled.
 - Immediately after the weight of your vehicle changes radically
 - Immediately after the replacement of a tire or the adjustment of tire pressure
 - Immediately after the adjustment, repair or replacement of the camera or related components
 - Immediately after the repair or replacement of the suspension or steering system
 - A winter tire or a tire other than a genuine SUBARU tire is used.
 - The vehicle is in a crosswind.
 - The road grade abruptly changes (uphill or downhill).
 - The grade of the crossing direction in a road is large or changes abruptly.
 - Unevenness, winding and joint of a road surface
 - The acceleration/deceleration is high.
 - Immediately after starting the e-BOXER system when the outside temperature is low.
 - The outside temperature is high.
- When you do not use Emergency Lane Keep Assist, make sure to turn off Emergency Lane Keep Assist by pressing the SRVD OFF switch. If the switch is left on, the function may operate unexpectedly, causing an accident.
- If you turn on Emergency Lane Keep Assist, the operation power of electric power steering may change.
- There are limits to the detection performance of the radar sensors used for Emergency Lane Keep Assist.
⇒ Refer to the Owner's Manual for your vehicle.



NOTE

- In the following cases, Emergency Lane Keep Assist will temporarily stop operating (or may stop operating) and the Emergency Lane Keep Assist OFF indicator will appear. Emergency Lane Keep Assist will resume operation once these conditions are corrected, and the Emergency Lane Keep Assist OFF indicator will disappear. However, if the Emergency Lane Keep Assist OFF indicator has appeared for a prolonged time, we recommend that you have the system inspected at a SUBARU dealer as soon as possible.
 - A large amount of snow or ice sticks to the rear bumper surface around the radar sensors.

- The vehicle is driven on a snow-covered road or in an environment in which there are no objects around (such as a desert) for a long time.
- The temperature around the radar sensors increased excessively due to long driving on uphill grades in summer, etc.
- The temperature around the radar sensors becomes extremely low.
- The vehicle battery voltage lowers.
- An overvoltage occurs in the vehicle battery.
- The radar sensor becomes significantly misaligned (If the orientation of the radar sensor is shifted for any reason, readjustment is required. We recommend that you have the sensor adjusted at a SUBARU dealer.).
- The detectability of the radar sensors is restricted. The Emergency Lane Keep Assist detection may be impaired and the system may not operate properly under the following conditions.
 - The rear bumper around the radar sensors is distorted.
 - Ice, snow or mud adheres to the rear bumper surface around the radar sensors.
 - Stickers, etc. are affixed on the areas of the radar sensors on the rear bumper.
 - During adverse weather conditions such as rain, snow or fog
 - On wet roads such as snow-covered roads and through puddles
- The radar sensors may not detect or may have difficulty detecting the following vehicles and objects.
 - Small motorcycles, bicycles, pedestrians, stationary objects on the road or road side, etc.
 - Vehicles with body shapes that the radar may not reflect (vehicles with lower body height such as a trailer with no cargo and sports cars)
 - Vehicles that are not approaching your vehicle even though they are in the detection area (either on a neighboring lane to the rear or beside your vehicle when reversing) (The system determines the presence of approaching vehicles based on data detected by the radar sensors.)
 - Vehicles traveling at significantly different speeds
 - Vehicles driving parallel to and at almost the same speed as your vehicle for a prolonged time
 - Oncoming vehicles
 - Vehicles in a lane beyond the neighboring lane
 - Vehicles traveling at a significantly lower speed that you are trying to overtake

How to use Emergency Lane Keep Assist

The system can activate when all of the following conditions are met. However even when all of the following conditions are met, there are cases when Emergency Lane Keep Assist does not activate because the lane markings, following vehicle, or oncoming vehicle cannot be detected.

- Your vehicle speed is within the following ranges.
 - Detecting an oncoming vehicle: Approximately 60 - 100 km/h (37 - 60 mph)
 - Detecting a following vehicle: Approximately 60 - 200 km/h (37 - 125 mph)
- The system is detecting the lane markings.
- The system is detecting the following vehicle or the oncoming vehicle.
- SRVD is not turned off.
- Lane Centering Function is not operating.
- The driver is operating the steering wheel.
- On a road that has a lane width that is between approximately 3 m (10 ft) and 4 m (13 ft)
- On a straight road or gentle curve
- Driving near the center of a lane

When the vehicle is about to depart from the lane, Emergency Lane Keep Assist starts to operate.



S03617

*: The illustration depicts a vehicle about to cross the left line.

**NOTE**

- Emergency Lane Keep Assist does not operate if the system cannot detect a following vehicle or oncoming vehicle approaching in the neighboring lane.
- The system cannot operate properly when the correct driving lane is not selected by using Driving Lane Customize.
⇒ Page 193
- Emergency Lane Keep Assist does not operate if SRVD is turned off. At this time,  (Emergency Lane Keep Assist OFF indicator) illuminates on the combination meter display.
- When both Lane Departure Prevention Function and Emergency Lane Keep Assist are turned on:
 - After an activation of Emergency Lane Keep Assist and the oncoming vehicle or following vehicle is no longer detected, if there is still a possibility that your vehicle will depart the lane, control will switch to Lane Departure Prevention Function.
 - If a vehicle is detected nearby while Lane Departure Prevention Function is active, control will switch to Emergency Lane Keep Assist.
- Emergency Lane Keep Assist does not operate in the following conditions.
 - Lane Centering Function is active.
 - Lane Centering Function has been set to on in the customizing functions, and  (Lane Keep Assist indicator) on the EyeSight display area illuminates in white while Adaptive Cruise Control is active.

■ Canceling Emergency Lane Keep Assist

● Canceling by driver operation

Any of the following operations temporarily cancels Emergency Lane Keep Assist.

- Depressing the brake pedal strongly
- Operating the turn signal lever (when only an oncoming vehicle exists)
- The system determines that the driver operates the steering wheel to make a lane change.

● Automatic cancellation by the system

Under the following conditions, Emergency Lane Keep Assist is temporarily canceled.


- The system does not detect the lane markings.
- The vehicle speed is less than approximately 60 km/h (37 mph) or is more than approximately 205 km/h (128 mph).
- The Vehicle Dynamics Control or the Traction Control Function is activated.
- The electronic parking brake is applied.
- Either the driver's door, the front passenger's door or the rear door is open.
- The driver's seatbelt is unfastened.
- The select lever is moved to a position other than "D" or "M".
 - Emergency Lane Keep Assist can be resumed after the select lever is returned to the "D" or "M" position.
- Entering a sharp curve
- On a sharp curve
- Due to the road conditions
- Due to another system operating
- The EyeSight system has a malfunction.  (EyeSight warning indicator: Yellow)
⇒ Page 184
- The EyeSight system has stopped temporarily.  (EyeSight temporary stop indicator: White)
⇒ Page 186
- The Emergency Lane Keep Assist system has a malfunction, or the system is temporarily stopped.  (Emergency Lane Keep Assist OFF indicator)

■ Emergency Lane Keep Assist malfunction and temporary stop

If Emergency Lane Keep Assist temporarily stops, the Emergency Lane Keep Assist OFF indicator illuminates. When the cause has been resolved, operation returns to normal. This indicator will also appear in extremely hot or cold environments, and if there is an abnormality in the battery voltage.

If the Emergency Lane Keep Assist OFF indicator stays illuminated for a long time, the EyeSight system may have a malfunction. Contact a SUBARU dealer to have the system inspected as soon as possible.

■ Turning off Emergency Lane Keep Assist

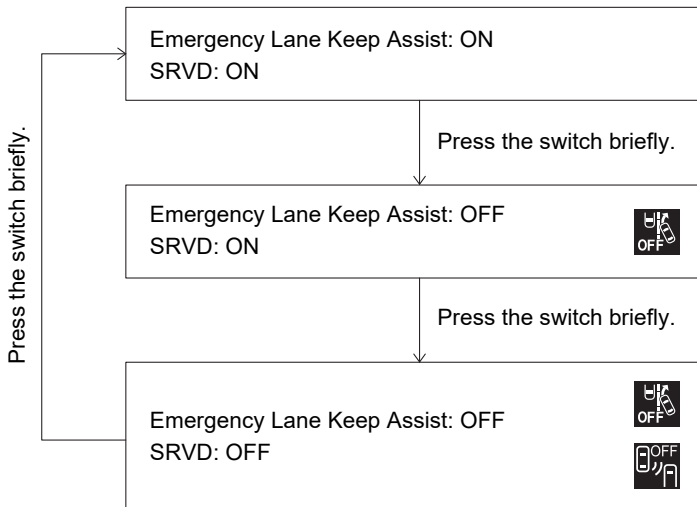

S03905


Briefly press the SRVD OFF switch once to turn off Emergency Lane Keep Assist.

Briefly press the SRVD OFF switch once more to turn off Emergency Lane Keep Assist and SRVD.

Briefly press the SRVD OFF switch once more to turn Emergency Lane Keep Assist and SRVD on again.


When Emergency Lane Keep Assist is off,  (Emergency Lane Keep Assist OFF indicator) illuminates on the combination meter display.

After the ignition switch is turned off and the e-BOXER system is stopped, Emergency Lane Keep Assist automatically turns on when the e-BOXER system is next started.

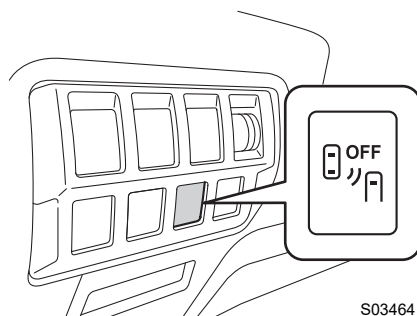


● Emergency Lane Keep Assist OFF indicator

- This indicator illuminates when the ignition switch is turned to the ON position, and then turns off approximately 10 seconds after the e-BOXER system starts.
- It illuminates when Emergency Lane Keep Assist cannot be used (due to malfunction or temporary stop) or when the system was turned off by the user.

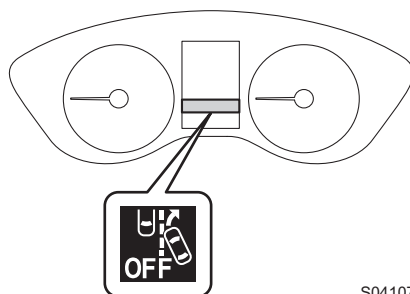

Pre-Collision Throttle Management

When an obstacle is detected in front of the vehicle, and the vehicle is stopped or traveling very slowly, if the system determines that the accelerator pedal has been depressed by more than the necessary amount (due to driver error), it greatly restricts e-BOXER system output and ensures that vehicle forward movement is slower than normal in order to give the driver additional time to brake or react.

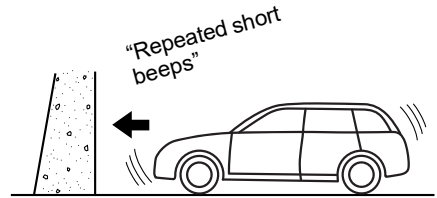

S01125

During system operation, an alert will sound repeated short beeps and an interruption screen will be displayed.

This function only activates when the select lever is in the "D" or "M" position.



S03207



WARNING

Do not rely excessively on Pre-Collision Throttle Management. Pre-Collision Throttle Management is not designed to help you avoid collisions in all situations. Always check the select lever and pedal positions as well as the surrounding environment before starting and operating the vehicle. Relying only on Pre-Collision Throttle Management could result in an accident.



- Pre-Collision Throttle Management is not designed to maintain the vehicle in a stopped condition.
- Pre-Collision Throttle Management will not reduce acceleration under all conditions. It is also not designed to prevent collisions.

Continued on next page ⇒

⇒ Continued from previous page


- Pre-Collision Throttle Management will operate when an obstacle is detected in front. However, this function will not reduce acceleration in cases where no obstacle is detected (for example when approaching a cliff, etc.).
- Do not intentionally depress the accelerator pedal excessively when there are obstacles nearby. If the driver relies only on Pre-Collision Throttle Management to control acceleration, collisions may occur.
- If your vehicle is trapped on a railroad crossing and you are trying to escape by driving through the crossing gate, the stereo camera may recognize the crossing gate as an obstacle and Pre-Collision Throttle Management system may activate. In this case, remain calm and either continue to depress the accelerator pedal or turn off the Pre-Collision Throttle Management system.
⇒ Page 150
- Pre-Collision Throttle Management may not activate depending on the following conditions:
 - The distance between your vehicle and the obstacle, speed difference, and horizontal offset
 - Recognition status of the stereo cameraIn particular, the function may not activate in the following cases:
 - Bad weather (for example heavy rain, a blizzard or thick fog)
 - Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stirred up generated by the vehicle in front or oncoming traffic.
 - Light is poor in the evening, early morning, or at night.
 - In a dark area (indoor parking area, etc.)
 - There is an obstacle outside the area illuminated by the headlights.
 - Strong light is coming from the front (for example sunlight at sunrise or sunset headlight beams, etc.).
 - The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
 - Fluid has not been fully wiped off the windshield during or after use of the window washer.
 - Obstacles cannot be correctly recognized due to water droplets from rain or the washer, or the wiper blades obstructing the stereo camera's field of view.
 - The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).
 - With low obstacles (low wall, crash barrier, low vehicle, etc.)

- The size and height of an obstacle is smaller than the limitations of the stereo camera's recognition capability.
 - With small animals or children
 - With pedestrians who are sitting or lying down
- The rear portion nearest your vehicle is too small or too close (such as a trailer or oncoming vehicle). The system may not recognize the part of that vehicle which is closest to you.



S02134


- There is a fence or wall, etc., with a uniform pattern (striped pattern, brick, etc.) or with no pattern in front.
 - There is a wall or door made of glass or a mirror in front.
 - An obstacle (another vehicle, motorcycle, cyclist, pedestrian, animal or child, etc.) cuts in from the side or jumps out suddenly.
 - Your vehicle is immediately behind an obstacle after changing lanes.
 - On sharp curves, steep uphill grades or steep downhill grades
 - The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
 - The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
 - The lead vehicle's tail lights are not lit at night or in a tunnel.
 - It is pitch black and there are no objects in the surrounding area.
 - The surrounding area is mostly the same color (for example in a snowy location).
- The system determines that steering operation by the driver is intended as evasive action.
- For your safety, do not test Pre-Collision Throttle Management on its own. It may operate improperly and cause an accident.

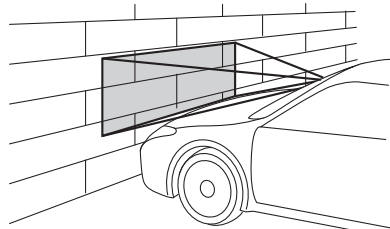

S00653


CAUTION

- In the following situations, turn off Pre-Collision Throttle Management. Otherwise Pre-Collision Throttle Management may activate unexpectedly.
 - The vehicle is being towed.
 - The vehicle is being loaded onto a carrier.
 - A chassis dynamometer, free-rollers or similar equipment is being used.
 - A mechanic lifts up the vehicle, starts the e-BOXER system and allows the wheels to spin freely.
 - Driving on a race track
 - Passing hanging banners, flags or branches
 - Thick/tall vegetation is touching the vehicle.
- Pre-Collision Throttle Management may activate in the following situations. Therefore concentrate on safe driving.
 - Your vehicle is close to the vehicle in front.
 - Passing through an automatic gate
 - Your vehicle is in a location where the grade of the road changes rapidly.

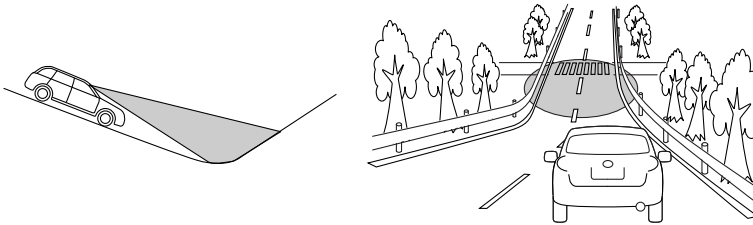



S01264

- Passing through clouds of steam or smoke

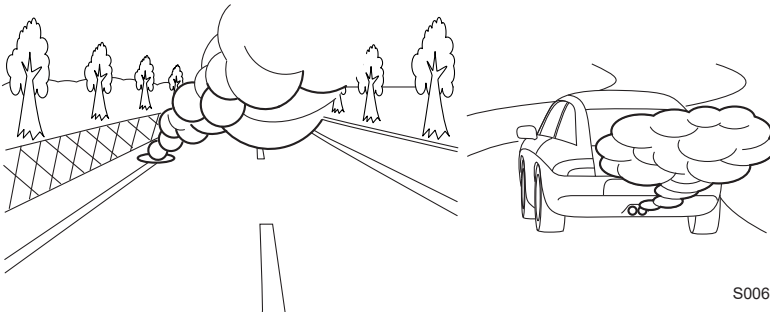


S00652

- Passing through water spray from road sprinklers or snow clearing sprinklers on the road

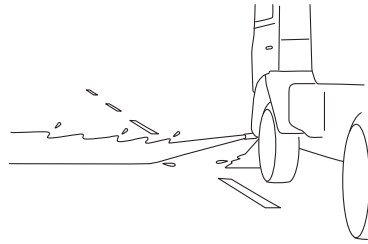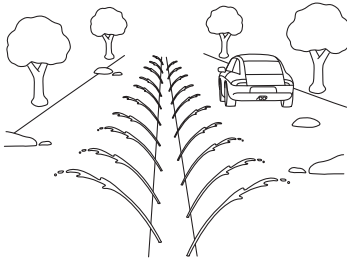

S02636

- In adverse weather, such as heavy snow or snowstorms
- There is an obstacle on a curve or intersection.
- You are passing close to the side of a vehicle, an obstacle or vegetation.
- Stopping very close to a wall or a vehicle in front

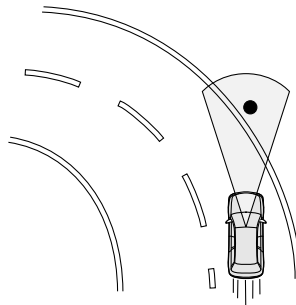

S02669




NOTE

- When the accelerator pedal is depressed for approximately 3 seconds, Pre-Collision Throttle Management will be released gradually.
 - When Pre-Collision Braking System is turned off, Pre-Collision Throttle Management is also turned off.
- ⇒ Page 64

Turning off Pre-Collision Throttle Management

Press and hold the Pre-Collision Braking System OFF switch for approximately 2 seconds or longer to turn off the Pre-Collision Throttle Management System. When 1 short beep sound emits, this function is turned off and the Pre-Collision Braking System OFF indicator light on the instrument panel illuminates.

To turn the system back on, press and hold the Pre-Collision Braking System OFF switch again for approximately 2 seconds or longer. When this function is turned on, the Pre-Collision Braking System OFF indicator light turns off.

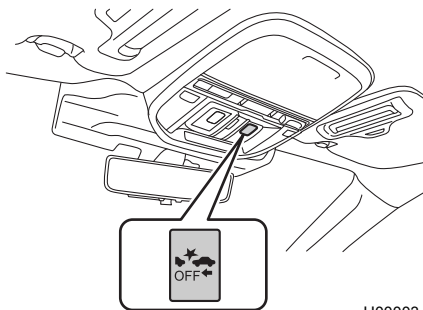

H00003



NOTE


- When Pre-Collision Throttle Management is turned off, Pre-Collision Braking System and Autonomous Emergency Steering (if equipped) are also turned off.
- Even when Pre-Collision Throttle Management is turned off, if the e-BOXER system is turned off and then restarted, Pre-Collision Throttle Management will be turned on. The system default setting when the vehicle is restarted is on.

■ Pre-Collision Braking System OFF indicator light

This indicator light illuminates when the ignition switch is turned to the ON position, and remains illuminated for approximately 10 seconds after the e-BOXER system starts. It turns on when Pre-Collision Braking System, Autonomous Emergency Steering (if equipped) and Pre-Collision Throttle Management are turned off.

It also illuminates under the following conditions.

- The EyeSight system has a malfunction.
⇒ Page 184
- The EyeSight system has stopped temporarily.
⇒ Page 186

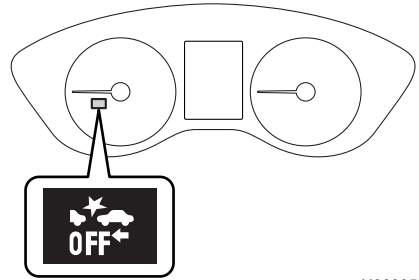

H00005




NOTE

- If the Pre-Collision Braking System OFF indicator light illuminates, the Autonomous Emergency Steering OFF indicator (if equipped) also illuminates.
⇒ Page 63
- When the Pre-Collision Braking System OFF indicator light is turned on, Pre-Collision Braking System (including the Pre-Collision Braking Assist function), Autonomous Emergency Steering (if equipped) and Pre-Collision Throttle Management do not operate.
- For models with Autonomous Emergency Steering, you cannot use Autonomous Emergency Steering when SRVD is turned off. In this case, the Autonomous Emergency Steering OFF indicator illuminates.


Lane Departure Warning

When vehicle speed is approximately 50 km/h (30 mph) or more, this function warns the driver if the system detects that the vehicle is likely to depart the traffic lane.

When Lane Departure Warning activates, an alert sounds 3 short beeps and an interruption screen will be displayed.

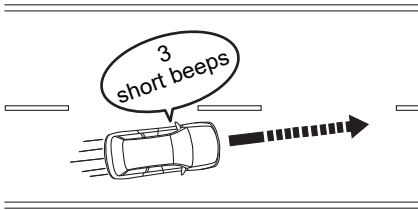

S03878

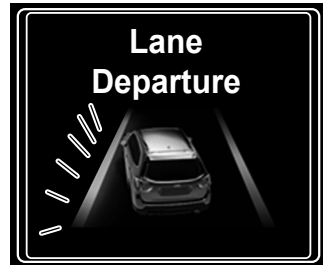

S03037

*: The illustration depicts a vehicle about to cross the left line.




WARNING

- Lane Departure Warning will not operate in all conditions. It also will not automatically return the vehicle to the original lane. If the driver relies only on Lane Departure Warning to keep the vehicle in the lane, lane departure may occur, resulting in an accident.


Lane Departure Warning activates when it detects lane markings. However, it is not a function which can detect the edge of a road (shoulders or side ditches, etc.) and warn the driver.

- The stereo camera may have difficulty detecting the lane markings under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings on the lane you are driving in (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.

- The shape of a curve in the road suddenly changes.
- Shadows of guardrails or similar objects are overlapped on the lane markings.
- Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
- The width of a lane is either too narrow or too wide.
- The width of a lane has changed.
- The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.
- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).
- There is a curb or a side wall on the road shoulder.
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

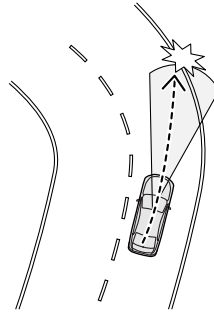

S03022

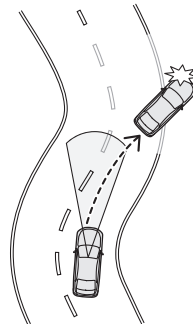


S02855

Continued on next page ⇒

⇒ Continued from previous page

- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- Snow, puddles or snow melting agents remain on the road surface.
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stirred up generated by the vehicle in front or oncoming traffic.
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Rain or dirt has not been fully wiped off of the windshield. There is a risk of that the stereo camera may not detect the lanes or the oncoming vehicle.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).



In the following situations, Lane Departure Warning may not activate:

- Vehicle speed is approximately 50 km/h (30 mph) or less.
- The steering wheel is turned significantly to either side.
- The road grade abruptly changes (uphill or downhill).
- On a sharp curve
- The brake pedal is depressed or immediately after it is depressed.
- The turn signal is operating.
- For approximately 3 seconds after the turn signal lever has returned to its original position
- The vehicle has not returned to the inside of the lane after Lane Departure Warning has activated.


**NOTE**

- The following situations may cause incorrect lane detection and a faulty Lane Departure Warning to occur.
 - There are tire tracks on a wet road or snow-covered road.
 - There are boundaries between snow and asphalt, or marks from road repair, etc.
 - There are the shadows of guardrails.
 - Lane markings are drawn in double.
 - There are some lane markings left from roadwork or markings from the previous road.
 - Lane Departure Warning determines when to activate the warning from various factors, such as how fast the vehicle is approaching the lane markings. Therefore, the position at which the warning is activated may vary.
 - When the Lane Departure Warning OFF indicator light is illuminated, Lane Departure Warning is inactive.
- ⇒ Page 157

Turning off Lane Departure Warning

Press and hold the Lane Departure Warning OFF switch for approximately 2 seconds or longer to turn off Lane Departure Warning. When 1 short beep sound emits, this function is turned off and the Lane Departure Warning OFF indicator light on the instrument panel will illuminate.

To turn the function back on, press and hold the Lane Departure Warning OFF switch again for approximately 2 seconds or longer. When the function is turned on, the Lane Departure Warning OFF indicator light turns off.

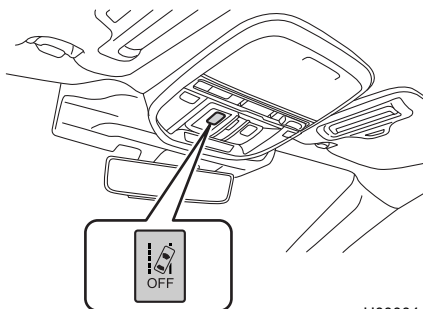

H00004



NOTE


- When Lane Departure Warning is turned off, Lane Sway Warning is also turned off.
- The on/off status of Lane Departure Warning is restored when you restart the e-BOXER system.

■ Lane Departure Warning OFF indicator light

This indicator light illuminates when the ignition switch is turned to the ON position, and then approximately 10 seconds after the e-BOXER system starts, it turns off or remains illuminated depending on the current status (ON or OFF). It turns on when Lane Departure Warning and Lane Sway Warning are turned off.

It also illuminates under the following conditions.

- The EyeSight system has a malfunction.
⇒ Page 184
- The EyeSight system has stopped temporarily.
⇒ Page 186

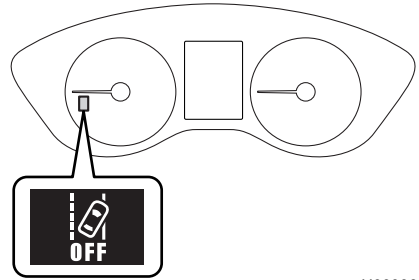


H00006

Lane Sway Warning

This function detects swaying or drifting within a lane, and warns the driver. When Lane Sway Warning activates, an alert sounds 3 short beeps and an interruption screen will be displayed.

This function activates when the vehicle speed exceeds approximately 60 km/h (37 mph) and deactivates when the vehicle speed falls below approximately 40 km/h (25 mph). The function will reactivate when the vehicle speed is increased to exceed approximately 60 km/h (37 mph).

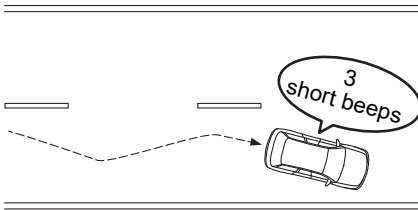

S03879



S03131


*: The lines on the right and left blink alternately.



WARNING


- Lane Sway Warning will not operate in all conditions. It also will not automatically correct swaying. If the driver relies only on Lane Sway Warning to prevent the vehicle from swaying, an accident may occur.
- The stereo camera may have difficulty detecting the lane markings under the following conditions and the system may not operate properly.
 - At night or in a tunnel without the headlights on
 - In bad weather (for example, rain, snow or thick fog)
 - The road surface is wet and shining by reflected sunlight.
 - There are other traffic markings on the lane you are driving in (arrows, words, etc.).
 - The distance between your vehicle and the vehicle in front is short, making it difficult to detect lane markings.
 - A vehicle intruded from an adjacent lane or the vehicle in front changed lanes.

- The shape of a curve in the road suddenly changes.
- Shadows of guardrails or similar objects are overlapped on the lane markings.
- Strong light is coming from the front (sunlight or headlight beams of oncoming traffic, etc.).
- The width of a lane is either too narrow or too wide.
- The width of a lane has changed.

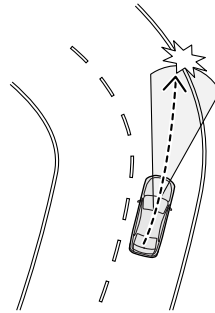

S03022

- The stereo camera may have difficulty detecting the lane due to the performance of the camera.
 - There are no lane markings or they are very worn.
 - The lane markings are painted in yellow.
 - The lane markings are similar in color to the road surface.
 - The lane markings are drawn in double.
 - The width of lane markings is narrow.
 - Lines that are not lane markings are painted on roads.
 - The lane markings are touching the walls and poles.
- The shape of lane markings suddenly changes (entrance/exit of a curve, crank and winding road, etc.).
- There is a curb or a side wall on the road shoulder.
- The brightness changes such as at a tunnel entrance or exit or when you drive under an overpass.
- Fluid has not been fully wiped off the windshield during or after washer use.

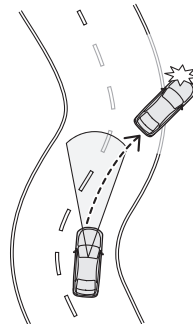

S02855

Continued on next page ⇒

⇒ Continued from previous page

- The vehicle is tilted at an extreme angle due to loaded cargo or other factors.
- Snow, puddles or snow melting agents remain on the road surface.
- Visibility is poor due to sand, smoke or water vapor blowing in the wind, or the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic.
- The windshield has become fogged, scratched or smeared, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected. These will reduce the stereo camera's field of view. Also, light is reflecting off the dirt, etc.
- Rain or dirt has not been fully wiped off of the windshield. There is a risk of that the stereo camera may not detect the lanes or the oncoming vehicle.
- The stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle).

 CAUTION

Under the following conditions, Lane Sway Warning may not operate.

- On a winding road
- The road grade abruptly changes (uphill or downhill).
- The vehicle speed changes greatly.
- Immediately after a lane change


 NOTE

- Swaying detection is based on several minutes of prior driving data. Swaying will not be detected immediately after the vehicle starts to sway. In addition, the warning may continue for some time even after swaying stops.
- Lane Sway Warning is just a function that warns the driver. When the driver is tired, not concentrating on the road or not paying adequate attention to driving, be sure to take rest breaks as often as needed.
- Under the following conditions, Lane Sway Warning will not operate.
 - Lane Centering Function is operating.
⇒ Page 95
 - The Lane Departure Warning OFF indicator light is illuminated.
⇒ Page 157

Turning off Lane Sway Warning

Press and hold the Lane Departure Warning OFF switch for approximately 2 seconds or longer to turn off Lane Sway Warning. When 1 short beep sound emits, this function is turned off and the Lane Departure Warning OFF indicator light on the instrument panel illuminates.

To turn the function back on, press and hold the Lane Departure Warning OFF switch again for approximately 2 seconds or longer. When the function is turned on, the Lane Departure Warning OFF indicator light turns off.

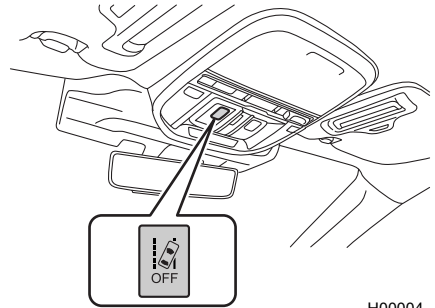

H00004



NOTE


- When Lane Sway Warning is turned off, Lane Departure Warning is also turned off.
- The on/off status of Lane Sway Warning is restored when you restart the e-BOXER system.

■ Lane Departure Warning OFF indicator light

This indicator light illuminates when the ignition switch is turned to the ON position, and then approximately 10 seconds after the e-BOXER system starts, it turns off or remains illuminated depending on the current status (ON or OFF). It turns on when Lane Departure Warning and Lane Sway Warning are turned off.

It also illuminates under the following conditions.

- The EyeSight system has a malfunction.
⇒ Page 184
- The EyeSight system has stopped temporarily.
⇒ Page 186

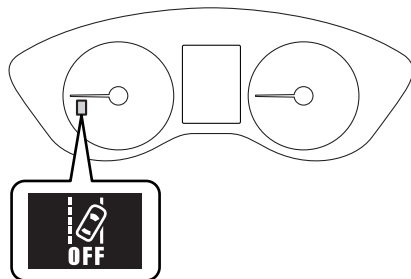


H00006

Lead Vehicle Start Alert

When the vehicle stopped in front starts to move, Lead Vehicle Start Alert notifies the driver by indicator on the combination meter display and notification. When the vehicle in front remains stopped continuously (within a following distance of approximately 12 m (39 ft) and the driver's vehicle remains stopped for several seconds or longer), the system continues to detect the vehicle in front and this alarm activates if the vehicle in front advances approximately 4 m (13 ft) or more while the driver's vehicle remains stationary.

This function only activates when the select lever is in the "D", "M" or "N" position.

When Lead Vehicle Start Alert activates, a notification sounds a two-tone beep and an interruption screen will be displayed.

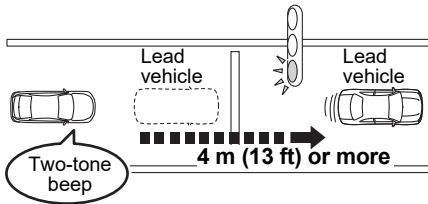

S03880



S03038



WARNING

Even after alerts are given audibly and through the display of an indicator, be sure to carefully check the area surrounding the vehicle before pulling away. Relying solely on Lead Vehicle Start Alert may result in an accident.



NOTE

- The Lead Vehicle Start Alert setting can be turned on or off.
⇒ Page 189
- Under the following conditions, Lead Vehicle Start Alert may activate even when the vehicle in front has not started to move, or may not activate even after the vehicle in front has started to move:
 - A motorcycle or similar object cuts in between your vehicle and the stopped vehicle in front.
 - Weather or road conditions may interfere with the detection of the vehicle in front.
 - The EyeSight stereo camera loses detection of the vehicle in front.
- Under the following conditions, Lead Vehicle Start Alert will not activate.
 - The EyeSight system has a malfunction.
⇒ Page 184
 - The EyeSight system has stopped temporarily.
⇒ Page 186

EyeSight Assist Monitor (if equipped)


The operating status of the EyeSight system is projected on the lower part of the windshield. This allows the driver to remain aware of warnings and displayed information without taking their eyes off the surrounding driving environment.

The LED indicators can be set to ON/OFF. Refer to “Customizing functions” for setting details.

⇒ Page 189

For only the green indicator, the brightness can be adjusted when the illumination brightness control dial is turned.


⇒ Refer to the Owner's Manual for your vehicle.

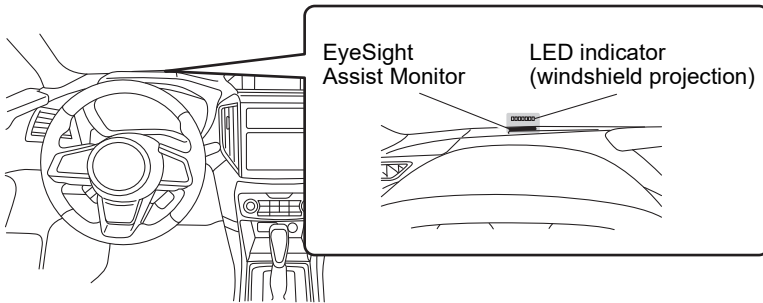

S03886

EyeSight Assist Monitor Operation

When the ignition switch is turned to the ON position, the LED indicators will illuminate in the order of Yellow → Red → Green. When EyeSight Assist Monitor customization is turned on, they will illuminate twice. To inform the driver of the operation condition of EyeSight while driving, the LED indicators are illuminated according to the operation condition of EyeSight and the light they emit is projected on the lower part of the windshield.



S03882

Display	Condition
Red indicators flash simultaneously (4 indicators)	• The Following Distance Warning, Pre-Collision Braking System (first braking or secondary braking), Autonomous Emergency Steering (if equipped), “Obstacle Detected” warning or Pre-Collision Throttle Management is operating. • Lane Centering Function was canceled when there was no operation of the steering wheel.
Red indicator flashes (one side)	• Lane Centering Function is active and the vehicle appears likely to depart the lane. The side where the vehicle has left its lane flashes, and the side that has not left its lane illuminates. • Emergency Lane Keep Assist (if equipped) activated. (The indicator flashes on the side where a nearby vehicle was detected. The indicator on the other side illuminates.)
Yellow indicator flashes (one side)	Lane Departure Warning is operating. The side where the vehicle has left its lane flashes, and the side that has not left its lane illuminates.
Yellow indicators flash (alternately)	Lane Sway Warning is operating.
Yellow indicators flash simultaneously	• Steering wheel operation is not detected for a certain period of time. • Lane Centering Function was canceled automatically by the system (flashing rapidly). • Lane Departure Prevention Function was canceled automatically by the system (flashing rapidly).
Green indicator illuminates	A vehicle is detected ahead while Adaptive Cruise Control is operating.

Conventional Cruise Control

Conventional Cruise Control is a driving support system intended to allow more comfortable driving on expressways, freeways and motorways. It can be used to travel at a constant speed by maintaining the vehicle speed set by the driver. Please remember that you should not exceed posted speed limits.



WARNING

- When Conventional Cruise Control is functioning, the system does not perform the following control to maintain a following distance, as when using Adaptive Cruise Control.
Strive for safe driving and depress the brake pedal to decelerate the vehicle as necessary in order to ensure a safe following distance from the vehicle in front.
- Under the following conditions, do not use Conventional Cruise Control. Doing so may result in an accident.
 - Roads with heavy traffic or roads with sharp curves
Maintaining an appropriate speed for such road conditions may be difficult.
 - Frozen roads, snow-covered roads or slippery road surfaces
The tires may spin, causing your vehicle to lose control.
 - Steep downhill grades
The set vehicle speed may be exceeded.
 - On a steep continuous downhill grade
The brakes may overheat.
- When using Conventional Cruise Control, always set the speed according to the speed limit, traffic flow, road conditions, and other conditions.

 CAUTION

When using Cruise Control, be sure to check the EyeSight display area to confirm which Cruise Control mode is selected: Adaptive Cruise Control or Conventional Cruise Control.

- If Adaptive Cruise Control is selected,  (Adaptive Cruise Control indicator) illuminates.
- If Conventional Cruise Control is selected,  (Conventional Cruise Control indicator) illuminates.

 NOTE

- When the main cruise control is off and the  (CRUISE) switch is pressed, Adaptive Cruise Control is activated.
 - When the main cruise control is on, switching between Adaptive Cruise Control and Conventional Cruise Control is possible by pressing the  /  (Following distance setting) switch*.
- *: To switch to Conventional Cruise Control, press and hold the switch for approximately 2 seconds or longer.
- Conventional Cruise Control can be used even when EyeSight is temporarily stopped.


How to use Conventional Cruise Control

■ Setting Conventional Cruise Control

(1) Setting Adaptive Cruise Control to standby status

Press the  (CRUISE) switch. At this time,  (Adaptive Cruise Control indicator) (white) and the following distance setting indicator are displayed on the EyeSight display area of the combination meter display. The set vehicle speed display will read “- - - km/h (- - MPH)”.


When the  (CRUISE) switch is pressed, the initial cruise control mode is always Adaptive Cruise Control.

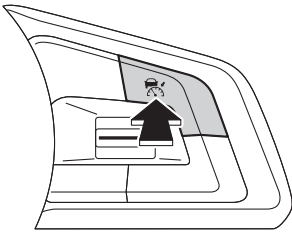

S03393

Following distance setting indicator

Adaptive Cruise Control indicator (white)

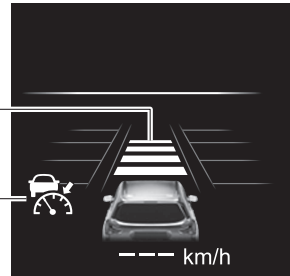


S03729

(2) Switch to Conventional Cruise Control.


Press and hold the  /  (Following distance setting) switch for approximately 2 seconds or longer to switch from Adaptive Cruise Control to Conventional Cruise Control. A notification sounds 1 short beep.

At this time, the following distance setting indicator on the EyeSight display area of the combination meter display turns off and  (Conventional Cruise Control indicator) (white) is displayed.

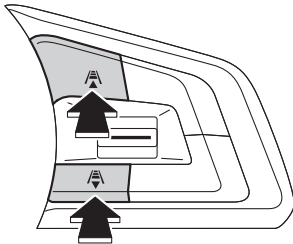

S03397

Conventional Cruise Control indicator (white)

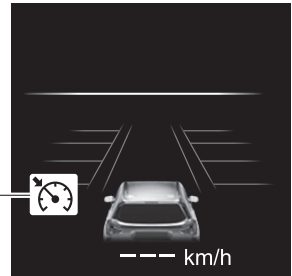

S03731

To set the ready status:

Conventional Cruise Control can be activated when all of the following conditions are met and **READY** (READY indicator) is displayed on the EyeSight display area.

- All doors (except the rear gate) are closed.
- The driver's seatbelt is fastened.
- The electronic parking brake is not engaged. The electronic parking brake indicator light is turned off.
- The select lever is in the "D" or "M" position.
- The brake pedal is not depressed.
- The road is not on a steep slope.
- The steering wheel has not been turned significantly in either direction.
- The X-MODE is not turned on (the X-MODE indicator goes off).
- The vehicle speed is between approximately 30 km/h (20 mph) and 200 km/h (125 mph).
- The gasoline particulate filter warning light is not flashing. (if equipped)
- The engine is not running at a high rpm.
- Vehicle Dynamics Control or the Traction Control Function is not active.

READY
indicator




S03732



NOTE


For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Conventional Cruise Control may not be used.

- (3) Control the accelerator pedal to reach the desired speed.
- (4) When the vehicle reaches the desired speed, press the RES/SET switch to the “RES/+” side or the “SET/-” side.
The vehicle speed at the time when the switch is pressed will become the set vehicle speed, and constant speed driving will initiate.

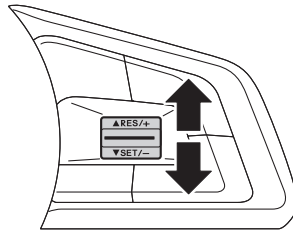

S03394

When Conventional Cruise Control is activated, **READY** (READY indicator) turns off, the set vehicle speed is displayed and  (Conventional Cruise Control indicator) changes from white to green.

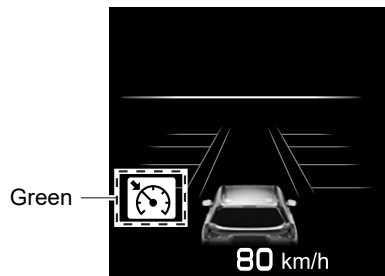

S03056



WARNING

- The “Obstacle Detected” warning will not activate while Conventional Cruise Control is functioning.
- When using Conventional Cruise Control, always set the speed according to the speed limit, traffic flow, road conditions, and other conditions.



CAUTION

During Conventional Cruise Control use, accelerator and brake control to follow the vehicle in front is not performed. Operate the accelerator and brake pedals as necessary.

**NOTE**


- On a downhill grade, automatic braking may operate in order to maintain the set vehicle speed.
- When driving on a curve, the vehicle may not accelerate, or may decelerate, even if the set vehicle speed is higher than the current vehicle speed.
- To return to Adaptive Cruise Control use, cancel Conventional Cruise Control and then briefly press the  /  (Following distance setting) switch. A notification will sound (1 short beep) when switching to Adaptive Cruise Control.

■ Increasing the set vehicle speed

● Using the RES/SET switch

- Push to the “RES/+” side briefly.
Every time the switch is pushed, the set vehicle speed will increase to the next 5 km/h (5 mph) increment.
- Push to the “RES/+” side continuously.
While the switch is being pushed, the set vehicle speed will increase in increments of 1 km/h (1 mph).


When operating the switch, the set vehicle speed changes on the combination meter display.

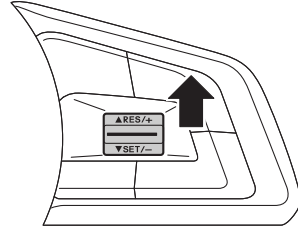

S03395

● Using the accelerator pedal

1. Depress the accelerator pedal to increase vehicle speed.
2. When the desired speed is reached, press the RES/SET switch to the “SET/-” side.
The speed at the time of pressing the switch will be set as the new set vehicle speed, and it appears on the EyeSight display area.

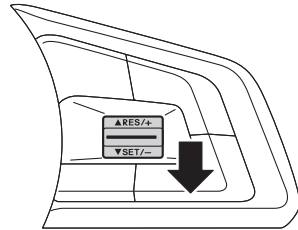


S03396

■ Decreasing the set vehicle speed

● Using the RES/SET switch

- Push to the “SET/-” side briefly.
Every time the switch is pushed, the set vehicle speed will decrease to the next 5 km/h (5 mph) decrement.
- Push to the “SET/-” side continuously.
While the switch is being pushed, the set vehicle speed will decrease in decrements of 1 km/h (1 mph).

When operating the switch, the set vehicle speed changes on the combination meter display.

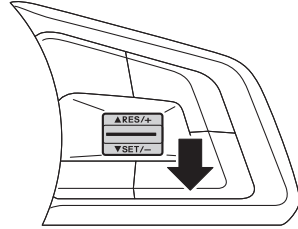

S03396

● Using the brake pedal

1. Depress the brake pedal to decrease the vehicle speed.
Conventional Cruise Control will be canceled and  (Conventional Cruise Control indicator) changes from green to white.
2. When the desired speed is reached, press the RES/SET switch to the “SET/-” side.
The speed at the time of pressing the switch will be set as the new set vehicle speed, and it appears on the EyeSight display area.

■ Accelerating temporarily

Depress the accelerator pedal to accelerate temporarily.


When the accelerator pedal is released, the vehicle returns to the set vehicle speed.

■ Decelerating temporarily

Depress the brake pedal to decelerate temporarily. When the brake pedal is depressed, Conventional Cruise Control will be canceled.

While the set vehicle speed remains displayed on the EyeSight display area,  (Conventional Cruise Control indicator) changes from green to white.

Release the brake pedal and press the RES/SET switch to the “RES/+” side to reset the set vehicle speed.

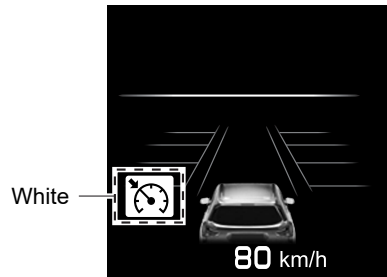

S03056

■ Canceling Conventional Cruise Control


● Canceling by driver operation

Any of the following operations will cancel Conventional Cruise Control.

- Depress the brake pedal.

 (Conventional Cruise Control indicator) changes from green to white while the set vehicle speed remains displayed on the EyeSight display area.


White

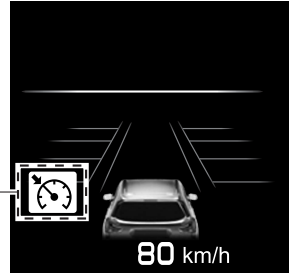

S03056

- Press the  (CRUISE) switch.

 (Conventional Cruise Control indicator) changes from green to white while the set vehicle speed remains displayed on the EyeSight display area.

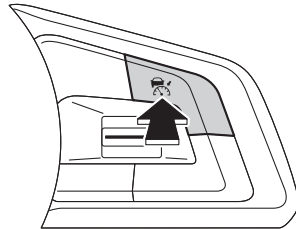


S03393

● Automatic cancellation by the system

In the following cases, a notification sounds 1 short beep and 1 long beep and the cruise control function is automatically canceled.  (Conventional Cruise Control indicator) changes from green to white. Also, the Conventional Cruise Control cancellation message is displayed on the screen. After the conditions listed below have been resolved, perform the cruise control set operation again to reactivate cruise control.

- The select lever is moved to a position other than “D” or “M”.
 - Conventional Cruise Control can be resumed after the select lever is returned to the “D” or “M” position.
- Vehicle speed drops to approximately 25 km/h (16 mph) or less (due to a steep uphill grade or some other reason).
- The X-MODE is turned on (the X-MODE indicator illuminates).
 - Conventional Cruise Control can be resumed after the X-MODE is turned off.
- Vehicle speed increases to approximately 220 km/h (135 mph) or more.
- The Vehicle Dynamics Control or the Traction Control Function is activated.
- Any door (except the rear gate) is opened.
- The driver's seatbelt is unfastened.
- The electronic parking brake is engaged.
- The EyeSight system has a malfunction.  (EyeSight warning indicator: Yellow)
⇒ Page 184
- The steering wheel is turned significantly in either direction.
- The grade of the road is steep.
- The Pre-Collision secondary braking is activated.
- The gasoline particulate filter warning light is flashing. (if equipped)
- The accelerator pedal was depressed continuously for a long time.
- The engine speed increased to a high rpm.

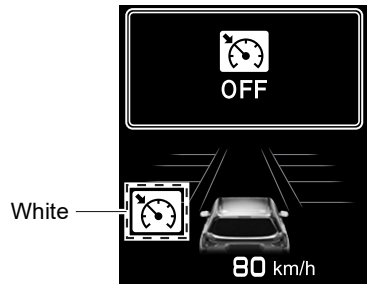

S03057



WARNING

Do not use Conventional Cruise Control on slippery roads. Doing so may result in an accident.

**CAUTION**

When shifting the select lever to the "N" position, Conventional Cruise Control will be automatically canceled. Do not shift the lever to the "N" position unless in an emergency. Otherwise the engine brake may not operate, which could cause an accident.


**NOTE**

- If EyeSight is malfunctioning,  (EyeSight warning indicator: Yellow) is displayed on the combination meter display. If this occurs, stop the vehicle in a safe location and then turn off the e-BOXER system and restart it. If the indicators remain illuminated after restarting the e-BOXER system, Conventional Cruise Control cannot be used. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
⇒ Page 184
- When operation of Conventional Cruise Control has been automatically canceled, perform the set operation again after the condition that caused the cancellation has been resolved. If cruise control cannot be activated even after the condition has been corrected, EyeSight may be malfunctioning. This will not interfere with ordinary driving. However, contact a SUBARU dealer and have the system inspected.
- For models with the gasoline particulate filter, when the low fuel warning light is illuminated, Conventional Cruise Control may not be used.


■ Restoring the previously set vehicle speed

The previously set vehicle speed is stored in memory. To restore that vehicle speed, press the RES/SET switch to the “RES/+” side.  (Conventional Cruise Control indicator) changes from white to green.

You can restore the set vehicle speed when the previously set vehicle speed has been stored and the current vehicle speed is approximately 30 km/h (20 mph) or more.

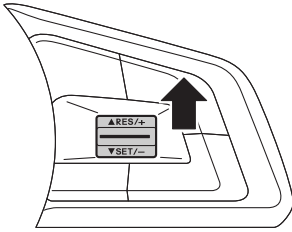

S03395

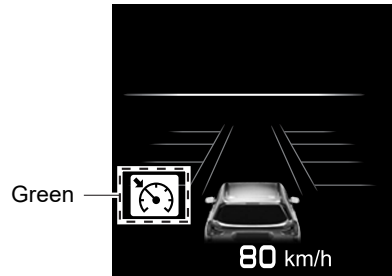

S03056



NOTE


- The vehicle speed stored in memory is erased in the following circumstances:
 - The cruise control is turned off by pressing the  (CRUISE) switch.
 - The LIM (Manual Speed Limiter) switch is pressed to change from Conventional Cruise Control to Manual Speed Limiter (if equipped).
 - The cruise control mode was switched from Conventional Cruise Control to Adaptive Cruise Control.
 - The vehicle drives constantly and correspondingly to the set vehicle speed between 30 km/h (20 mph) and 200 km/h (125 mph).
 - If there is no vehicle speed stored in the memory (previous vehicle speed), the current vehicle speed is set when the RES/SET switch is pressed to the “RES/+” side.
- ⇒ Page 172

■ Turning off Conventional Cruise Control

Any of the following operations will turn off Conventional Cruise Control.

- When Conventional Cruise Control is not active, press the  (CRUISE) switch.

 (Conventional Cruise Control indicator) turns off on the EyeSight display area.

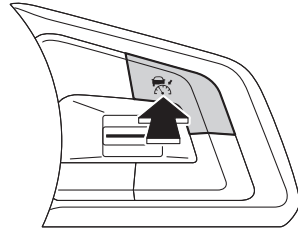


S03393

- Press the LIM (Manual Speed Limiter) switch (if equipped).


Conventional Cruise Control is turned off and Manual Speed Limiter turns on.

 (Conventional Cruise Control indicator) turns off on the EyeSight display area and  (Speed Limiter indicator) illuminates white.

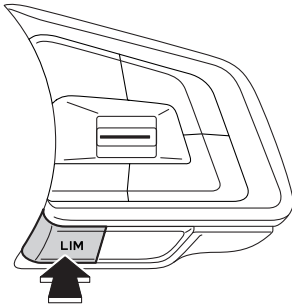

S03490

Speed
Limiter
indicator
(white)

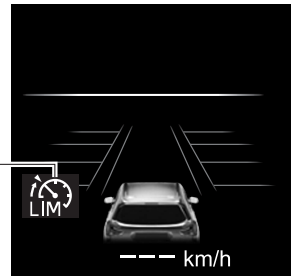

S03626

List of alert/notification sounds

Alert/notification sound	Status	Reference page
Single continuous beep	Pre-Collision Braking System: Secondary Braking is active.	⇒ Page 47
	Autonomous Emergency Steering is active.	⇒ Page 52
1 short beep and 1 long beep	Adaptive Cruise Control or Conventional Cruise Control is canceled automatically.	⇒ Pages 88 and 177
	Manual Speed Limiter is canceled automatically.	⇒ Page 116
	The stay-stopped function is canceled and the electronic parking brake is automatically applied.	⇒ Page 88
	Lane Centering Function or Lane Departure Prevention Function is canceled automatically.	⇒ Pages 107 and 130
1 short beep and 1 long beep (repeated)	Lane Centering Function is automatically canceled because no steering wheel operations are detected for a long period of time.	⇒ Page 108
Repeated 2 short beeps	Lane Departure Prevention Function has operated for a long period of time or Lane Departure Prevention Function has operated multiple times when there is no operation of the steering wheel.	⇒ Page 126
Repeated short beeps	Pre-Collision Braking System: First Braking is active.	⇒ Page 47
	Pre-Collision Braking System: The following distance warning is active.	
	The "Obstacle Detected" warning from Adaptive Cruise Control is active.	⇒ Page 93
	Pre-Collision Throttle Management is active.	⇒ Page 145
2 short beeps	The system does not detect steering operation by the driver for a certain period of time when Lane Centering Function is operating.	⇒ Page 108
3 short beeps	Lane Centering Function is active and the vehicle appears likely to depart the lane.	⇒ Page 109
	Lane Departure Warning is active.	⇒ Page 152
	Lane Sway Warning is active.	⇒ Page 158

Alert/notification sound	Status	Reference page
Repeated 3 short beeps	Emergency Lane Keep Assist is active.	⇒ Page 132
5 intermittent beeps, 1 short beep and 1 long beep	The stay-stopped function of Adaptive Cruise Control continues for 2 minutes and the electronic parking brake is automatically applied.	⇒ Page 87
1 short beep	Either of the following occurs while Adaptive Cruise Control is activated. - A vehicle in front is detected*. - A vehicle in front is no longer detected*.	⇒ Page 77
	The cruise control mode (Adaptive Cruise Control ↔ Conventional Cruise Control) is changed.	⇒ Pages 170 and 173
	EyeSight is malfunctioning.	⇒ Page 184
	EyeSight operation is temporarily stopped.	⇒ Page 186
	Pre-Collision Braking System and Pre-Collision Throttle Management are turned on/off.	⇒ Pages 64 and 150
	Lane Departure Warning and Lane Sway Warning are turned on/off.	⇒ Pages 156 and 161
Two-tone beep	Lead Vehicle Start Alert is active*.	⇒ Page 163

*: The notification that indicates when a lead vehicle is detected or when it is no longer detected (Lead Vehicle Acquisition Sound), as well as Lead Vehicle Start Alert can be turned on or off.


⇒ Page 189

EyeSight malfunction and temporary stop

If a malfunction is detected in the EyeSight system, the indicators in the instrument panel and the combination meter display inform the driver of the malfunction. Check the displayed contents and take the appropriate action.

■ Malfunction (including position/angle misalignment of stereo camera)

The alert sounds 1 short beep and  (EyeSight warning indicator: Yellow) flashes or illuminates. A message will also be displayed on the combination meter display.

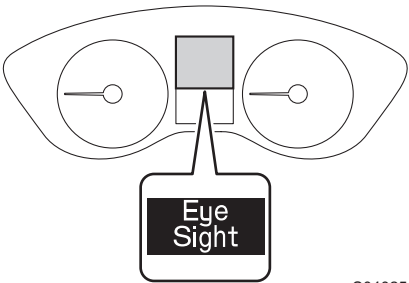

S04025

Displayed screen	Cause	Action
EyeSight Off Check Manual S03005	An EyeSight malfunction or position/angle misalignment of the stereo camera has occurred.	Inspection and adjustment is necessary. Contact your SUBARU dealer.



CAUTION

If both  (EyeSight warning indicator: Yellow) and the CHECK ENGINE warning light/malfunction indicator light/e-BOXER system fail lamp illuminate at the same time while driving, have your vehicle checked/repared by a SUBARU dealer as soon as possible. EyeSight cannot be used if there is an abnormality with the e-BOXER system, etc.

**NOTE**


- If  (EyeSight warning indicator: Yellow) is illuminating or flashing, stop the vehicle in a safe location, turn off the e-BOXER system and then restart it.
- If the indicator continues illuminating or flashing even after the e-BOXER system has been restarted, the EyeSight system has a malfunction. In this case, all EyeSight functions will be stopped. Normal driving will still be possible. However, contact a SUBARU dealer for an inspection.
- If  (EyeSight warning indicator: Yellow) illuminates or flashes, the Reverse Automatic Braking (RAB) system will not operate (models equipped with Reverse Automatic Braking (RAB)).
- If  (EyeSight warning indicator: Yellow) illuminates or flashes, the SRVD system may not operate (models equipped with SRVD).

■ Temporary stop

The alert will sound 1 short beep, and  (EyeSight temporary stop indicator: White) will illuminate.

A message will also be displayed on the combination meter display.

When the cause has been resolved, temporary stop will be canceled and the EyeSight system will automatically restart.

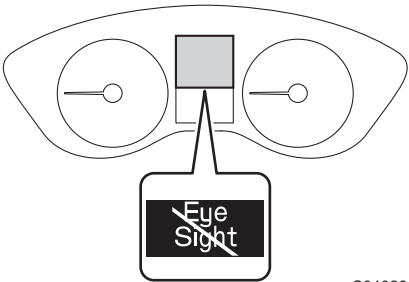

S04026

Displayed screen	Cause	Action
EyeSight Disabled No Camera View S02996	It is difficult for the stereo camera to detect objects in front. • The windshield is dirty or fogged up. • Poor weather conditions • Strong light from the front	• Clean the windshield. • In poor weather conditions or if there is strong light from the front, the EyeSight system will restart once you have driven your vehicle for a period of time and the conditions affecting the system have improved. If the system does not restart, even after the conditions have improved and a period of time has elapsed, contact your SUBARU dealer for an inspection. • If the inside of the windshield in front of the stereo camera is dirty, contact a SUBARU dealer to have the vehicle inspected.

Displayed screen	Cause	Action
EyeSight Disabled Temp Range S02997	In low or high temperatures	The system will restart once the temperature is within the operational range of the EyeSight system. If the system does not restart, even when the temperature inside the vehicle is within the operational range, contact your SUBARU dealer for an inspection.
EyeSight Disabled Check Manual S02998	• The EyeSight system is starting up. • The system has determined that the vehicle is extremely inclined. • The Pre-Collision secondary braking has operated 3 times after the e-BOXER system was started. • e-BOXER system READY indicator light turns off. • The electronic power steering system is in the overheating prevention status because the steering wheel has been operated while the vehicle is at a standstill or driving at an extremely slow speed.	The system will restart once the cause has been resolved. At this time, it may take some time for the system to restart. If the system does not restart, even after the conditions have improved and a period of time has elapsed, contact your SUBARU dealer for an inspection.



NOTE

- When  (EyeSight temporary stop indicator: White) is illuminated, no EyeSight functions can be used except for Manual Speed Limiter (if equipped) or Conventional Cruise Control.
- When  (EyeSight temporary stop indicator: White) is illuminated, the Reverse Automatic Braking (RAB) system may not operate (models equipped with Reverse Automatic Braking (RAB)).

Open Source Software information

EyeSight contains Open Source Software (OSS).

The license information and/or the source code of such OSS can be found at the following URL.

<https://oss.veoneer.com/subaru>

Customizing functions

The following settings can be changed on the combination meter display.

Item		Setting	Default setting
Warning Volume		Max/Mid/Min	Mid
EyeSight	Lead Vehicle Acquisition Sound	On/Off	On
	Lead Vehicle Moving Monitor Function	On/Off	On
	Cruise Control Acceleration Characteristics	Lv.4 (Dynamic)/ Lv.3 (Standard)/ Lv.2 (Comfort)/ Lv.1 (Eco)	Lv.3 (Standard)
	Lane Centering	On/Off	On
	EyeSight Assist Monitor ^{*1}	EyeSight Assist Monitor Red Indicator	On
		EyeSight Assist Monitor Yellow Indicator	On
		EyeSight Assist Monitor Green Indicator	On
	Select Drive on Left/Drive on Right	Drive on Left/ Drive on Right	Drive on Right ^{*2} / Drive on Left ^{*3}

*1: if equipped

*2: Left-hand drive vehicles

*3: Right-hand drive vehicles



NOTE

These settings can be restored to the factory (default) settings.

⇒ Refer to the Owner's Manual for your vehicle.

■ How to customize

Operations can be performed when the select lever is in the “P” position and the ignition switch is in the ON position while the vehicle is parked. However, the Cruise Control Acceleration Characteristics and warning volume can be changed, even while you are driving.

1. Pull the ▲ / ▼ switch toward you to display the change settings screen.



Pull and hold the **i** (Info)/SET switch to change to the settings screen.

2. Pull the ▲ / ▼ switch toward you, select “EyeSight” or “Warning Volume”, and pull the **i** (Info)/SET switch to confirm.

The system will then switch to the settings screen.

Operate the following switches according to the display on the screen.

- Select: ▲ (Return) switch / ▼ (Send) switch
- Confirm: **i** (Info)/SET switch

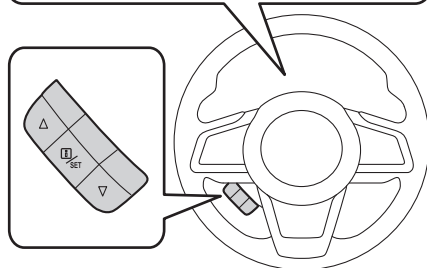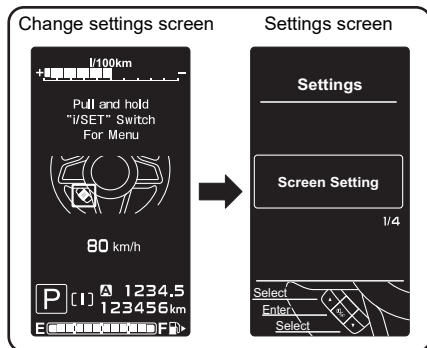

S03774



NOTE

When “Go Back” is selected, the system will return to the screen 1 level above the current one.

●Warning Volume

The volume can be set to Max/Mid/Min.

When on the Warning Volume settings screen, if the volume is selected with the ▲ / ▼ switch, 3 short beeps will sound.

●Lead Vehicle Acquisition Sound

The Lead Vehicle Acquisition Sound setting can be activated (On) or deactivated (Off).

●Lead Vehicle Moving Monitor Function

The Lead Vehicle Start Alert function setting can be activated (On) or deactivated (Off).

●Cruise Control Acceleration Characteristics

The Cruise Control Acceleration Characteristics of the Adaptive Cruise Control and Conventional Cruise Control system can be set to one of four levels.

Lv.4 (Dynamic): Mode used when powerful acceleration is required.

Lv.3 (Standard): Mode that focuses on quick response acceleration.

Lv.2 (Comfort): Mode that focuses on driving with smooth movement.

Lv.1 (Eco): Mode that focuses on driving with smooth movement and optimum fuel economy.

●Lane Centering

The Lane Centering Function setting can be activated (On) or deactivated (Off).



NOTE

When Lane Centering Function is turned off by the customizing functions, push the  (Lane Keep Assist) switch to activate Lane Departure Prevention Function. In this scenario, the Adaptive Cruise Control setting does not affect Lane Departure Prevention Function.

● EyeSight Assist Monitor (if equipped)

The on/off operation assigned to each EyeSight Assist Monitor LED indicator can be set for color.

Display	Condition
Red indicators flash simultaneously (4 indicators)	- The Following Distance Warning, Pre-Collision Braking System (first braking or secondary braking), Autonomous Emergency Steering (if equipped), "Obstacle Detected" warning or Pre-Collision Throttle Management is operating. - Lane Centering Function was canceled when there was no operation of the steering wheel.
Red indicator flashes (one side)	- Lane Centering Function is active and the vehicle appears likely to depart the lane. The side where the vehicle has left its lane flashes, and the side that has not left its lane illuminates. - Emergency Lane Keep Assist (if equipped) activated. (The indicator flashes on the side where a nearby vehicle was detected. The indicator on the other side illuminates.)
Yellow indicator flashes (one side)	Lane Departure Warning is operating. The side where the vehicle has left its lane flashes, and the side that has not left its lane illuminates.
Yellow indicators flash (alternately)	Lane Sway Warning is operating.
Yellow indicators flash simultaneously	- Steering wheel operation is not detected for a certain period of time. - Lane Centering Function was canceled automatically by the system (flashing rapidly). - Lane Departure Prevention Function was canceled automatically by the system (flashing rapidly).
Green indicator illuminates	A vehicle is detected ahead while Adaptive Cruise Control is operating.

● Select Drive on Left/Drive on Right (Driving Lane Customize)

It is possible to switch between driving on the left-hand side of the road and driving on the right-hand side.

The Adaptive Cruise Control (⇒ page 66) and Emergency Lane Keep Assist (if equipped) (⇒ page 132) functions are adapted to the set traffic lane direction.



WARNING

If the Driving Lane Customize setting does not match the flow of traffic, full EyeSight performance may not be available.


● Canceling the custom functions

In the following cases, the custom functions will be canceled and the change settings screen will be displayed.


- The **i** (Info)/SET switch is pulled and held.
- The e-BOXER system is turned off.
- The switch is not operated for approximately 30 seconds.

Message screen list



If an EyeSight warning or malfunction is detected, a message will be displayed on the combination meter display. Depending on the message, an alert/notification will sound at the same time.

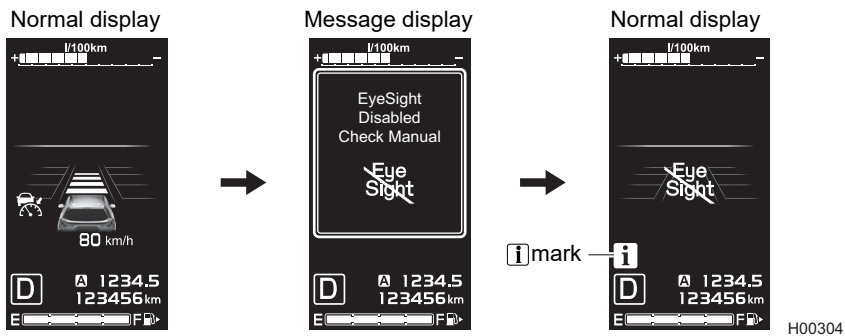




If a message is displayed, refer to the message list and take the appropriate action. While the **i** mark is illuminated, you can pull the **i** (Info)/SET switch to display the message again.

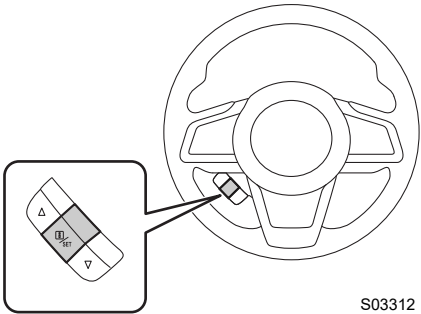

■ Message screen list (precautions and notices)

Item	Displayed screen	i mark	Reference page
Pre-Collision Braking System	 S02999	None	⇒ Page 47
Autonomous Emergency Steering		None	⇒ Page 52
The “Obstacle Detected” warning		None	⇒ Page 93
Pre-Collision Throttle Management		None	⇒ Page 145
Apply Brake	 S03000	None	⇒ Page 50
Lane Departure Warning	 S03002	None	⇒ Page 152
Lane Sway Warning	 S03003	None	⇒ Page 158
Lead Vehicle Start Alert	 S03004	None	⇒ Page 163
Steering operation is not detected by Lane Centering Function or Lane Departure Prevention Function	 S03863	None	⇒ Pages 108 and 131

Item	Displayed screen	i mark	Reference page
The steering wheel has not been operated for a long time when Lane Centering Function is on. (The steering wheel illuminates in red.)	 S03863	None	⇒ Pages 108, 109 and 131
Lane Centering Function is active and the vehicle is likely to depart the lane. (The steering wheel illuminates in red.)			
Lane Departure Prevention Function operated for a long period of time or operated multiple times when there was no operation of the steering wheel. (The steering wheel illuminates in red.)			
Lane Centering Function is automatically canceled because the steering wheel has not been operated for a long time. (The steering wheel illuminates in red.)	 S03864	None	⇒ Pages 108 and 109
Lane Centering Function is canceled because the vehicle is likely to depart the lane when Lane Centering Function is active. (The steering wheel illuminates in red.)			

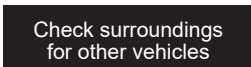Item	Displayed screen	i mark	Reference page
Adaptive Cruise Control/Conventional Cruise Control automatic cancellation (when the grade of the road is very steep)	 S03722	None	⇒ Pages 88 and 177
Pre-Collision Braking System operation	 S03532	None	⇒ Page 50
Emergency Lane Keep Assist	 S03324	None	⇒ Page 140
EyeSight system automatic cancellation	 203196	None	⇒ Page 89
	 S03391	None	⇒ Pages 107 and 130
	 S03334	None	⇒ Page 116
	 203198	None	⇒ Page 178

■ Message screen list (malfunction, temporary stop)

Item	Displayed screen	i mark	Reference page
EyeSight system malfunction	EyeSight Off Check Manual S03005	Yes (yellow)	⇒ Page 184
EyeSight system temporary stop	EyeSight Disabled No Camera View S02996	Yes (white)	⇒ Page 186
	EyeSight Disabled Temp Range S02997	Yes (white)	
	EyeSight Disabled Check Manual S02998	Yes (white)	

Troubleshooting

	Adaptive Cruise Control cannot be activated.
	Did you remember to press the  (CRUISE) switch? If you have not pressed the  (CRUISE) switch,  (Adaptive Cruise Control indicator) will not be shown.
	Is EyeSight operation temporarily stopped? When EyeSight is temporarily stopped,  (EyeSight temporary stop indicator: White) is displayed on the combination meter display. Set Adaptive Cruise Control again after the cause for the temporary stop has been corrected.
	Is READY (READY indicator) displayed? Adaptive Cruise Control cannot be activated when READY (READY indicator) is not displayed. Set Adaptive Cruise Control when READY (READY indicator) is displayed.
	Is the gasoline particulate filter warning light (if equipped) flashing? Adaptive Cruise Control cannot be activated when the gasoline particulate filter warning light is flashing. For conditions when the gasoline particulate filter warning light is flashing, refer to the Owner's Manual for your vehicle.
	Is the low fuel warning light illuminated? For models with the gasoline particulate filter, Adaptive Cruise Control may not be used when the low fuel warning light is illuminated. For conditions when the low fuel warning light is illuminated, refer to the Owner's Manual for your vehicle.

	Manual Speed Limiter cannot be activated.
	Is the gasoline particulate filter warning light (if equipped) flashing? Manual Speed Limiter cannot be activated when the gasoline particulate filter warning light is flashing. For conditions when the gasoline particulate filter warning light is flashing, refer to the Owner's Manual for your vehicle.
	Is the low fuel warning light illuminated? For models with the gasoline particulate filter, Manual Speed Limiter may not be used when the low fuel warning light is illuminated. For conditions when the low fuel warning light is illuminated, refer to the Owner's Manual for your vehicle.

	Conventional Cruise Control cannot be activated.
	Is the gasoline particulate filter warning light (if equipped) flashing? Conventional Cruise Control cannot be activated when the gasoline particulate filter warning light is flashing. For conditions when the gasoline particulate filter warning light is flashing, refer to the Owner's Manual for your vehicle.
	Is the low fuel warning light illuminated? For models with the gasoline particulate filter, Conventional Cruise Control may not be used when the low fuel warning light is illuminated. For conditions when the low fuel warning light is illuminated, refer to the Owner's Manual for your vehicle.
	READY (READY indicator) is not displayed.
	Are the requirements for setting cruise control met? For the conditions of READY (READY indicator) illumination, refer to the following pages. ⇒ Page 75 (Adaptive Cruise Control) ⇒ Page 169 (Conventional Cruise Control)

	A vehicle (in front of your vehicle) is not detected, detection is delayed or detection is lost quickly.
	Is the vehicle in front stopped, moving slowly relative to your vehicle or moving extremely slowly? Detection of stopped vehicles, vehicle moving slowly relative to your vehicle, and vehicles moving extremely slowly may be difficult.
	Is the windshield dirty or fogged? If the outside of the windshield in front of the stereo camera is dirty, clean the windshield. If the area around the camera lenses is dirty or if it is constantly fogged, contact a SUBARU dealer to have the vehicle inspected.
	Is the vehicle in front far away? The maximum detection distance of EyeSight's stereo camera is approximately 130 m (426 ft). Detection is not possible if the vehicle is farther away.
	Is the vehicle on a curve? The detection range is limited in the horizontal directions when the stereo camera is properly aimed.
	Is the vehicle on a road with repeated uphill and downhill grades (such as an overpass), or on a banked road? The detection range is limited in the vertical directions.
	Did the vehicle detected in front change? Detection may be delayed after the vehicle in front has changed.
	Have water, snow or other substances been kicked up by the vehicle in front as it drives? When water or snow have been kicked up, it may not be possible to detect the vehicle in front.

	Adaptive Cruise Control is activated even though there is no vehicle in front detected.
	Is there a vehicle in the neighboring lane? Depending on the road conditions, vehicles in neighboring lanes may be detected as well as a vehicle directly in front.
	Are you driving on or near a curve? When driving on a curve, braking control may be activated in response to guardrails, the angle of the steering wheel, or roadside structures.

	Lead Vehicle Start Alert activates, even though there is no vehicle in front.
	Depending on surrounding objects, traffic environment and weather, Lead Vehicle Start Alert may issue a warning in response to objects other than a vehicle that appears in front of your vehicle.
	EyeSight does not restart after a temporary stop.
	Are you driving in the rain with poorly performing wipers or is there a smear on the windshield? Replace the wipers with new ones, or clean the smear off the windshield.
	Are you driving in poor weather conditions with heavy rain, snow, fog, or dust? In these cases, EyeSight may temporarily stop operating while visibility is very poor.
	Is your vehicle subject to sunlight from the front (sunset or sunrise, etc.) or to bright headlights from oncoming vehicles at nighttime? In these cases, EyeSight may temporarily stop operating.
	Are you parking in an extremely hot or cold condition? In either of these cases, EyeSight may temporarily stop operating until the temperature increases or decreases to a temperature at which the camera is operable.
	Is the windshield dirty or fogged? If the outside of the windshield in front of the stereo camera is dirty, clean the windshield. If the area around the camera lenses is dirty or if it is constantly fogged, contact a SUBARU dealer to have the vehicle inspected.
	The timing of the “Obstacle Detected” warning is sometimes earlier or sometimes later than what seems to be normal operation.
	The “Obstacle Detected” warning sounds when the system determines that more braking is necessary, based on conditions such as the distance from the vehicle in front and the difference in speed compared to it. As a result, timing may vary depending on how the brakes are applied in relation to the vehicle in front, and your relative speed to that vehicle.
	When the vehicle in front has turned off the roadway or the distance from the vehicle in front has increased, acceleration is sometimes slower or faster.
	Depending on the timing of when the detection of the vehicle in front is lost, EyeSight’s ability to react may be slower, causing the start of acceleration to feel delayed and braking time to feel longer than what seems to be normal operation.
	What acceleration level did you select for cruise control*? Acceleration may vary because the cruise control characteristics vary depending on the selected mode. *: Adaptive Cruise Control and Conventional Cruise Control

	Cruise control is canceled automatically.
	Did you perform one of the following operations? ⇒ Page 88 (Adaptive Cruise Control) ⇒ Page 177 (Conventional Cruise Control)
	Has the EyeSight system temporarily stopped while the Adaptive Cruise Control function was in use?

	Lane Centering Function does not activate even though the  (Lane Keep Assist) switch is pressed.
	Is Adaptive Cruise Control activated? Lane Centering Function activates only when Adaptive Cruise Control is activated.
	Is Lane Centering Function turned on in the customizing functions? Lane Departure Prevention Function activates when Lane Centering Function is set to off in the customizing functions.

	Lane Centering Function and Lane Departure Prevention Function were unexpectedly canceled.
	Did you take your hands off the steering wheel? Did you just lightly put your hands on the steering wheel while driving? If the system does not detect the steering operation of the driver, it will temporarily cancel Lane Centering Function and Lane Departure Prevention Function.
	Did you turn a tight corner? Lane Centering Function and Lane Departure Prevention Function do not operate while turning a tight corner.
	Did you perform one of the following operations? ⇒ Page 107 (Lane Centering Function) ⇒ Page 130 (Lane Departure Prevention Function)

	Lane Centering Function and Lane Departure Prevention Function do not operate even though there are lane markers.
	Is the width of the road too narrow or too wide? To operate Lane Centering Function and Lane Departure Prevention Function, the width of the road should be between approximately 3 m (10 ft) and 4 m (13 ft).

	A lead vehicle is driving ahead of my vehicle and the lead vehicle indicator is illuminated, however Lane Centering Function does not activate.
	Is the width of the lead vehicle too narrow? Lane Centering Function does not activate when the lead vehicle is a motorcycle or another 2-wheeled vehicle, super-compact car, or other narrow vehicle.
	Is there a speed difference between the lead vehicle and your vehicle? Or is the lead vehicle not directly in front of your vehicle? Lane Centering Function may not activate in conditions such as when there is a speed difference between the lead vehicle and your vehicle (the lead vehicle is pulling away), or when the lead vehicle is meandering or driving at the edge of the lane.
	When Lane Centering Function is active, the interruption screen “Keep Hands On Steering Wheel” appears on the combination meter display in spite of gripping the steering wheel.
	The system may not be detecting any steering operation even though you are gripping the steering wheel. Operate the steering wheel until the interruption screen disappears. If the system continues to not detect any operation, Lane Centering Function may be canceled.
	If the vehicle is likely to depart the lane when Lane Centering Function is active, “Keep Hands On Steering Wheel” will be displayed. If Lane Centering Function is canceled in this state, “OFF” will be displayed. (⇒ page 109)
	A noise occurs when automatic braking control activates.
	This is the sound of the automatic braking control operating - there are some mechanical components to the system, and they do occasionally make audible sounds during automatic braking control. This does not indicate a malfunction.
	Braking control activates frequently when driving with Adaptive Cruise Control in heavy traffic.
	When Adaptive Cruise Control is activated, the EyeSight system performs control based on the movement of vehicles or objects in front. As a result, acceleration and deceleration may be more frequent while the system adjusts to vehicles or objects the camera system is detecting. If it is difficult to maintain a consistent following distance under certain conditions (such as in heavy traffic, poor weather or urban environments, etc.), do not use Adaptive Cruise Control.

	The electronic parking brake is applied automatically while the stay-stopped function is operating.
	The electronic parking brake will be applied in the following cases. • The stay-stopped function (⇒ page 84) is continuously applied for approximately 2 minutes. • Automatic cancel conditions (⇒ page 88) have been met.
	The engine does not restart after it has been automatically stopped while the stay-stopped function of Adaptive Cruise Control has been engaged.
	Shift the select lever to the “P” position and start the engine with the brake pedal depressed.

MEMO

MEMO

MEMO